

[Manuals.plus](#) /

› [Melchioni](#) /

› Melchioni Handy Style Travel Hair Dryer 118.030.005 User Manual

Melchioni Handy Style 118.030.005

Melchioni Handy Style Travel Hair Dryer 118.030.005 User Manual

Model: 118.030.005 | Brand: Melchioni

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Incorrect use can lead to hazards.

- **Water and Electricity:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water. Never immerse the appliance in water or any other liquid.
- **Unplug When Not in Use:** Always unplug the hair dryer immediately after use and before cleaning.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Power Cord:** Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- **Air Vents:** Keep the air inlet and outlet vents clear of lint, hair, and other debris. Blocked vents can cause overheating.
- **Automatic Safety Shut-off:** This appliance is equipped with an automatic safety shut-off function to prevent overheating. If the appliance shuts off during use, unplug it, allow it to cool down for a few minutes, and check that the air inlet and outlet are clear before restarting.
- **Voltage:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. This model operates at 220 Volts.

2. PRODUCT OVERVIEW

The Melchioni Handy Style Travel Hair Dryer is designed for convenient and efficient hair drying, especially suitable for travel due to its compact and foldable design.





Figure 1: Front view of the Melchioni Handy Style Travel Hair Dryer.

Key Features:

- Hot air flow for effective drying.
- Two temperature settings for versatile styling.
- Automatic safety shut-off to prevent overheating.
- Durable DC motor.
- Foldable handle for compact storage and portability.

Components:

1. Air Outlet Nozzle
2. Temperature/Speed Selector Switch
3. Foldable Handle
4. Air Inlet Grille
5. Power Cord



Figure 2: The hair dryer with its foldable handle extended and the concentrator nozzle attached.

3. SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Unfold Handle:** To prepare for use, gently unfold the handle until it clicks securely into place.



Figure 3: The hair dryer with its handle folded, demonstrating its compact travel design.

4. **Attach Nozzle (Optional):** If desired, attach the concentrator nozzle to the air outlet for directed airflow.
5. **Connect to Power:** Plug the power cord into a suitable 220V electrical outlet.

4. OPERATING INSTRUCTIONS

1. **Power On:** Ensure the hair dryer is plugged in and the handle is fully unfolded.
2. **Select Temperature/Speed:** Use the selector switch on the handle to choose your desired setting:
 - Position '0': Off
 - Position 'I': Low heat/speed
 - Position 'II': High heat/speed
3. **Drying Hair:** Direct the airflow towards your hair, maintaining a safe distance to prevent heat damage. Move the dryer continuously to ensure even drying.
4. **Power Off:** Once finished, set the selector switch to '0' (Off) and unplug the appliance from the power outlet.
5. **Fold for Storage:** To fold the handle, press the release button (if present) or gently push the handle inwards until it folds compactly.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your hair dryer.

1. **Unplug:** Always ensure the hair dryer is unplugged from the power outlet and completely cool before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Air Inlet Grille:** Periodically clean the air inlet grille to remove any accumulated dust, lint, or hair. You can use a soft brush or a vacuum cleaner with a brush attachment. A clogged air inlet can lead to overheating.

4. **Storage:** Store the hair dryer in a cool, dry place, preferably with the handle folded for compact storage. Do not wrap the power cord tightly around the appliance, as this can damage the cord.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in; power outlet malfunction; selector switch in '0' position.	Ensure plug is securely inserted. Test outlet with another device. Move selector switch to 'I' or 'II'.
Hair dryer stops working during use.	Automatic safety shut-off activated due to overheating.	Unplug the appliance and allow it to cool down for several minutes. Check and clean the air inlet and outlet grilles for obstructions. Restart after cooling.
Weak airflow or reduced heat.	Clogged air inlet grille.	Unplug the appliance and clean the air inlet grille as described in the Maintenance section.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Model: Handy Style 118.030.005
Brand: Melchioni
Power: 1200 Watts
Voltage: 220 Volts
Dimensions (L x W x H): 7 x 17 x 21.5 cm (unfolded)
Weight: 410 grams
Temperature Settings: 2
Speed Settings: 2
Features: Foldable handle, Automatic safety shut-off, DC motor
Color: Pink
Material: Vinyl (as per product specifications, typically plastic)
Power Source: Electric cable
Recommended Use: Travel
ASIN: B008FY9Z8G
International Article Code: 08006012237566

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer’s warranty. Please refer to the warranty card included in the original packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or inquiries regarding your Melchioni Handy Style Travel Hair Dryer, please contact Melchioni customer service through their official website or the contact information provided in your product documentation.

Do not attempt to repair the appliance yourself, as this may void the warranty and pose safety risks.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008FY9Z8G>

More documents and user manuals: <https://manuals.plus/>