

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Imusa](#) /

> [IMUSA GAU-00011 Electric Nonstick Rice Cooker \(3-Cup Uncooked / 6-Cup Cooked\) - Instruction Manual](#)

Imusa GAU-00011

IMUSA GAU-00011 Electric Nonstick Rice Cooker

Instruction Manual

Model: GAU-00011 | Brand: Imusa

INTRODUCTION

The IMUSA Rice & Multipurpose Cooker is designed to simplify the preparation of various dishes, including rice, vegetables, oatmeal, and more. This appliance features a nonstick coated inner pot for easy cleaning and a glass lid to monitor the cooking process. Its automatic functions ensure perfectly cooked results every time.



Image: IMUSA brand logo and culinary illustrations.

PRODUCT OVERVIEW

The IMUSA GAU-00011 Electric Nonstick Rice Cooker is a compact and efficient appliance. It cooks up to 3 cups of uncooked rice, yielding 6 cups of perfectly cooked rice, suitable for small to medium servings.

Key Features:

- **Capacity:** Cooks up to 3 cups of uncooked rice (6 cups cooked).
- **Nonstick Removable Pot:** Prevents food from sticking and ensures easy cleaning.
- **Tempered Glass Lid:** Allows monitoring of the cooking process and includes a steam vent.
- **Automatic Cook/Warm Switch:** Automatically switches to warm mode once cooking is complete.
- **Cool-Touch Handles:** Designed for safe handling during and after operation.
- **Durable Construction:** Crafted from resilient aluminum with a modern white exterior.



Image: The IMUSA GAU-00011 Electric Nonstick Rice Cooker.

Included Components:

- Rice Cooker Unit
- Glass Lid
- Nonstick Inner Pot
- Measuring Cup
- Spatula
- Instruction Manual



Image: All components included with the rice cooker.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the inner pot, glass lid, measuring cup, and spatula with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Assemble:** Place the clean, dry nonstick inner pot into the main rice cooker housing. Ensure it sits properly on the heating element.
4. **Position:** Place the rice cooker on a stable, flat, heat-resistant surface away from walls or cabinets to allow for proper steam release.

OPERATING INSTRUCTIONS

This rice cooker is designed for straightforward operation. Follow these steps for optimal results:

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of uncooked rice. The cooker can handle up to 3 cups of uncooked rice.

2. **Rinse Rice (Optional):** For best results, rinse the rice under cold water until the water runs clear.
3. **Add Rice to Pot:** Place the rinsed rice into the nonstick inner pot.
4. **Add Water:** Refer to the rice cooking chart (usually 2 cups of water per 1 cup of rice, but check specific rice type instructions) and add the appropriate amount of water to the inner pot.
5. **Close Lid:** Place the tempered glass lid securely on the rice cooker.
6. **Plug In:** Connect the power cord to a standard 120V AC outlet. The 'Warm' indicator light (orange) will illuminate.
7. **Start Cooking:** Press the 'Cook' switch down. The 'Cook' indicator light (red) will illuminate, indicating that cooking has begun.
8. **Automatic Warm Function:** Once the rice is cooked, the unit will automatically switch to 'Warm' mode, and the orange 'Warm' indicator light will turn on.
9. **Serve:** After the switch pops up, leave the lid closed for at least 15 minutes to further steam the rice. Then, remove the lid and fluff the rice with the spatula before serving.



Image: Rice cooking in the IMUSA rice cooker.

Official Product Video:

Your browser does not support the video tag.

Video: An overview of the IMUSA Electric Rice Cooker, demonstrating its features and ease of use.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your rice cooker.

1. **Unplug:** Always unplug the appliance from the wall outlet before cleaning. Allow it to cool completely.
2. **Inner Pot and Lid:** The nonstick inner pot and glass lid are removable and should be hand washed with warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the nonstick coating.
3. **Exterior:** Wipe the exterior of the rice cooker unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Storage:** Ensure all parts are completely dry before storing the appliance.

TROUBLESHOOTING

If you encounter any issues with your rice cooker, refer to the following common solutions:

- **Rice is too hard/undercooked:** Ensure the correct water-to-rice ratio was used. The lid should remain closed during cooking and for at least 15 minutes after switching to warm mode.
- **Rice is too soft/mushy:** Reduce the amount of water used for the next batch.
- **Rice sticks to the bottom:** Ensure the nonstick coating is intact. Avoid leaving the rice on 'Warm' for excessively long periods (over 30 minutes) to prevent browning.
- **Cooker does not turn on:** Check if the power cord is securely plugged into both the appliance and the wall outlet. Ensure the 'Cook' switch is pressed down.

SPECIFICATIONS

- **Brand:** Imusa
- **Model Name:** Electric Nonstick Rice Cooker 3-Cup (Uncooked) 6-Cup (Cooked)
- **Item Model Number:** GAU-00011
- **Capacity:** 3 Cups (Uncooked) / 6 Cups (Cooked)
- **Product Dimensions:** 7.9"D x 9.4"W x 7.5"H
- **Power Source:** Corded Electric
- **Wattage:** 300 watts
- **Voltage:** 120 Volts
- **Material:** Plastic (exterior), Aluminum (inner pot), Glass (lid)
- **Special Feature:** Automatic Cooking, Warm Function
- **Product Care Instructions:** Hand Wash (inner pot and lid)
- **Item Weight:** 2.6 Pounds
- **UPC:** 094046000155



Image: Product dimensions for the IMUSA GAU-00011 rice cooker.

WARRANTY

The IMUSA GAU-00011 Electric Nonstick Rice Cooker comes with a **1-Year Limited Warranty**. Please refer to the warranty card included in your packaging for full details and terms.

SUPPORT

For additional support, product information, or to explore other IMUSA products, please visit the official IMUSA website or contact customer service.

Official Brand Store: [Visit the Imusa Store](#)

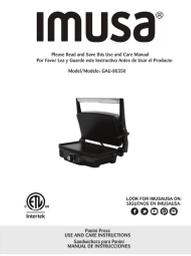
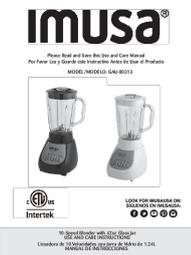
IMUSA is a trusted Hispanic and international Cookware brand, with over 90 years of expertise, offering a wide selection of products, including cookware, gadgets, and appliances. Combining tradition with innovation, IMUSA enhances your culinary experience

IMUSA®

Image: IMUSA brand banner.

© 2023 IMUSA USA. All rights reserved.

Related Documents - GAU-00011

 <p>IMUSA® Please Read and Save This Use and Care Manual For Your Use & Guide with Instruction Series in Your Household MODEL NUMBER: GAU-0011, GAU-0012, GAU-0013</p> <p>UL LOOK FOR THIS MARK ON CERTIFIED OR APPROVED ELECTRICAL EQUIPMENT</p> <p>USE AND CARE INSTRUCTIONS MANUAL DE INSTRUCCIONES</p>	<p>IMUSA Rice Cooker Use and Care Manual - GAU-00011, GAU-0012, GAU-0013</p> <p>Comprehensive use and care instructions for the IMUSA Rice Cooker models GAU-00011, GAU-0012, and GAU-00013. Includes safety precautions, operating instructions, cooking charts, cleaning, maintenance, and warranty information.</p>
 <p>IMUSA® Please Read and Save This Use and Care Manual For Your Use & Guide with Instruction Series in Your Household MODEL NUMBER: GAU-80350</p> <p>ETL LOOK FOR THIS MARK ON CERTIFIED OR APPROVED ELECTRICAL EQUIPMENT</p> <p>USE AND CARE INSTRUCTIONS MANUAL DE INSTRUCCIONES</p>	<p>IMUSA GAU-80350 Panini Press: Use and Care Manual</p> <p>Comprehensive use and care instructions for the IMUSA GAU-80350 Panini Press, including safety precautions, operating instructions, recipes, cleaning, maintenance, and warranty information.</p>
 <p>IMUSA® Please Read and Save This Use and Care Manual For Your Use & Guide with Instruction Series in Your Household MODEL NUMBER: GAU-80313</p> <p>ETL LOOK FOR THIS MARK ON CERTIFIED OR APPROVED ELECTRICAL EQUIPMENT</p> <p>USE AND CARE INSTRUCTIONS MANUAL DE INSTRUCCIONES</p>	<p>Imusa GAU-80313 10-Speed Blender with 42oz Glass Jar: Use and Care Manual</p> <p>This manual provides instructions for the safe use, care, and maintenance of the Imusa GAU-80313 10-Speed Blender with a 42oz glass jar. It includes important safety precautions, operating instructions, blending tips, cleaning guidelines, and warranty information.</p>
 <p>IMUSA®</p>	<p>IMUSA Lemon Squeezer: User Guide, Recipe, and Warranty Information</p> <p>Learn how to use, care for, and get the most out of your IMUSA Lemon Squeezer. Includes a simple lemonade recipe and detailed warranty information.</p>
 <p>IMUSA®</p>	<p>IMUSA Aluminum Mug User Guide, Care, and Warranty Information</p> <p>Comprehensive guide for the IMUSA Aluminum Mug, covering usage, cleaning, precautions, and warranty details. Learn how to best use and maintain your IMUSA cookware.</p>

