

## Sony RMT-B006J

# Sony RMT-B006J Blu-ray Disc Recorder Remote Control Instruction Manual

## INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your Sony RMT-B006J Genuine Blu-ray Disc Recorder Remote Control. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

## PRODUCT OVERVIEW

The Sony RMT-B006J is an infrared remote control designed specifically for select Sony Blu-ray Disc Recorders. It offers reliable and stable signal transmission for controlling your compatible device.

### Key Features:

- **Genuine Sony Product:** Ensures full compatibility and quality with specified Sony Blu-ray Disc Recorders.
- **Infrared Communication:** Provides stable and reliable control over your device.
- **Ergonomic Design:** Features a black finish and 25 buttons for intuitive operation.

### Compatible Models:

This remote control is compatible with the following Sony Blu-ray Disc Recorder models:

- BDZ-RX105
- BDZ-RX55
- BDZ-RX35
- BDZ-RS15

*Please verify your Blu-ray Disc Recorder model number to ensure compatibility.*



Image: Front view of the Sony RMT-B006J remote control, showing its black casing and button layout.

## SETUP

---

### Battery Installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals are aligned correctly according to the diagram inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

**Note:** Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

## OPERATING INSTRUCTIONS

---

The RMT-B006J remote control allows you to operate your compatible Sony Blu-ray Disc Recorder. Point the remote control directly at the infrared sensor on your Blu-ray Disc Recorder.

### Basic Functions:

- **Power Button:** Turns the Blu-ray Disc Recorder on or off.
- **Disc Open/Close:** Opens and closes the disc tray.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Control media playback.
- **Record Button:** Initiates recording (if supported by your recorder model).
- **Function Buttons:** Specific buttons for various functions like Home, Options, Return, Display, etc. Refer to your Blu-ray Disc Recorder's manual for detailed function button usage.

## MAINTENANCE

---

### Cleaning:

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these may damage the surface or internal components.

### Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops functioning. Follow the battery installation steps outlined in the "Setup" section. Dispose of used batteries according to local regulations.

### Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

Problem	Solution
Remote control does not respond.	<ul style="list-style-type: none"><li>◦ Check if the batteries are inserted correctly with the correct polarity (+/-).</li><li>◦ Replace the batteries with new AAA alkaline batteries.</li><li>◦ Ensure there are no obstructions between the remote control and the Blu-ray Disc Recorder's infrared sensor.</li><li>◦ Make sure you are within the effective operating range and pointing the remote directly at the recorder.</li></ul>
Some buttons do not work.	<ul style="list-style-type: none"><li>◦ Ensure the remote is compatible with your specific Blu-ray Disc Recorder model (BDZ-RX105, BDZ-RX55, BDZ-RX35, BDZ-RS15).</li><li>◦ Clean the remote control buttons and surface to remove any dirt or debris that might be interfering with button presses.</li><li>◦ If the issue persists after replacing batteries, the remote control may be faulty.</li></ul>

## SPECIFICATIONS

- **Brand:** Sony
- **Model Number:** RMT-B006J
- **Connectivity Technology:** Infrared (IR)
- **Number of Buttons:** 25
- **Power Source:** 2 x AAA Alkaline Batteries
- **Compatible Devices:** Sony Blu-ray Disc Recorders (BDZ-RX105, BDZ-RX55, BDZ-RX35, BDZ-RS15)

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your Sony Blu-ray Disc Recorder or visit the official Sony support website for your region. This remote control is a genuine replacement part and typically falls under the warranty terms of the original device or specific accessory warranty policies.

For further assistance, please contact Sony customer service.

