



Manuals.plus /

› **Playskool /**

› Playskool Sesame Street LOL Elmo Instruction Manual

Playskool A1500

Playskool Sesame Street LOL Elmo Instruction Manual

Model: A1500

Brand: Playskool

INTRODUCTION

The Playskool Sesame Street LOL Elmo is an interactive plush toy designed to bring laughter and fun to preschoolers. Elmo laughs, tells jokes, and interacts with a special Dorothy fishbowl squeaker toy. This manual provides instructions for setup, operation, and care of your LOL Elmo.



Image: LOL Elmo, a red furry plush toy, lying down with his mouth open in a laugh, next to a small white plush fishbowl with Dorothy the goldfish drawn on it.

SETUP

Battery Installation

LOL Elmo requires four (4) AA batteries for operation. Demo batteries are included, but it is recommended to replace them for optimal performance. Ensure the toy is switched from "Try Me" mode to "On" mode after battery installation for full functionality.

1. Locate the battery compartment on the back of Elmo.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert four (4) fresh AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.
5. Locate the switch near the battery compartment and slide it to the "On" position.



Image: The LOL Elmo toy inside its retail box, with images of children playing with it. The box highlights features like "Squeeze Dorothy's fishbowl!" and "Tickle Elmo's tummy!".

OPERATING INSTRUCTIONS

LOL Elmo offers multiple ways to interact and elicit his signature laughter and jokes.

Making Elmo Laugh

- **Tickle his Tummy:** Gently tickle Elmo's tummy to make him giggle. The more he is tickled, the more he will shake and roll with laughter.



Image: A small hand tickling the tummy of the red Elmo toy.

- **Press his Feet:** Press either of Elmo's feet to activate his laughter.



Image: A small hand pressing the foot of the red Elmo toy.

- **Squeeze Dorothy's Fishbowl Squeaker:** Hold the included Dorothy fishbowl squeaker toy approximately 6 inches from Elmo's tummy and give it a squeeze. This will make Elmo giggle.



Image: A child's hand holding the white plush fishbowl with Dorothy the goldfish, positioned near Elmo's open mouth, indicating interaction.

- **Make Silly Sounds:** Stand close to Elmo and make a silly sound. LOL Elmo is designed to react to sounds with laughter.

Hearing Elmo Tell Jokes

To hear Elmo tell a silly joke, press and hold either of his feet for 3 seconds. Each time his foot is pressed and held, he will tell a different joke.

Your browser does not support the video tag.

Video: An official product video demonstrating the LOL Elmo toy's interactive features, including laughing, rolling, and telling jokes, with children playing alongside.



Image: A young boy with blonde hair, dressed in a blue striped shirt, laughing while looking at the red Elmo toy, which is lying on its back as if laughing.

MAINTENANCE

Cleaning

To clean LOL Elmo, gently wipe the surface with a damp cloth. Do not immerse the toy in water, as this may damage the electronic components. Allow to air dry completely before further use.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the toy. Store Elmo in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Elmo is not responding or seems to have stopped working.

- **Check Battery Switch:** Ensure the battery compartment switch is set to the "On" position, not "Try Me" mode. "Try Me" mode has limited functionality and may appear as if the toy is not working correctly.
- **Replace Batteries:** The included demo batteries may be depleted. Replace all four (4) AA batteries with fresh alkaline batteries.
- **Reset:** If the toy is still unresponsive, try removing the batteries for a few minutes and then reinserting them.

SPECIFICATIONS

Product Dimensions	5.98 x 15 x 9.49 inches
Item Weight	1.61 pounds
Model Number	A1500
Recommended Age	18 months and up
Batteries Required	4 AA batteries (included for demo)
Manufacturer	Hasbro

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Playskool website. Keep your purchase receipt as proof of purchase for any warranty claims.