

SentrySafe 1210

SentrySafe Fireproof Safe with Key Lock

MODEL 1210 INSTRUCTION MANUAL

1. Product Overview

The SentrySafe Fireproof Safe with Key Lock, Model 1210, is designed to protect your irreplaceable documents and valuables from fire damage. This compact and robust chest offers reliable security for important items such as passports, birth certificates, cash, and digital media.

- **UL Classified Fire Protection:** Proven to endure 1/2 hour at 1550°F (843°C).
- **ETL Verified:** Provides 1/2 hour fire protection for CDs, DVDs, USB drives, and memory sticks.
- **Key Lock Security:** Features a flat key lock to prevent the lid from opening during a fire and to deter unauthorized access.
- **Portability:** Includes a convenient built-in carrying handle for easy transportation.
- **Bolt-Down Kit:** Comes with hardware for securing the safe to a floor, offering additional theft deterrence.



Figure 1: SentrySafe Model 1210 Fireproof Safe (closed)

This image shows the SentrySafe Model 1210 Fireproof Safe in its closed position, highlighting its compact design and key lock mechanism.

Your browser does not support the video tag.

Video 1: SentrySafe Fire Safe Product Overview

This video provides a general overview of the SentrySafe Fire Safe, demonstrating its features and various sizes available for protecting important belongings.

2. Setup

Before using your SentrySafe Fireproof Safe, please follow these initial setup instructions:

1. **Unpacking:** Carefully remove the safe from its packaging. Inspect for any damage.
2. **Keys:** Two keys are provided with your safe. Keep one key in a secure location away from the safe and the other in a readily accessible but safe place.
3. **Placement:** For optimal performance and fire protection, store the unit closed and locked, with the feet down. The front plate with the key should be facing out, not up.
4. **Bolt-Down Installation (Optional):** If you wish to secure your safe to the floor, use the included bolt-down hardware kit. Refer to the separate bolt-down instructions provided with the kit for detailed steps. This enhances physical security against theft.



Figure 2: SentrySafe Model 1210 Fireproof Safe (open)

This image displays the SentrySafe Model 1210 Fireproof Safe in an open state, showing the interior storage space and the lid's inner surface.

3. Operating Instructions

To operate your SentrySafe Fireproof Safe:

1. **To Unlock and Open:** Insert the key into the lock cylinder on the front of the safe. Turn the key clockwise to unlock. Lift the handle to open the lid.
2. **To Close and Lock:** Ensure the contents are properly placed inside and the lid is free of obstructions. Close the lid firmly until it clicks into place. Insert the key and turn counter-clockwise to lock. Remove the key.
3. **Carrying Handle:** The integrated carrying handle allows for easy portability. Ensure the safe is securely locked before transporting.



Figure 3: Key Lock Mechanism

A detailed view of the SentrySafe's key lock, showing the key inserted and ready for operation.

4. Maintenance

Proper maintenance ensures the longevity and effectiveness of your SentrySafe Fireproof Safe:

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.
- **Storage:** Store the safe in a dry environment to prevent moisture buildup.
- **Seal Integrity:** Periodically check the seal around the lid for any signs of wear or damage. A proper seal is crucial for fire and water resistance.
- **Key Care:** Do not force the key if it feels stiff. Ensure the lock mechanism is clean and free of debris.

5. Troubleshooting

If you encounter any issues with your SentrySafe Fireproof Safe, consider the following:

- **Lid Not Closing Properly:** Ensure no items are obstructing the lid or the sealing gasket. Rearrange contents if necessary.
- **Key Not Turning:** Check if the key is fully inserted and oriented correctly. Do not force the key. If the lock is stiff, gently try to wiggle the key while turning.
- **Lost Keys:** Contact SentrySafe customer support for key replacement. You will typically need your model and serial number.

6. Specifications

Feature	Detail
Brand	SentrySafe
Model Number	1210
Exterior Dimensions (W x D x H)	14.3 in. x 11.2 in. x 6.1 in. (36.3 cm x 28.4 cm x 15.5 cm)

Feature	Detail
Interior Dimensions (W x D x H)	12 in. x 7.5 in. x 3.5 in. (30.5 cm x 19.1 cm x 8.9 cm)
Capacity	0.18 cu. ft. (5.16 Liters)
Item Weight	13 lbs (5.9 kg)
Lock Type	Key Lock
Material	Plastic
Special Features	Durable, Fire Resistant, Bolt Down Kit Included
Mounting Type	Floor Mount (optional)
Water Resistance Level	Not Water Resistant
UPC	049074022778



Figure 4: Product Dimensions

This image illustrates the exterior dimensions of the SentrySafe Model 1210, including width, depth, and height.

7. Warranty and Support

Your SentrySafe Fireproof Safe, Model 1210, comes with a Limited One Year Warranty. For specific terms and conditions, please refer to the warranty documentation included with your product.

After-Fire Replacement Program: SentrySafe offers an After-Fire Replacement Program. Should your safe go through a fire, SentrySafe will send a replacement safe free of charge, ensuring your most important items are protected for generations to come. Contact SentrySafe customer support for details on this program.

For customer support, key replacement, or any inquiries, please refer to the contact information provided on the product or visit the official SentrySafe website.



Figure 5: After-Fire Replacement Program

This image highlights the SentrySafe After-Fire Replacement Program, emphasizing the commitment to replacing safes damaged by fire.