

[Manuals.plus](#) /

› [Bosch Home Appliances](#) /

› Bosch Whisk for Food Processor 00650543 Instruction Manual

Bosch Home Appliances 00650543

Bosch Whisk for Food Processor Model 00650543 Instruction Manual

Original Bosch Accessory for MUM 4 Series Food Processors

1. PRODUCT OVERVIEW

This document provides essential instructions for the proper use and maintenance of your Bosch original whisk, model 00650543. This whisk is designed as an accessory for various Bosch/Siemens food processors, specifically the MUM 4 series, to assist with stirring, beating, and mixing tasks.





Figure 1: The Bosch original whisk, featuring 10 durable wire filaments attached to a sturdy white plastic base, designed for optimal mixing performance.

2. COMPATIBILITY

The Bosch original whisk (part number 00650543) is compatible with a wide range of Bosch and Siemens food processors, particularly models within the MUM 4 series. Please verify your appliance model number against the list below to ensure compatibility.

Compatible Models (Partial List):

- 49831 MK
- 4400 MUM, 4405 MUM, 4408 MUM, 4419 MUM, 4420 MUM, 4421 MUM, 4422 MUM, 4426 MUM, 4430 MUM, 4450 MUM, 4485 MUM, 4486 MUM
- 4500 MUM, 4505 MUM, 4523 MUM, 4525 MUM, 4555 MUM, 4565 MUM, 4585 MUM
- 4600 MUM, 4612 MUM, 4635 MUM
- 4750 MUM, 4770 MUM

- MUM 4 Series: MUM4008/01, MUM4010/01, MUM4400/00, MUM4400/02, MUM4400/03, MUM4400/04, MUM4400/05, MUM4400/06, MUM4400CH/03, MUM4400CH/04, MUM4400CH/05, MUM4400EU/01, MUM4400EU/02, MUM4400EU/03, MUM4400EU/04, MUM4400EU/05, MUM4400RK/04, MUM4400RK/05, MUM4400UC, MUM4400US/01, MUM4405/01, MUM4405CH/01, MUM4405EU/01, MUM4405UC/01, MUM4408/01, MUM4408/02, MUM4408/03, MUM441070/00, MUM4419/01, MUM4420(01), MUM4420/00, MUM4420/02, MUM4420GB/01, MUM4420UC/01, MUM4421/01, MUM4421/02, MUM4421/03, MUM4422UC/01, MUM4423/01, MUM4425/01, MUM4426/01, MUM4430(01), MUM4430/00, MUM4430/02, MUM4430/03, MUM4440/01, MUM4440/02, MUM4440EU/01, MUM4440EU/02, MUM4450(01), MUM4450/00, MUM4450/02, MUM4450EU/01, MUM4450EU/02, MUM4450EU/03, MUM4485/05, MUM4486/01, MUM4500/01, MUM4500/02, MUM4500/03, MUM4500/04, MUM4500/05, MUM4500/06, MUM4500CH/02, MUM4500CH/03, MUM4500CH/04, MUM4500CH/05, MUM4500CH/06, MUM4500EU/01, MUM4500EU/02, MUM4500EU/03, MUM4500EU/04, MUM4500EU/05

3. SETUP

Before first use, ensure the whisk is clean. Refer to the "Maintenance" section for cleaning instructions.

1. **Power Off:** Always ensure your food processor is unplugged from the power outlet before attaching or detaching any accessories.
2. **Identify Attachment Point:** Locate the accessory attachment point on your Bosch/Siemens food processor. This is typically a drive shaft or hub designed for various mixing tools.
3. **Align and Insert:** Carefully align the whisk's shaft with the corresponding opening on the food processor. Gently push and twist the whisk until it securely locks into place. You may hear a click or feel it seat firmly.
4. **Verify Secure Attachment:** Lightly tug on the whisk to ensure it is firmly attached and will not come loose during operation.

Once the whisk is securely attached, you can proceed to the operating instructions.

4. OPERATING INSTRUCTIONS

The Bosch whisk is designed for a variety of culinary tasks. Always refer to your food processor's main instruction manual for specific speed settings and safety guidelines.

- **Stirring:** Use lower speeds for gently combining ingredients, such as batters for pancakes or light sauces.
- **Beating:** For whipping cream, egg whites, or making meringues, use medium to high speeds. The 10-filament design is optimized for incorporating air efficiently.
- **Mixing:** Ideal for mixing cake batters, cookie doughs, or other medium-consistency mixtures. Start at a low speed to combine dry and wet ingredients, then gradually increase as needed.

Important Safety Notes:

- Do not operate the food processor with the whisk if the bowl is empty or contains only very small amounts of liquid, as this can cause unnecessary wear.
- Avoid using the whisk with extremely stiff or heavy doughs, as it is primarily designed for lighter mixing tasks. Refer to your food processor manual for appropriate tools for heavy doughs.
- Never insert hands or utensils into the mixing bowl while the food processor is operating.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Bosch whisk.

- 1. Detachment:** Always unplug the food processor before detaching the whisk. Gently twist and pull the whisk to remove it from the attachment point.
- 2. Immediate Cleaning:** Clean the whisk immediately after each use to prevent food residue from drying and hardening.
- 3. Hand Washing:** Wash the whisk by hand using warm, soapy water. Use a brush if necessary to remove any stubborn food particles from between the wire filaments.
- 4. Rinsing:** Rinse thoroughly under running water to remove all soap residue.
- 5. Drying:** Dry the whisk completely with a soft cloth or allow it to air dry before storing. Ensure no moisture remains, especially around the attachment shaft, to prevent corrosion.
- 6. Storage:** Store the whisk in a clean, dry place, away from direct heat or moisture.

Note: While many Bosch accessories are dishwasher safe, hand washing is generally recommended for whisks to preserve the integrity of the wire filaments and prevent potential discoloration or damage over time. Consult your food processor's manual for specific dishwasher compatibility of accessories.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your whisk accessory. For issues related to the food processor itself, please refer to its dedicated manual.

Problem	Possible Cause	Solution
Whisk not attaching securely.	Incorrect alignment or obstruction.	Ensure the whisk shaft is correctly aligned with the food processor's attachment point. Check for any food residue or debris blocking the connection.
Whisk not mixing effectively.	Incorrect speed setting or too heavy a mixture.	Increase the speed setting if appropriate for the task. Ensure the mixture is suitable for whisking; avoid very thick doughs.
Whisk appears bent or damaged.	Impact or misuse.	Discontinue use if the whisk is significantly damaged, as it may affect performance or safety. Consider replacing the accessory.

7. SPECIFICATIONS

Attribute	Detail
Brand	Bosch Home Appliances
Model Number	00650543
Product Dimensions (L x W x H)	20 x 10.5 x 10.5 cm (approximately 7.87 x 4.13 x 4.13 inches)
Item Weight	80 grams (approximately 0.18 lbs)
Material	Steel (filaments), Plastic (base)

Attribute	Detail
Filament Count	10

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this accessory is typically provided with the original food processor unit or can be obtained from the point of purchase. As an accessory, its warranty may be tied to the main appliance.

For further assistance, technical support, or to inquire about replacement parts, please contact Bosch Home Appliances customer service or visit their official website. Contact details are usually available in your food processor's main manual or on the Bosch official website.

You can visit the Bosch Home Appliances store page for more information:[Bosch Home Appliances Store](#)