

## Brevi 212-062

# Brevi Slex Evo High Chair 212-062 Instruction Manual

Model: 212-062 | Brand: Brevi

## 1. INTRODUCTION

---

The Brevi Slex Evo High Chair is designed for adaptability and ergonomic support for children. It features continuous seat height adjustment, 4 seat depth positions, and a footrest adjustable to 21 positions, ensuring proper posture as the child grows. The chair promotes social interaction by allowing the child to sit at the family table. This manual provides essential information for the safe and correct use, assembly, and maintenance of your Slex Evo High Chair.

## 2. SAFETY INFORMATION

---

**WARNING: Always ensure your child is securely fastened in the harness and never leave your child unattended in the high chair.**

- Always use the safety harness system to secure your child.
- Ensure the high chair is placed on a flat, stable surface before use.
- Do not use the high chair if any part is broken, torn, or missing.
- Keep children away from the high chair during assembly or adjustment.
- Do not place the high chair near open flames or other sources of strong heat.
- This product complies with European safety standard EN14988:2013.

## 3. SETUP AND INITIAL ADJUSTMENTS

---

The Brevi Slex Evo High Chair is designed for minimal assembly. This section details how to make initial

adjustments for your child's comfort and safety.



Image: A parent demonstrates adjusting the Brevi Slex Evo High Chair while a child is seated, highlighting the ease of customization.

### 3.1. Seat Height Adjustment

The seat offers continuous height adjustment. To adjust, locate the adjustment mechanism on the side of the chair frame. Press the release button or lever and slide the seat up or down to the desired height. Ensure it clicks securely into place.

### **3.2. Seat Depth Adjustment**

The seat can be adjusted to 4 different depth positions. This allows for optimal positioning relative to the table or tray. Consult the markings on the chair frame for specific depth settings.

### **3.3. Footrest Adjustment**

The footrest is adjustable to 21 positions. Proper foot support is crucial for ergonomic seating. Adjust the footrest so your child's feet are comfortably supported, with knees at approximately a 90-degree angle.

## **4. OPERATING INSTRUCTIONS**

---

The Slex Evo High Chair is versatile and adapts to various stages of your child's growth.



Image: A child comfortably seated in the Brevi Slex Evo High Chair at a kitchen island, demonstrating its adaptability to different table heights.

#### **4.1. Securing Your Child**

Always use the integrated safety rail and the 5-point harness system to secure your child in the high chair. Ensure the straps are snug but not too tight, allowing for comfortable movement.

#### **4.2. Ergonomic Backrest**

The backrest features 2 positions for optimal comfort and support. Adjust the backrest to suit your child's posture during feeding or play.

### 4.3. Mobility and Transport

The high chair is equipped with retractable rear wheels for easy movement. Use the rear handle to lift and maneuver the chair. Ensure the wheels are retracted for stable, stationary use.

### 4.4. Transforming the Chair

The Slex Evo High Chair is designed to grow with your child:

- **Preschool Chair:** As your child grows, the chair can be adjusted to a lower height suitable for preschool-aged children.
- **Adult Chair/Stool:** The chair can be configured as an adult chair or a stool, reaching a maximum height of 75.5 cm.

### 4.5. Optional Slex Evo Bouncer (Sold Separately)

The steel frame of the Slex Evo High Chair is compatible with the Slex Evo bouncer (sold separately), allowing the system to be used from birth. The bouncer offers 3 positions (cradle, play, feeding) and can function as a rocker, equipped with a play arch and three removable toys.



Image: The Brevi Slex Evo High Chair, in yellow, is shown integrated into a modern dining room, demonstrating its aesthetic appeal and functional design alongside other dining chairs.

## 5. MAINTENANCE

---

### 5.1. Cleaning

- Wipe plastic and metal surfaces with a damp cloth and mild soap.
- Do not use abrasive cleaners or solvents.

- For fabric components (if applicable, e.g., optional reducers), follow the care instructions provided with the accessory.

## 5.2. Inspection

- Regularly check all parts for wear, damage, or loose fasteners.
- Ensure all locking mechanisms are functioning correctly.
- Discontinue use if any part is damaged or missing.

## 6. TROUBLESHOOTING

If you encounter any issues with your Brevi Slex Evo High Chair, refer to the following common solutions:

- **Chair feels unstable:** Ensure all adjustment mechanisms are securely locked into place. Verify the chair is on a flat, even surface.
- **Adjustments are stiff:** Check for any obstructions in the adjustment tracks. Clean any debris that may be hindering smooth movement. Do not force adjustments.
- **Harness not securing properly:** Ensure all buckles are correctly engaged and straps are adjusted to fit your child snugly. Check for any twists or damage to the straps.

For issues not covered here, please contact Brevi customer support.

## 7. SPECIFICATIONS



Image: A technical diagram illustrating the key dimensions of the Brevi Slex Evo High Chair, including height, width, and depth.

Feature	Detail
Model Number	212-062

Feature	Detail
Brand	Brevi
Main Material	Plastic, Metal
Dimensions (L x W x H)	98.5 x 60 x 45.3 cm
Item Weight	7.4 Kilograms
Age Range	Baby
Portable	Yes
Assembly Required	No
Safety Standard	EN14988:2013
International Article Code	08011250212626

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided at the time of purchase or contact Brevi customer service directly. For technical support or spare parts, please visit the official Brevi website or contact their authorized service centers.