

[Manuals.plus](#) /

> [Fiskars](#) /

> Fiskars Fuse Creativity System Starter Set (Model 100770-1001) Instruction Manual

Fiskars 100770-1001

Fiskars Fuse Creativity System Starter Set

MODEL: 100770-1001

Introduction

The Fiskars Fuse Creativity System is a versatile manual machine designed for crafting enthusiasts. It allows for the creation of die-cut and letterpressed shapes in a single pass, suitable for a wide range of craft projects. This starter set includes the Fuse Creativity Machine, essential plates, and a design set to begin your creative work. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your machine.



Image: The Fiskars Fuse Creativity System machine, showcasing its main components and open platform for material placement.

Safety Information

- Keep hands and fingers clear of the cutting area and rollers during operation.

- Ensure the machine is placed on a stable, flat surface before use.
- Do not force materials through the machine; excessive force can damage the machine or materials.
- Keep out of reach of small children. This machine is not a toy.
- Use only Fiskars-approved accessories or compatible plates and dies to prevent damage.

Package Contents

The Fiskars Fuse Creativity System Starter Set (Model 100770-1001) typically includes the following items:

- Fiskars Fuse Creativity Machine
- Cutting Plate with attached Rubber Mat
- Spacer Plate
- Design Set (for cutting thick materials)
- Two Interchangeable Letterpress Plates

Product Overview

The Fuse Creativity System is designed for ease of use and versatility. Key features include:

- **Manual Crank:** An easy-to-turn manual crank facilitates smooth operation with less effort.
- **Wide Cutting Area:** The machine accommodates oversized crafting materials for design flexibility.
- **Integrated Storage:** A convenient storage compartment is included to keep dies, letterpress plates, and other small accessories organized and on hand.
- **Carrying Handle:** For convenient transportation and portability.



Image: The Fiskars Fuse Creativity System machine with its lid closed, indicating a ready-to-use or compact state.



Image: The Fiskars Fuse Creativity System machine with its storage compartment lid open, revealing internal storage space for accessories.

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the Fuse Creativity Machine on a sturdy, level work surface.
3. **Unfold (if applicable):** If the machine is in its folded storage position, unfold the platforms until they lock securely into place.
4. **Handle Attachment:** Ensure the manual crank handle is securely attached to the side of the machine.

Operating Instructions

The Fiskars Fuse Creativity System allows for both die-cutting and letterpressing. The process involves creating a "sandwich" of plates, dies/letterpress plates, and material, then feeding it through the machine's rollers.

General Usage Principles

- Always refer to the specific plate sequence for the type of die or letterpress plate you are using.
- Place your material (paper, fabric, etc.) on the appropriate plate.
- Assemble the "sandwich" according to the instructions, ensuring all components are aligned.
- Feed the assembled sandwich into the machine's opening and turn the manual crank to pass it through the rollers.
- Retrieve the processed material and plates from the other side.

Using the Adapter Kit Recipes

The Fiskars Fuse Creativity System is compatible with various dies and letterpress plates from other manufacturers. The following table illustrates the correct plate sequence for different products. An 'X' indicates the presence of a plate in the sandwich, from bottom to top.

--

Image: A table titled "Fuse Creativity System® Adapter Kit Recipes" detailing the plate sequence (Base Plate, Shim A, Shim B, Shim C, Product, Rubber Mat, Cutting Plate) for various die-cutting and letterpress products from different brands.

Note:

- An asterisk (*) next to Shim B indicates to place Shim B on top of Shim C.
- An asterisk (**) next to Shim C indicates to place Shim C on top of the rubber mat.

Storage and Portability

The Fiskars Fuse Creativity System is designed for compact storage and easy transport.

1. **Fold Platforms:** Gently fold the side platforms inwards until they securely lock into their compact position.
2. **Secure Handle:** Ensure the manual crank handle is in a position that does not obstruct folding or storage.
3. **Utilize Storage:** Store dies and letterpress plates in the integrated storage compartment.
4. **Carry:** Use the built-in carrying handle for convenient transportation.

Fuse Creativity System® Adapter Kit Recipes

Plate sequence for using other products

Bottom				Top		
Base Plate	Shim A	Shim B	Shim C	Product	Rubber Mat	Cutting Plate
				LifeStyle Crafts™		
X	X	X		Cutting Dies		X
X			X	Embossing Folders		X
X			X	Letterpress Plates	X	X
				Sizzix®		
		X**	X	Originals™ / Bigz™ / On The Edge™ / Big Shot® Pro		X
X			X	Sizzlits® / Textured Impressions™ / Embosslits™		X
X		X		Texturz™	X	X
X		X	X	Simple Impressions™ / Clearlits™		X
X		X	X*	Ink-its Letterpress™	X	
				Tim Holtz®		
		X**	X	Alterations™		X
X			X	Texture Fades™		X
				Vintaj®		
X			X	DecoEtch™ / DecoEmboss™		X
				Stampin UP®		
X			X*	Letterpress Plates	X	
				Provocraft®		
X			X	Cutting Dies / Embossing Folders / All in One		X
				Spellbinders®		
X	X			Nestabilities™ / Borderabilities™ / Impressabilities™ / Edgeabilities™ / Grand Nestabilities™ / Shapeabilities™	X	X
	X			AccuQuilt®		
				Go® / Go Baby™		X
				Fiskars®		
X			X	Texture Plates	X	X

*Place Shim C on top of rubber mat

**Place Shim B on top of Shim C



Fuse
Creativity System®

Die-cut & Letterpress
in One Pass™

fiskars.com | 866-348-5661

FISKARS®

Image: The Fiskars Fuse Creativity System machine folded into a compact form, ready for storage or transport, highlighting its carrying handle.

Maintenance

- **Cleaning:** Wipe the machine's exterior with a soft, damp cloth. Avoid abrasive cleaners.

- **Roller Care:** Periodically check the rollers for any debris or material residue and clean as necessary.
- **Plate Inspection:** Inspect cutting plates and letterpress plates for wear and tear. Replace them if they become excessively warped or damaged to ensure optimal results.
- **Storage:** Store the machine in a clean, dry environment when not in use.

Troubleshooting

- **Poor Cuts/Impressions:** Ensure the correct plate sandwich is used for the material and die/letterpress plate. Check plates for wear.
- **Machine Jams:** Do not force materials. Remove the sandwich and re-evaluate the plate combination or material thickness.
- **Difficulty Turning Crank:** This may indicate an incorrect plate sandwich or material that is too thick. Adjust the sandwich or use thinner material.
- **Warped Plates:** This is normal over time. Rotate and flip plates to extend their lifespan. Replace if severely warped.

Specifications

Feature	Detail
Model Number	100770-1001
Brand	Fiskars
Operation Mode	Manual
Product Dimensions (D x W x H)	16.8" x 8.3" x 15"
Item Weight	26 Pounds
Active Surface Area	139.4 square inches
Compatible Print Media	Fabric, Labels, Paper, Cardstock (with appropriate dies)
Color	Grey
Manufacturer	Fiskars School, Office and Craft Division

Warranty Information

For detailed warranty information regarding your Fiskars Fuse Creativity System, please refer to the official Fiskars website or the warranty card included with your product at the time of purchase. Warranty terms and conditions may vary.

Customer Support

Should you require assistance, have questions about your product, or need to order replacement parts, please contact Fiskars customer support. Contact information can typically be found on the official Fiskars website or within the product packaging.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008JYC2OQ>

More documents and user manuals: <https://manuals.plus/>