

## Aqua Laser 808.33100000000002

# Aqua Laser Mini Washing Machine User Manual

Model: 808.33100000000002

## 1. INTRODUCTION

Thank you for choosing the Aqua Laser Mini Washing Machine. This compact and portable appliance is designed for washing up to 2.5 kg of laundry, making it ideal for various situations such as travel, camping, single-person households, student accommodations, or for washing specific items like pet accessories. Please read this manual carefully before operating the machine to ensure safe and efficient use.

## 2. SAFETY INSTRUCTIONS

- Always ensure the power supply matches the voltage specified on the machine's rating label.
- Do not immerse the machine, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Unplug the machine from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Do not operate the machine if the power cord or plug is damaged. Contact qualified personnel for repair.
- Place the machine on a stable, level surface to prevent tipping.
- Do not overload the machine beyond its stated capacity of 2.5 kg.
- Avoid washing items with sharp objects or excessive metal parts that could damage the drum.
- Ensure the drain hose is properly positioned before draining water to prevent spills.

## 3. PRODUCT OVERVIEW


Familiarize yourself with the main components of your Aqua Laser Mini Washing Machine.



**Figure 3.1:** Front view of the Aqua Laser Mini Washing Machine. This image displays the compact design, the transparent blue washing drum, and the Aqua Laser logo on the front panel.



**Figure 3.2:** Top-down view of the Aqua Laser Mini Washing Machine. This perspective highlights the lid, the central control knob, and the overall shape of the appliance from above.

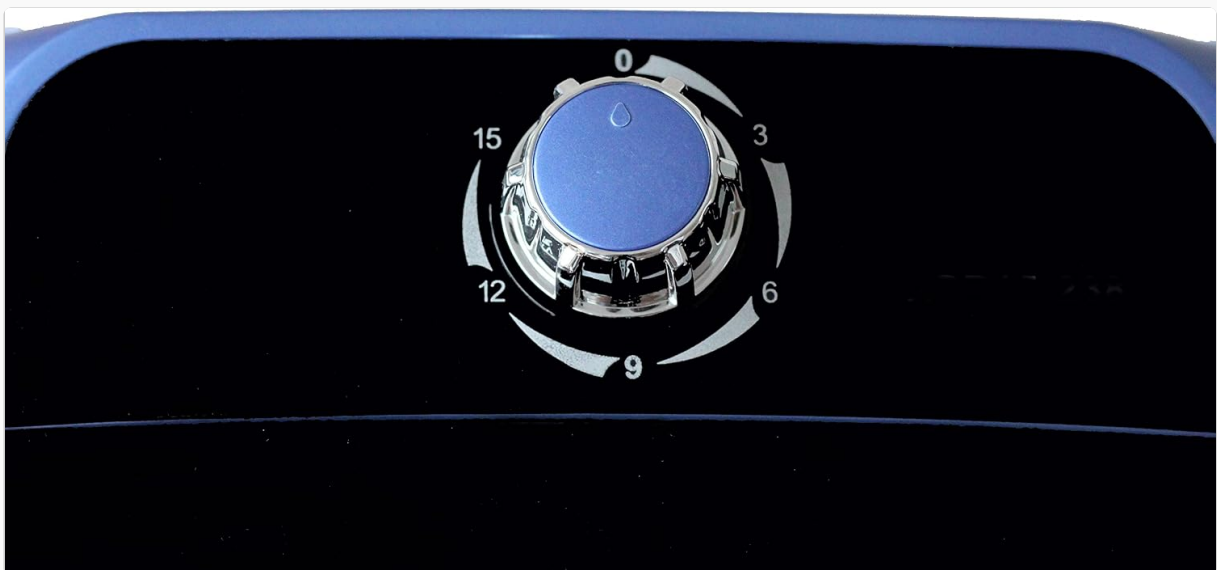

**Figure 3.3:** Close-up of the timer dial on the Aqua Laser Mini Washing Machine. The dial shows time markings from 0 to 15 minutes, allowing users to set the desired wash duration.



**Figure 3.4:** Interior view of the Aqua Laser Mini Washing Machine with the lid open. This image shows the washing pulsator at the bottom of the drum and the transparent blue walls.



**Figure 3.5:** Rear view of the Aqua Laser Mini Washing Machine. This image displays the power cord neatly wrapped and the flexible drain hose attached to the side of the unit.

## 4. SETUP

1. **Unpacking:** Carefully remove the washing machine from its packaging. Retain packaging materials for future transport or storage.
2. **Placement:** Place the machine on a firm, level, and dry surface. Ensure there is enough space around the machine for ventilation and operation.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the machine's power requirements.
4. **Drain Hose Positioning:** Position the drain hose (visible in Figure 3.5) into a sink, bucket, or drain. Ensure it is securely placed to prevent it from dislodging during draining.



**Figure 4.1:** Illustration of the drain hose positioned in a sink. The flexible hose allows for convenient water disposal after the wash cycle.

## 5. OPERATING INSTRUCTIONS

---

1. **Load Laundry:** Open the lid and place your laundry into the washing drum. Do not exceed the maximum capacity of 2.5 kg.



**Figure 5.1:** The washing machine with its lid open, showing various colored garments inside the drum, ready for washing.

2. **Add Water:** Pour the appropriate amount of water into the drum. Ensure the water level covers the laundry but does not overflow when the machine is operating.
3. **Add Detergent:** Add the recommended amount of laundry detergent directly into the drum with the water and laundry.
4. **Set Wash Time:** Close the lid. Turn the timer dial (Figure 3.3) to select your desired wash duration, up to 15 minutes. The machine will start automatically.
5. **Washing Cycle:** The machine will agitate the laundry for the set duration. The transparent drum allows you to observe the washing process.
6. **Drain Water:** Once the wash cycle is complete, ensure the drain hose is positioned correctly (Figure 4.1) and allow the dirty water to drain completely.
7. **Rinsing (Optional):** For rinsing, refill the drum with clean water (without detergent), set the timer for a short cycle (e.g., 3-5 minutes), and then drain the water again. Repeat if necessary.
8. **Remove Laundry:** After draining, open the lid and carefully remove your washed laundry.

## 6. MAINTENANCE

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** After each use, rinse the interior of the drum with clean water and wipe it dry to prevent residue buildup.
- **Drain Hose:** Ensure the drain hose is clear of blockages. Periodically flush it with clean water.
- **Storage:** When not in use for extended periods, ensure the machine is clean and dry. Store it in a cool, dry place away from direct sunlight.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Turn the timer dial to a wash setting.
Water not draining	Drain hose blocked or improperly positioned.	Check the drain hose for kinks or blockages; Ensure the hose is positioned lower than the machine's base.
Excessive vibration or noise	Machine not on a level surface; Overloaded; Uneven laundry distribution.	Place on a level surface; Reduce laundry load; Redistribute laundry evenly in the drum.
Water leakage	Overfilling; Loose drain hose connection.	Do not overfill the drum; Ensure drain hose is securely attached.

If problems persist after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	808.33100000000002
ASIN	B008K15NEE
Brand	Aqua Laser
Power	160 Watts
Capacity	2.5 Kilograms
Product Dimensions	39D x 50B x 37H cm
Weight	5.7 kg
Access Location	Top Loader
Color	Blue
Material	ABS

Feature	Detail
Special Features	Portable



**Figure 8.1:** Diagram illustrating the dimensions of the Aqua Laser Mini Washing Machine, showing its height (50cm), width (39cm), and depth (37cm).

### 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.