

Jocca 2247

Jocca 2247 Stand Fan Instruction Manual

Model: 2247

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before cleaning, and before moving.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not insert fingers or other objects through the grille when the fan is operating.
- Place the fan on a stable, level surface to prevent it from tipping over.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Jocca 2247 Stand Fan before assembly and operation.

- Front Grille
- Fan Blades (3 blades)
- Rear Grille
- Motor Housing
- Control Panel (Speed settings, Oscillation control)

- Adjustable Stand Pole
- Base



Image: The fan's base and adjustable pole, showing the sturdy cross-shaped base and the extendable pole with blue accents.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your stand fan.

1. **Assemble the Base:** Attach the stand pole to the base components. Ensure all parts are securely fastened with the provided screws or locking mechanisms.
2. **Attach the Stand Pole:** Insert the adjustable stand pole into the assembled base. Tighten any securing knobs or screws.
3. **Mount the Motor Housing:** Place the motor housing onto the top of the stand pole. Secure it firmly.
4. **Install the Rear Grille:** Position the rear grille onto the motor housing, aligning the mounting holes. Secure it with the retaining nut.
5. **Attach the Fan Blades:** Carefully slide the fan blades onto the motor shaft. Ensure they are seated correctly and secure them with the blade cap.
6. **Install the Front Grille:** Place the front grille over the fan blades and align it with the rear grille. Secure the two grilles together using the clips or screws provided around the perimeter.



Image: A fully assembled Jocca 2247 Stand Fan with blue blades and a white grille, positioned in a bedroom setting.

4. OPERATING INSTRUCTIONS

Once assembled, your fan is ready for use.

1. **Power Connection:** Plug the fan into a suitable 230V AC power outlet.
2. **Adjust Height:** Loosen the height adjustment knob on the stand pole, adjust to the desired height, and then tighten the knob securely.
3. **Adjust Tilt:** Loosen the tilt adjustment knob on the motor housing, tilt the fan head to the desired angle, and then tighten the knob.
4. **Select Speed:** Use the control buttons or rotary switch on the control panel to select the desired fan speed (0 - Off, 1 - Low, 2 - Medium, 3 - High).
5. **Oscillation Function:** To activate oscillation, press down the oscillation knob located on top of the motor housing. To stop oscillation, pull the knob up.
6. **Switching Off:** Turn the speed control to '0' or unplug the fan from the power outlet.



Image: A close-up of the Jocca 2247 Stand Fan's control panel, showing the speed selection buttons and the Jocca logo on the central hub.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the fan's performance and extends its lifespan.

- **Before Cleaning:** Always unplug the fan from the power outlet before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Grille and Blades:** To clean the fan blades and inside the grilles, you may need to carefully remove the front grille. Use a soft cloth or a vacuum cleaner with a brush attachment to remove dust. Ensure all parts are dry before reassembling and operating.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Speed setting is '0'.	Ensure the fan is securely plugged in; Test the outlet with another appliance; Turn the speed control to 1, 2, or 3.
Weak airflow.	Low speed setting; Dust accumulation on blades/grille.	Increase the speed setting; Clean the fan blades and grilles as per maintenance instructions.
Fan makes unusual noise.	Loose parts; Obstruction in blades; Fan not on a level surface.	Check for loose screws or components and tighten them; Ensure no foreign objects are obstructing the blades; Place the fan on a stable, level surface.
Oscillation not working.	Oscillation knob not pressed down.	Press the oscillation knob down firmly to engage the function.

7. SPECIFICATIONS

- Brand:** Jocca
- Model Number:** 2247
- Number of Speeds:** 3
- Wattage:** 50 watts
- Number of Blades:** 3
- Voltage:** 230 Volts
- Item Weight:** 2.5 Kilograms
- ASIN:** B008K6INVY
- GTIN:** 08435253520432

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Jocca customer service. Keep your proof of purchase for any warranty claims.

Note: Specific warranty terms may vary by region and retailer.



Jocca 2247 Stand Fan Instruction Manual

© 2024 Jocca. All rights reserved.