

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Samsung](#) /

> Samsung DC61-01992C Washer Detergent Drawer Instruction Manual

Samsung DC61-01992C

Samsung DC61-01992C Washer Detergent Drawer Instruction Manual

INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your Samsung DC61-01992C Washer Detergent Body Drawer. Please read this manual thoroughly before installation and use to ensure correct function and longevity of the part.

The Samsung DC61-01992C is an authorized OEM replacement part designed to fit various Samsung brand washing machine models. It serves as the housing for detergent, fabric softener, and other laundry additives.

PRODUCT OVERVIEW



Figure 1: The Samsung DC61-01992C Washer Detergent Body Drawer. This image displays the complete detergent

drawer assembly, showing its multiple compartments for different laundry agents and its overall structure.

The detergent drawer assembly consists of several compartments designed to dispense laundry additives at specific stages of the wash cycle. Proper identification of these compartments is crucial for effective washing.

INSTALLATION

Before beginning installation, ensure the washing machine is unplugged from the power outlet and the water supply is turned off. This prevents electrical shock and water damage.

- 1. Remove Old Drawer:** If replacing an existing drawer, gently pull the old detergent drawer out until it stops. Press the release lever (if present, typically located in the center or right side of the drawer) and pull the drawer completely out.
- 2. Inspect Housing:** Clean any detergent residue or mold from the drawer housing inside the washing machine. This ensures proper seating and prevents future blockages.
- 3. Insert New Drawer:** Align the new Samsung DC61-01992C detergent drawer with the tracks in the washing machine's housing. Gently push the drawer in until it clicks into place. Ensure it slides smoothly and sits flush with the machine's front panel.
- 4. Test Functionality:** Open and close the drawer a few times to confirm it operates without obstruction.

Warning:

- Always disconnect power before servicing the appliance.
- Refer to your washing machine's main instruction manual for specific model-related installation steps if available.

OPERATING INSTRUCTIONS

The detergent drawer is designed with specific compartments for different types of laundry additives. Refer to your washing machine's main manual for recommended detergent types and quantities.

- **Main Wash Compartment:** Typically the largest compartment, used for liquid or powder detergent for the main wash cycle.
- **Pre-Wash Compartment:** A smaller compartment, often marked with 'I' or 'Pre-Wash', for pre-wash detergent.
- **Fabric Softener Compartment:** Usually marked with a flower symbol or 'II', for liquid fabric softener. Do not exceed the 'MAX' fill line to prevent premature dispensing.
- **Bleach Compartment (if applicable):** Some drawers may have a separate compartment for liquid bleach.

After adding the desired laundry agents, gently push the drawer completely closed before starting the wash cycle.

MAINTENANCE AND CLEANING

Regular cleaning of the detergent drawer is essential to prevent residue buildup, mold, and mildew, which can lead to unpleasant odors and inefficient dispensing.

1. **Remove Drawer:** Pull the detergent drawer out completely as described in the installation section.
2. **Disassemble (if possible):** Some components within the drawer, such as the fabric softener cap, may be removable for easier cleaning. Refer to your washing machine's manual.
3. **Clean Components:** Wash the drawer and its removable parts under warm running water. Use a soft brush or cloth to remove any detergent residue, fabric softener buildup, or mold. A mild detergent can be used if necessary.
4. **Clean Housing:** Wipe down the inside of the drawer housing in the washing machine with a damp cloth to remove any residue.
5. **Rinse and Dry:** Rinse all parts thoroughly and allow them to air dry completely before reassembling and reinserting into the washing machine.

Perform this cleaning process at least once a month, or more frequently if you notice significant residue buildup or odors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawer not closing properly	Obstruction in tracks; drawer not aligned correctly; damaged drawer or housing.	Check for foreign objects in the tracks. Realign the drawer and push firmly. Inspect the drawer and housing for damage.
Detergent/softener not dispensing	Residue buildup blocking nozzles; drawer not fully closed; water pressure issues.	Clean the drawer and housing thoroughly. Ensure the drawer is fully closed. Check water supply to the machine.
Water leaking from drawer area	Overfilling compartments; clogged dispenser; damaged drawer or housing seal.	Do not overfill compartments. Clean the drawer and housing. Inspect for cracks or damage.

If troubleshooting steps do not resolve the issue, contact a qualified service technician or Samsung customer support.

SPECIFICATIONS

- **Part Number:** DC61-01992C
- **Brand:** Samsung
- **Type:** Washer Detergent Body Drawer
- **Compatibility:** Various Samsung brand washing machine models
- **Dimensions:** Approximately 10 x 10 x 20 inches (25.4 x 25.4 x 50.8 cm)
- **Weight:** Approximately 10.4 ounces (295 grams)

WARRANTY AND SUPPORT

This product is an authorized OEM part. For warranty information, please refer to the documentation provided with your original washing machine or contact Samsung customer support directly. Keep your purchase receipt as proof of purchase.

For technical assistance or further inquiries, please visit the official Samsung support website or contact

their customer service line.

Samsung Support: www.samsung.com/us/support/