

[Manuals.plus](#) /

› [Morphy Richards](#) /

› Morphy Richards AT 202 2-Slice Pop-up Toaster User Manual

Morphy Richards AT 202

Morphy Richards AT 202 2-Slice Pop-up Toaster User Manual

Model: AT 202 | Brand: Morphy Richards

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.

- Do not operate unattended.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Morphy Richards AT 202 Pop-up Toaster.



Image: Front view of the Morphy Richards AT 202 2-Slice Pop-up Toaster, showing the two toasting slots, browning control dial, cancel button, and toast lift lever.

- **Toasting Slots:** Two wide slots designed to accommodate various bread types.
- **Browning Control Dial:** Adjustable dial with settings from 1 (lightest) to 7 (darkest) to select your preferred toast shade.
- **Cancel Button:** Immediately stops the toasting cycle and raises the toast.
- **Toast Lift Lever:** Lowers the bread into the toasting slots and automatically raises it when the cycle is complete. Features a high-lift function for easy removal of smaller items.
- **Removable Crumb Tray:** Located at the bottom of the toaster for easy cleaning of accumulated crumbs.
- **Dust Cover:** A protective cover to keep dust out of the toasting slots when the toaster is not in use.

- **Anti-skid Feet:** Ensures stability on your countertop.

3. SETUP

3.1 Unpacking

Carefully remove the toaster and all packaging materials from the box. Ensure all components, including the crumb tray and dust cover, are present. Retain packaging for future storage or transport if needed.

3.2 Initial Use (Burn-off Cycle)

Before using your toaster for the first time, operate it without bread for a few minutes to burn off any manufacturing residues. This may produce a slight odor and some smoke; this is normal and will dissipate quickly.

1. Place the toaster on a stable, heat-resistant surface away from flammable materials.
2. Ensure the crumb tray is correctly inserted.
3. Plug the power cord into a suitable electrical outlet.
4. Set the browning control dial to a medium setting (e.g., 3 or 4).
5. Lower the toast lift lever without bread in the slots. The toaster will begin its cycle.
6. Allow the cycle to complete. The lever will automatically pop up.
7. Repeat this process 2-3 times in a well-ventilated area.

3.3 Placement

Position the toaster on a flat, stable, and heat-resistant surface. Ensure there is adequate clearance (at least 10 cm) around the toaster, especially above, to allow for proper ventilation and to prevent contact with flammable materials like curtains or cabinets.

4. OPERATING INSTRUCTIONS

4.1 Toasting Bread

1. Ensure the toaster is plugged into a power outlet.
2. Place one slice of bread into each toasting slot.
3. Select your desired browning level using the browning control dial. Settings range from 1 (lightest) to 7 (darkest). A medium setting (3-4) is recommended for most bread types.



Image: Detail of the browning control dial (numbered 1-7) and the 'CANCEL' button.

4. Press the toast lift lever downwards until it locks into place. The toasting cycle will begin, and the indicator light (if present) will illuminate.



Image: Close-up of the toast lift lever, showing it in the lowered position, ready for toasting.

5. When the selected browning level is reached, the toast will automatically pop up, and the cycle will end.
6. Use the high-lift function by gently lifting the toast lift lever further upwards to easily retrieve smaller items like crumpets or muffins without touching hot surfaces.

4.2 Cancelling Toasting

To stop the toasting cycle at any time, press the 'CANCEL' button. The toast will immediately pop up, and the heating elements will turn off.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

5.1 Before Cleaning

- Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.

5.2 Cleaning the Crumb Tray

The removable crumb tray collects crumbs and should be emptied regularly to prevent fire hazards.

1. Locate the crumb tray at the bottom of the toaster.
2. Pull the crumb tray out completely.



Image: The crumb tray partially removed from the toaster base, showing its accessibility for cleaning.

3. Discard the collected crumbs.
4. Wipe the tray with a damp cloth, if necessary, and dry thoroughly.
5. Slide the crumb tray back into its position until it clicks securely.

5.3 Cleaning the Exterior

- Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can scratch the surface.
- Never immerse the toaster in water or any other liquid.

5.4 Storage

- When not in use, place the dust cover over the toasting slots to prevent dust and debris from entering.
- Store the toaster in a clean, dry place.

6. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged in. Check your circuit breaker or try another outlet.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast. Consider bread type and freshness.
Toast does not pop up.	Lever not fully depressed; mechanical issue.	Ensure the toast lift lever is pushed down until it locks. If the issue persists, contact customer support.
Smoke coming from toaster.	Crumbs accumulated; food stuck; first use burn-off.	Press the 'CANCEL' button immediately. Unplug and allow to cool. Empty the crumb tray. If food is stuck, carefully remove it after unplugging and cooling. Initial use may produce some smoke, which is normal.
Bread stuck in slots.	Oversized bread; mechanical issue.	Unplug the toaster and allow it to cool. Carefully remove the bread using non-metallic tongs. Never use metal utensils.

7. SPECIFICATIONS

- **Model:** AT 202
- **Type:** 2-Slice Pop-up Toaster
- **Power:** 800 Watts
- **Operating Voltage:** 230 Volts
- **Material:** Stainless Steel (internal components), Plastic (exterior)
- **Browning Settings:** 7 levels
- **Special Features:** Electronic variable browning control, Removable crumb tray, High-lift facility, Dust cover
- **Color:** White and Blue
- **Item Weight:** Approximately 1410 Grams

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Morphy Richards AT 202 Pop-up Toaster comes with a **2-year warranty** on the product from the date of purchase. Please retain your purchase receipt as proof of purchase for warranty claims.

8.2 Customer Support

For any queries, assistance, or warranty claims, please contact Morphy Richards customer support:

- **Customer Care Number:** 18135963