

## Sebo DES-6629

# Sebo K Series Vacuum Cleaner Bags Instruction Manual

## INTRODUCTION

This manual provides essential information for the proper use and maintenance of your genuine Sebo K Series Vacuum Cleaner Bags (Model DES-6629 / 6629ER). These bags are engineered to deliver superior filtration and maintain the optimal performance of your Sebo K Series vacuum cleaner.

## COMPATIBILITY

These genuine Sebo K Series Vacuum Cleaner Bags are specifically designed for the following Sebo vacuum cleaner models:

- Sebo K1
- Sebo K1 Komfort
- Sebo K1 Pet
- Sebo K1 Eco
- Sebo K1 Premium

Using non-genuine or incompatible bags may compromise your vacuum's performance and filtration capabilities.

## INSTALLATION INSTRUCTIONS

Follow these steps to correctly install a new vacuum cleaner bag:

1. **Safety First:** Always ensure the vacuum cleaner is unplugged from the power outlet before performing any maintenance or bag replacement.
2. **Locate Compartment:** Identify the dust bag compartment on your Sebo K Series vacuum cleaner.
3. **Open Compartment:** Open the compartment door. This typically involves releasing a latch or pressing a designated button, depending on your specific model.
4. **Remove Old Bag:** Carefully remove the full dust bag. It is recommended to seal the opening of the old bag before removal to prevent dust leakage. Dispose of the old bag responsibly.

5. **Prepare New Bag:** Unfold a new Sebo K Series vacuum cleaner bag (Model DES-6629 / 6629ER).
6. **Insert New Bag:** Align the bag's collar with the bag holder inside the vacuum cleaner. Push firmly until it clicks securely into place. Ensure the bag is fully seated and not obstructing the compartment door.
7. **Close Compartment:** Close the dust bag compartment door securely until it latches.
8. **Resume Operation:** Plug in the vacuum cleaner and it is now ready for use.





This image displays the retail packaging for the Sebo K Series Vacuum Cleaner Bags. The box prominently features the 'SEBO' logo and 'FILTERBOX AIRBELT K' text. It also indicates 'MADE IN GERMANY' and 'Art.-No. 6629AM'. A diagram of the vacuum bag is visible, along with text specifying 'For / Pour / Para 110-120 V US/CAN'. The bottom left corner shows '8 AeraPure™ Filter Bags' and mentions '3 Layer Electret Microfilter Bag', with translations for 'Filter Bags' in multiple languages.

## OPERATING GUIDELINES

These genuine Sebo K Series vacuum cleaner bags are designed for optimal performance and filtration. Once installed, operate your vacuum cleaner according to its main operating instructions. The bag's multi-layer filtration system efficiently captures fine dust particles and allergens, contributing to cleaner exhaust air.

## MAINTENANCE AND REPLACEMENT

To ensure consistent cleaning performance and to protect your vacuum's motor, replace the vacuum cleaner bag when:

- The 'bag full' indicator on your Sebo vacuum cleaner illuminates.
- Suction power noticeably decreases, even if the indicator has not yet activated.

**Important:** Do not attempt to empty and reuse disposable bags. This can severely compromise filtration efficiency, lead to dust leakage, and potentially damage your vacuum cleaner.

## TROUBLESHOOTING

If you experience issues related to the vacuum bag, consider the following:

### Reduced Suction Power

- **Bag Full:** Check if the dust bag is full. Replace it with a new genuine Sebo bag if necessary.
- **Improper Installation:** Ensure the dust bag is correctly installed and securely sealed within its compartment. Refer to the 'Installation Instructions' section.
- **Blockages:** Inspect the vacuum's hose, wand, and floor head for any blockages that might be impeding airflow.

### Dust Leakage

- **Bag Seating:** Verify that the dust bag is properly seated and the compartment door is fully closed and latched.
- **Bag Damage:** Ensure the bag itself is not damaged or torn. If it is, replace it immediately.

## PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	Sebo
Model Info	DES-6629
Item Weight	10.8 ounces
Product Dimensions	3.4 x 6.4 x 13.3 inches
Capacity	1 Liters
Part Number	DES-6629
Special Features	Lightweight
Color	White
Compatible Device	Vacuum Cleaner
Material Type	Paper
Batteries Included?	No
Batteries Required?	No
ASIN	B008MAXOCQ
Date First Available	September 7, 2012

## WARRANTY AND SUPPORT

As genuine Sebo replacement parts, these vacuum cleaner bags are manufactured to high standards of quality and performance. For specific warranty information regarding your Sebo vacuum cleaner or for technical support, please refer to your vacuum cleaner's main instruction manual or contact Sebo customer service directly through their official website or contact channels.

Using genuine Sebo bags ensures optimal performance, maintains the integrity of your vacuum's filtration system, and helps to preserve your vacuum's warranty.