

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic LUMIX DMC-LX7K Digital Camera User Manual](#)

Panasonic DMC-LX7K

Panasonic LUMIX DMC-LX7K Digital Camera User Manual

Model: DMC-LX7K

INTRODUCTION

This manual provides essential information for the safe and effective use of your Panasonic LUMIX DMC-LX7K Digital Camera. Please read these instructions carefully before using the camera and retain them for future reference. The DMC-LX7K is a high-performance compact digital camera featuring a 10.1 MP 1/1.7-inch CMOS sensor, a fast 3.8x optical zoom lens (F1.4-2.3), and advanced shooting capabilities including RAW format and Full HD video recording.



Image 1: Front view of the Panasonic LUMIX DMC-LX7K Digital Camera. This image displays the camera's compact design, lens, and flash unit.

SETUP

1. Unpacking and Checking Contents

Before first use, ensure all items are present in the package.

- Panasonic LUMIX DMC-LX7K Digital Camera (Black)
- Battery Charger
- Battery Pack
- USB Cable
- Shoulder Strap
- CD-ROM (Software/Manuals)
- Hot Shoe Cover
- Lens Cap

- Lens Cap String
- One Year Limited Warranty Card

2. Charging the Battery

1. Insert the battery pack into the battery charger.
2. Plug the battery charger into a power outlet. The charging indicator will illuminate.
3. Once charging is complete, the indicator will turn off or change color (refer to charger specific indicator).
4. Remove the charged battery from the charger.

Note: Fully charge the battery before initial use to ensure optimal performance and battery life.

3. Inserting the Battery and Memory Card

1. Open the battery/card compartment cover on the bottom of the camera.
2. Insert the charged battery pack, ensuring correct orientation as indicated inside the compartment. Push until it clicks into place.
3. Insert an SD/SDHC/SDXC memory card into the card slot with the label facing the correct direction. Push until it clicks.
4. Close the compartment cover securely.

Important: Always turn off the camera before inserting or removing the battery or memory card.

4. Attaching the Shoulder Strap and Lens Cap

- Thread the shoulder strap through the strap eyelets on the camera body.
- Attach the lens cap string to the camera body or strap to prevent loss of the lens cap.
- Place the lens cap on the lens when the camera is not in use to protect the lens surface.

OPERATING THE CAMERA

1. Powering On/Off

Press the **ON/OFF** button to power the camera on or off. The lens will extend when powered on.

2. Basic Shooting Modes

Rotate the mode dial (typically located on the top of the camera) to select your desired shooting mode:

- **iA (Intelligent Auto):** Camera automatically optimizes settings for the scene.
- **P (Program AE):** Camera sets aperture and shutter speed, but allows user control over other settings.
- **A (Aperture Priority AE):** You set the aperture (F1.4-F2.8), camera sets shutter speed.
- **S (Shutter Priority AE):** You set the shutter speed (1/4000 to 60 seconds), camera sets aperture.
- **M (Manual Exposure):** You control both aperture and shutter speed.
- **SCN (Scene Mode):** Select from various preset scene modes (e.g., Portrait, Landscape, Macro).
- **Creative Control:** Apply various creative filters and effects.
- **Creative Video:** Access advanced video recording options.

3. Taking a Photo

1. Frame your shot using the 3.0-inch LCD screen.
2. Adjust zoom using the zoom lever around the shutter button.

3. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
4. Press the shutter button fully down to take the picture.

4. Recording Video

The DMC-LX7K supports Full HD 1080p video recording in AVCHD and MPEG-4 formats.

- To start recording, press the dedicated **Video Record Button**.
- Press the button again to stop recording.
- In Creative Video mode, you can manually control exposure settings during video recording.

5. Playback Mode

Press the **Playback Button** to view your captured photos and videos. Use the directional pad to navigate through images and the zoom lever to zoom in on photos.

6. Focusing

The camera offers both autofocus and manual focus options.

- **Autofocus (AF):** The camera uses Contrast Detection AF with multiple modes (Continuous, Single, Multi-area, Tracking, Live View).
- **Manual Focus (MF):** Switch to MF mode (usually via a switch on the lens barrel or a menu option) and rotate the focus ring on the lens to adjust focus manually.

7. Flash Usage

The built-in flash can be activated or deactivated via a dedicated button or menu setting. Available flash modes include:

- Auto Flash
- Forced Flash On
- Flash Off
- Slow Sync
- Rear Curtain Sync

MAINTENANCE

1. Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution.
- **Lens:** Use a lens brush to remove dust, then gently wipe with a lens cleaning cloth and lens cleaning solution. Avoid touching the lens surface with your fingers.
- **LCD Screen:** Use a soft, dry cloth. For smudges, use a screen cleaner specifically designed for LCDs.

Caution: Never use organic solvents like thinner or benzene to clean the camera.

2. Battery Care

- Remove the battery from the camera when not in use for extended periods.
- Store batteries in a cool, dry place.
- Avoid exposing batteries to extreme temperatures.

3. Storage

Store the camera in a dry, well-ventilated area, away from direct sunlight, high temperatures, and humidity. Use a camera bag or case for protection during transport.

TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is depleted. Charge the battery. Battery is inserted incorrectly. Reinsert the battery with correct orientation.
Cannot take pictures.	Memory card is full. Delete unnecessary images or insert a new card. Memory card is not inserted. Insert a memory card. Lens cap is on. Remove the lens cap.
Images are blurry.	Camera shake. Hold the camera steady or use a tripod. Subject is out of focus. Ensure the camera has focused correctly (green focus frame). Lens is dirty. Clean the lens.
Screen is difficult to see in bright light.	The LCD screen may appear dim in very bright conditions. Try to shade the screen or adjust screen brightness in settings.
Camera stops working in cold temperatures.	The operating temperature range is 0°C to 40°C (32°F to 104°F). Operating outside this range may cause temporary malfunction. Allow the camera to return to operating temperature.
Noise in high ISO images.	This is expected behavior for digital cameras at higher ISO sensitivities. Use lower ISO settings when possible or adjust noise reduction settings if available.

SPECIFICATIONS

Key technical specifications for the Panasonic LUMIX DMC-LX7K Digital Camera:

- Model Name:** Panasonic LUMIX LX7K (DMC-LX7K)
- Photo Sensor Resolution:** 10.1 MP
- Photo Sensor Size:** 1/1.7-inch CMOS
- Optical Zoom:** 3.8x
- Lens:** F1.4-2.3 (24-90mm equivalent)
- Image Stabilization:** Optical
- ISO Sensitivity:** 80-6400 (Expanded)
- LCD Screen:** 3.0-inch, 920,000 dots
- Video Resolution:** Full HD 1080p (AVCHD, MPEG-4)
- Continuous Shooting:** 11 FPS
- Shutter Speed:** 1/4000 to 60 seconds
- File Formats:** JPEG (DCF/Exif2.3), RAW, MPO
- Memory Storage:** SD/SDHC/SDXC, 70 MB Internal
- Connectivity:** HDMI (Type C Mini), USB

- **Weight:** Approximately 10.56 ounces (299g)
- **Dimensions:** Compact form factor
- **Operating Temperature:** 0°C to 40°C (32°F to 104°F)

WARRANTY AND SUPPORT

Warranty Information

Your Panasonic LUMIX DMC-LX7K Digital Camera comes with a **One Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product meets specified performance standards. Please refer to the warranty card included in your package for full terms and conditions.

Customer Support

For technical assistance, service, or further inquiries regarding your camera, please contact Panasonic customer support. You can find contact information on the official Panasonic website or in the documentation provided with your product.

[Visit the Official Panasonic Website](#)

© 2024 Panasonic Corporation. All rights reserved.