

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Necchi](#) /
- › [Necchi, Pfaff Serger Upper Knife PL102, 788 Hobbylock Instruction Manual](#)

Necchi PL102

Necchi, Pfaff Serger Upper Knife PL102, 788 Hobbylock Instruction Manual

Model: PL102 | Part Number: 97-340406-00

INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of the Necchi, Pfaff Serger Upper Knife PL102. This upper knife is a replacement part designed for compatibility with various serger machines, including the Pfaff 788 Hobbylock. Proper installation and care ensure optimal cutting performance and longevity of your serger.



Image showing the Necchi Pfaff Serger Upper Knife PL102, a replacement part for serger machines. This image highlights the shape and design of the upper knife.

SETUP AND INSTALLATION

Before beginning installation, ensure your serger machine is turned off and unplugged from the power source to prevent accidental injury. Refer to your serger machine's specific manual for detailed instructions on accessing the knife area.

1. **Locate the Old Upper Knife:** Open the front cover of your serger to expose the looper and knife mechanisms. Identify the existing upper knife.
2. **Remove the Old Knife:** Using the appropriate screwdriver (usually a small flathead or Phillips, depending on your machine), carefully loosen the screw(s) holding the upper knife in place. Remove the old knife, taking care to note its orientation.
3. **Install the New Upper Knife:** Position the new Necchi, Pfaff Serger Upper Knife PL102 (Part Number: 97-340406-00) in the same orientation as the knife you removed. Ensure it is seated correctly in its holder.
4. **Secure the New Knife:** Tighten the screw(s) firmly, but do not overtighten, as this can damage the knife or the machine.
5. **Verify Alignment:** Manually turn the handwheel of your serger to cycle the needles and loopers. Observe the interaction between the upper and lower knives. They should meet precisely to create a clean cut. Adjust if necessary.

6. **Close Machine:** Close the front cover of your serger.

Note: If you are unsure about any step, consult a qualified sewing machine technician or your serger's original instruction manual.

OPERATING CONSIDERATIONS

The upper knife works in conjunction with the lower knife to trim the fabric edge before the stitches are formed. A sharp upper knife is crucial for clean, even seams.

- **Fabric Type:** The knife is designed to cut a wide range of fabrics. However, extremely thick or dense materials may dull the blade faster.
- **Cutting Width:** Ensure your serger's cutting width is set appropriately for your project. An incorrect setting can lead to uneven cuts or strain on the knife.
- **Test Cuts:** Always perform test cuts on scrap fabric before beginning your project to confirm the knife is cutting cleanly and the stitch formation is correct.

MAINTENANCE

Regular maintenance extends the life of your upper knife and ensures consistent performance.

- **Cleaning:** After each use, use a small brush to remove lint and fabric fibers from around the knife area. Accumulated debris can hinder cutting performance.
- **Inspection:** Periodically inspect the knife edge for signs of dullness, nicks, or damage. A dull knife will result in frayed edges or skipped cuts.
- **Replacement:** Replace the upper knife when it becomes dull or damaged. The frequency of replacement depends on usage and the types of fabrics sewn.

TROUBLESHOOTING

If you experience issues related to fabric cutting, consider the following:

- **Frayed or Uneven Edges:** This is a primary indicator of a dull or damaged upper knife. Replace the knife.
- **Fabric Not Trimming:** Check if the upper knife is installed correctly and securely. Ensure the cutting width is not set too wide, preventing the knife from engaging the fabric.
- **Loud Noise from Knife Area:** Ensure the knife is properly seated and tightened. Check for any obstructions or debris.

If problems persist after checking the knife, consult your serger's manual for other potential causes or seek professional service.

SPECIFICATIONS

Feature	Detail
Product Name	Serger Upper Knife
Brand	Necchi

Feature	Detail
Model Number	PL102
Part Number	97-340406-00
Compatibility	Pfaff 788 Hobbylock and other compatible serger machines

SUPPORT AND WARRANTY

For further assistance or warranty information, please refer to the documentation provided with your original serger machine or contact the manufacturer of your serger. This replacement part typically adheres to the warranty terms of the retailer or the part manufacturer.