

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Baby Lock](#) /
- › [Baby Lock Serger Upper Looper BL402, BL5370ED Instruction Manual](#)

Baby Lock BL402

Baby Lock Serger Upper Looper Instruction Manual

Models: BL402, BL5370ED

PRODUCT OVERVIEW

This manual provides instructions for the Baby Lock Serger Upper Looper, a critical component for achieving precise and consistent stitches on your Baby Lock serger machine. This upper looper is compatible with Baby Lock Serger Models BL402 and BL5370ED. Proper installation and maintenance are essential for optimal serger performance.



Figure 1: Baby Lock Serger Upper Looper. This image displays the Baby Lock Serger Upper Looper, a metal component designed for precise thread handling in compatible serger machines. It features a curved, pointed end for catching threads and a cylindrical base for attachment.

SETUP AND INSTALLATION

Before installing the new upper looper, ensure your serger is turned off and unplugged from the power source for safety. Refer to your specific serger model's main instruction manual for detailed machine-specific diagrams and procedures for

accessing the looper area.

1. **Preparation:** Open the front and side covers of your serger to expose the looper mechanism.
2. **Remove Old Looper (if applicable):** Carefully loosen any screws or clips securing the old upper looper. Note its orientation before removal.
3. **Install New Looper:** Position the new Baby Lock Upper Looper (part number 61294) into its designated slot. Ensure it is correctly aligned according to your serger's manual. The pointed end should face the needle area.
4. **Secure Looper:** Tighten any screws or secure clips to firmly hold the looper in place. Do not overtighten.
5. **Test Movement:** Manually turn the handwheel to ensure the looper moves freely and correctly without obstruction.
6. **Close Covers:** Once installed, close all machine covers.

OPERATING CONSIDERATIONS

The upper looper works in conjunction with the lower looper and needles to form stitches. After installation, it is crucial to re-thread your serger completely and perform test stitches on scrap fabric.

- **Threading:** Always follow the threading path specified in your serger's main instruction manual. Incorrect threading is a common cause of stitching issues.
- **Tension Adjustment:** After replacing a looper, you may need to fine-tune your thread tensions to achieve balanced stitches. Adjust tension dials incrementally.
- **Fabric Compatibility:** Ensure the looper is functioning correctly across various fabric types you intend to sew.

MAINTENANCE

Regular maintenance of your upper looper and serger will extend its lifespan and ensure consistent stitch quality.

- **Cleaning:** Periodically remove lint and thread fragments from around the looper area using a small brush or vacuum. Accumulation can impede looper movement.
- **Lubrication:** Refer to your serger's main manual for specific lubrication points and recommended oil types. Apply oil sparingly to moving parts as instructed.
- **Inspection:** Regularly inspect the looper for any signs of wear, bending, or damage. A damaged looper can cause skipped stitches or thread breakage.

TROUBLESHOOTING

If you encounter issues after installing or using the upper looper, consider the following common troubleshooting steps:

- **Skipped Stitches:** Check if the looper is correctly installed and not bent. Ensure needles are new and correctly inserted. Verify proper threading and tension settings.
- **Thread Breakage:** Inspect the looper for burrs or rough spots that might snag thread. Ensure thread is not catching on any part of the machine. Check thread quality and tension.
- **Uneven Stitches:** Re-check all tension settings. Ensure the looper is securely fastened and not loose.
- **Machine Jamming:** Turn off the machine immediately. Remove any tangled threads. Inspect the looper and surrounding mechanisms for obstructions.

For persistent issues, consult your serger's comprehensive instruction manual or contact Baby Lock customer support.

SPECIFICATIONS

Feature	Detail
Product Type	Serger Upper Looper
Brand	Baby Lock
Compatible Models	BL402, BL5370ED
Item Model Number	BL402
ASIN	B008MNV8EO
UPC	616469833815
Item Weight	1 Pound

WARRANTY AND SUPPORT



This Baby Lock Serger Upper Looper is manufactured to high-quality standards. For information regarding warranty coverage, please refer to the documentation included with your original Baby Lock serger machine or visit the official Baby Lock website.

For technical assistance, parts inquiries, or further support, please contact Baby Lock customer service directly. Contact information can typically be found on the manufacturer's website or in your serger's main manual.



© 2023 Baby Lock. All rights reserved. This manual is for informational purposes only.

Related Documents - BL402

	<p>Baby Lock Splendor 8-Thread Serger: Advanced Features & Benefits</p> <p>Discover the Baby Lock Splendor 8-Thread Serger, featuring ExtraordinAir® Threading, Automatic Thread Delivery™, and a spacious workspace for professional garment, quilt, and home decor finishing. Explore its advanced features, accessories, and warranty.</p>
	<p>Serger Organizer Pad: DIY Sewing Machine Accessory Guide</p> <p>Learn to create a practical Serger Organizer Pad to keep your sewing tools organized and accessible. This guide provides a complete list of supplies and cutting instructions, suitable for any serger machine, with measurements based on the Baby Lock Triumph.</p>

Baby Lock BLES8-SFB15 Single Fold Bias Binder Instructions and Settings

Detailed instructions, machine settings, and application guide for the Baby Lock BLES8-SFB15 Single Fold Bias Binder, designed for knit and woven fabrics.

Baby Lock Pintuck Foot (BLE8-PTF) Instructions

Instructions for using the Baby Lock Pintuck Foot (BLE8-PTF) to create beautiful pintucks on garments. Includes machine settings and step-by-step guidance.

Baby Lock Cording Foot 3mm (BL-CF3) - Sewing Instructions & Settings

Detailed instructions and recommended machine settings for the Baby Lock 3mm Cording Foot (BLc-CF3). Learn how to serge decorative cording and piping for professional finishes.

Baby Lock Shirring Foot (BLE8-SF) Instructions

Instructions for using the Baby Lock Shirring Foot (BLE8-SF) for easy shirring and gathering on lightweight to medium fabrics with overlock or chain stitch settings. Includes machine settings and detailed usage steps.