

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Eureka](#) /

› [Eureka Victory Upright Vacuum Cleaner Belt Instruction Manual](#)

Eureka 61120G

Eureka Victory Upright Vacuum Cleaner Belt Instruction Manual

Model: 61120G

INTRODUCTION

This manual provides instructions for the installation and maintenance of the Eureka Victory Upright Vacuum Cleaner Belt (Model 61120G). This replacement belt is designed to restore optimal brushroll performance to your Eureka Victory upright vacuum cleaner.



Image: A pack containing three replacement belts for Eureka Victory upright vacuum cleaners. The belts are black, flat, and made of rubber, designed to drive the brushroll.

COMPATIBILITY

This belt is compatible with a wide range of Eureka Victory Upright Vacuum Cleaner models. Please verify your vacuum's model number against the list below to ensure proper fit:

- Eureka WHF-9
- Eureka 4300, 4325AT, 4372AT
- Eureka 4331, 4333A, 4335AT, 4336ATHE
- Eureka 4351A, 4377ATV, 4380AT, 4381AT, 4383AT, 4386AT, 4387AT, 4388AT, 4388BT
- Eureka 4390A, 4393A
- Eureka 4440A, 4455AT, 4484A, 4459AS, 4460AT, 4462AT, 4463AV, 4464AT, 4465AT, 4467AV, 4468A, 4468A-1, 4469AT, 4470AT, 4471AT, 4472AT, 4472BT, 4472BT-1, 4475AT, 4476T, 4480AT, 4481AT, 4485AT, 4488AT, 4489AT
- Eureka 4495, 4495A-1, 4496AV, 4499A, 4499B

If your model is not listed, please consult your vacuum cleaner's original manual or contact Eureka customer support for compatibility information.

INSTALLATION INSTRUCTIONS

Replacing the brushroll belt is a common maintenance task. Always ensure the vacuum cleaner is

unplugged before performing any maintenance or installation procedures to prevent electric shock or injury.

1. **Safety First:** Unplug the vacuum cleaner from the electrical outlet.
2. **Access the Brushroll:** Turn the vacuum cleaner over so the brushroll is accessible. You may need to remove a bottom plate or cover. This usually involves unscrewing several screws.
3. **Remove Old Belt:** Carefully remove the brushroll. Locate the old belt, which will likely be stretched, worn, or broken. Remove it from both the motor shaft and the brushroll.
4. **Install New Belt:** Loop the new belt around the motor shaft. Then, stretch the belt around the brushroll. Ensure the belt is centered and not twisted.
5. **Reinstall Brushroll:** Place the brushroll back into its housing, ensuring the belt remains properly seated on both the motor shaft and the brushroll. Spin the brushroll manually a few times to confirm the belt is correctly aligned and moves freely.
6. **Secure Cover:** Reattach any covers or bottom plates that were removed, securing them with screws.
7. **Test:** Plug the vacuum cleaner back in and test its operation. The brushroll should spin freely and effectively.

Refer to your specific vacuum cleaner model's user manual for detailed diagrams and instructions, as procedures may vary slightly.

MAINTENANCE

Regular inspection of your vacuum belt can extend its lifespan and maintain cleaning performance.

- **Inspect Regularly:** Check the belt every 3-6 months, or if you notice a decrease in brushroll performance or a burning smell.
- **Signs of Wear:** Replace the belt if it appears stretched, cracked, frayed, or if the brushroll stops spinning.
- **Brushroll Cleaning:** Keep the brushroll free of tangled hair, threads, and debris, as this can put extra strain on the belt and motor.

TROUBLESHOOTING

If your vacuum's brushroll is not functioning correctly after belt replacement, consider the following:

- **Brushroll Not Spinning:**
 - Ensure the new belt is correctly installed and not twisted.
 - Check for any obstructions in the brushroll housing or tangled around the brushroll itself.
 - Verify the brushroll is properly seated in its bearings.
- **Burning Smell:**
 - Immediately unplug the vacuum.
 - This often indicates a slipping belt or an overloaded brushroll. Check for obstructions.
 - If the belt is new, ensure it's the correct size and tension.
- **Belt Breaks Quickly:**
 - Ensure the brushroll is not jammed or difficult to turn manually.
 - Verify you are using the correct belt type and size for your specific vacuum model.

If issues persist, consult a qualified service technician or Eureka customer support.

SPECIFICATIONS

Model Number	61120G
Brand	Eureka
Material	Rubber
Belt Style	Flat Belt
Compatible Devices	Eureka Victory Upright Vacuum Cleaners
Color	Black
Package Contents	3 Belts per pack
Item Weight	1.13 ounces
Package Dimensions	5.83 x 4.57 x 1.34 inches

WARRANTY AND SUPPORT

For specific warranty information regarding your Eureka Victory Upright Vacuum Cleaner Belt, please refer to the documentation provided with your original vacuum cleaner or visit the official Eureka website. For further assistance or technical support, please contact Eureka customer service.

Eureka Official Website: www.eureka.com