

## Elna 492130-20

# Elna Sewing Machine Presser Foot 492130-20 User Manual

Model: 492130-20

## INTRODUCTION

---

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Elna 7-Hole Multiple Cord Presser Foot, model 492130-20. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## PRODUCT OVERVIEW

---



*Figure 1: Elna 7-Hole Multiple Cord Presser Foot. This image displays the presser foot with its distinct seven grooves designed for guiding multiple cords during sewing.*

The Elna 7-Hole Multiple Cord Presser Foot is an accessory designed to facilitate the sewing of multiple decorative cords or threads onto fabric simultaneously. Its specialized design ensures even spacing and secure stitching, enhancing the aesthetic appeal of your sewing projects.

## COMPATIBILITY

This presser foot (model 492130-20) is compatible with the following Elna sewing machine models:

- Elna 900
- Elna 9000

Ensure your sewing machine model is listed above for proper fit and function.

## SETUP AND INSTALLATION

1. **Power Off:** Before installing or removing any presser foot, always turn off your sewing machine and unplug it from the power outlet for safety.
2. **Raise Needle and Presser Foot Lever:** Raise the needle to its highest position and lift the presser foot lever.
3. **Remove Existing Presser Foot:** Locate the presser foot release button or lever on your machine (this varies by model). Press it to release the current presser foot. If your machine uses a screw, loosen the screw to detach the foot.
4. **Attach 7-Hole Multiple Cord Foot:** Position the Elna 7-Hole Multiple Cord Presser Foot so that the pin on the foot aligns with the groove on the presser foot holder. Lower the presser foot lever until the foot snaps into place. If using a screw attachment, align the foot and tighten the screw securely.
5. **Verify Attachment:** Gently try to pull the presser foot off to ensure it is securely attached.

Refer to your sewing machine's main instruction manual for specific details on changing presser feet if you encounter difficulties.

## OPERATING INSTRUCTIONS

The 7-Hole Multiple Cord Presser Foot is ideal for decorative stitching with multiple cords. Follow these steps for optimal use:

1. **Select Cords:** Choose up to seven decorative cords or threads. Ensure they are of similar thickness for best results.
2. **Thread Cords:** Guide each cord through one of the seven holes on the presser foot. The cords should pass smoothly through the grooves on the underside of the foot.
3. **Prepare Fabric:** Place your fabric under the presser foot. You may want to use a stabilizer depending on the fabric type and cord weight.
4. **Select Stitch:** Choose a suitable stitch for attaching cords. A zigzag stitch is commonly used, as it will stitch over the cords, securing them to the fabric. Adjust the stitch width and length as needed to cover the cords effectively.
5. **Begin Sewing:** Slowly lower the needle into the fabric and begin sewing. Guide the fabric and cords evenly to maintain straight lines. The grooves in the presser foot will help keep the cords aligned.
6. **Finishing:** Once sewing is complete, raise the needle and presser foot, then trim the threads and cords.

Experiment with different stitch types and tensions on scrap fabric before working on your final project.

## MAINTENANCE AND CARE

Proper care will extend the life of your presser foot and ensure consistent performance.

- **Cleaning:** After each use, gently brush away any lint or thread residue from the presser foot, especially from the grooves. A soft brush or lint roller can be used.
- **Storage:** Store the presser foot in a clean, dry place, preferably in a dedicated sewing accessory box, to prevent damage or loss.
- **Inspection:** Periodically inspect the presser foot for any signs of wear, bending, or damage. A damaged presser foot can affect stitch quality and potentially harm your sewing machine.

Do not use harsh chemicals or abrasive materials for cleaning, as these can damage the finish or material of the presser foot.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Cords are not feeding evenly.	Cords are tangled or not properly seated in grooves. Uneven cord thickness.	Ensure cords are untangled and correctly placed in each groove. Use cords of consistent thickness.
Stitches are skipping or uneven.	Incorrect needle size or type. Improper tension settings. Damaged presser foot.	Use a needle appropriate for your fabric and cord type. Adjust upper and bobbin tension. Inspect presser foot for damage.

Problem	Possible Cause	Solution
Presser foot does not attach securely.	Incorrect alignment. Release mechanism not fully engaged.	Re-align the presser foot with the holder. Ensure the release mechanism clicks into place or the screw is tightened. Verify machine compatibility.

If you continue to experience issues, consult your sewing machine's main instruction manual or contact Elna customer support.

## SPECIFICATIONS

**Model Number:** 492130-20

**Type:** 7-Hole Multiple Cord Presser Foot

**Brand:** Elna

**Compatible Models:** Elna 900, Elna 9000

**UPC:** 616469838469

**Item Weight:** 16 ounces (approximate)

## WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the official Elna website or contact your authorized Elna dealer. Keep your purchase receipt as proof of purchase for warranty claims.

**Elna Official Website:** [www.elna.com](http://www.elna.com) (This is a placeholder URL as no specific URL was provided in the input. Users should verify the correct official website.)