

## uutensil ST-012-UT

# Stirr Automatic Pan Stirrer User Manual

Model: ST-012-UT | Brand: uutensil

## 1. INTRODUCTION AND OVERVIEW

---

The uutensil Stirr Automatic Pan Stirrer is an innovative, hands-free kitchen tool designed to simplify your cooking process. It automatically stirs your food, ensuring even cooking and preventing sticking, allowing you to focus on other tasks.

Key features include:

- Hands-free self-rotating operation.
- Three adjustable speed options.
- Removable nylon legs, heat-resistant up to 120°C.
- Safe for use with non-stick pans and pots.
- Food and dishwasher safe components.
- Moves both forward and backward during operation for thorough stirring.



Figure 1: The Stirr Automatic Pan Stirrer.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the Stirr Automatic Pan Stirrer.

- Do not immerse the main unit (battery compartment) in water or any other liquid.

- Ensure the Stirr is placed securely in the pot or pan before turning it on.
- Keep hands and loose clothing away from the stirring legs during operation.
- Do not use the Stirr in extremely thick mixtures that may impede its movement, as this can strain the motor.
- The nylon legs are heat-resistant up to 120°C (248°F). Do not expose them to temperatures exceeding this limit.
- Always remove batteries if the device will not be used for an extended period.
- Keep out of reach of children.

### 3. PACKAGE CONTENTS

---

Your Stirr Automatic Pan Stirrer package should contain the following:

- 1 x Stirr Main Unit (Grey body)
- 1 x Set of Removable Nylon Legs (Grey)

**Note: 4 x AA batteries are required and are NOT included.**



Figure 2: Product packaging, illustrating contents.

### 4. SETUP

---

1. **Install Batteries:** Open the battery compartment located at the top of the main unit. Insert 4 x AA batteries, ensuring correct polarity (+/-). Close the compartment securely.

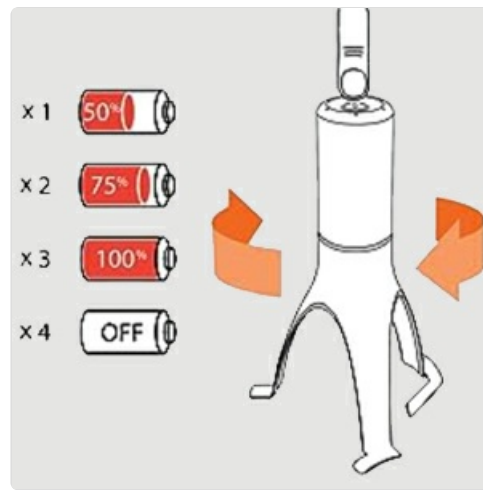


Figure 3: Battery installation diagram.

2. **Attach Legs:** Align the removable nylon legs with the base of the main unit and gently push them into place until they click securely.



Figure 4: Attaching the nylon legs.

## 5. OPERATING INSTRUCTIONS

1. **Placement:** Place the Stirr directly into your pot or pan containing the food you wish to stir. Ensure the legs are fully submerged and can move freely. The Stirr is suitable for soups, sauces, porridge, gravy, and similar consistency foods.



Figure 5: Stirr placed in a pan with sauce.



Figure 6: Stir in a pot with beans.

- 2. Power On/Speed Selection:** Press the power button located on the top of the unit once to turn it on at the lowest speed. Pressing the button repeatedly will cycle through the three available speed settings.



Figure 7: Power button and speed indicators.

3. **Automatic Stirring:** The Stirr will automatically rotate and move around the pan, stirring the contents. It is designed to move both forward and backward to ensure comprehensive mixing.



Figure 8: Illustrative movement of the Stirr.

4. **Power Off:** To turn off the Stirr, press the power button until the unit stops operating.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Stirr Automatic Pan Stirrer.

- **Cleaning the Legs:** The removable nylon legs are food and dishwasher safe. Detach them from the main unit and wash them by hand with warm soapy water or place them in the dishwasher.
- **Cleaning the Main Unit:** The main unit (containing the motor and battery compartment) is NOT waterproof. Wipe it clean with a damp cloth. Do not immerse it in water.
- **Storage:** Store the Stirr in a dry place when not in use. Remove batteries if storing for extended periods.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stirr does not turn on.	Batteries are dead or incorrectly installed.	Replace with new AA batteries, ensuring correct polarity.
Stirr moves slowly or stops.	Batteries are low; mixture is too thick.	Replace batteries. The Stirr is designed for liquids and semi-liquid mixtures; it may struggle with very thick foods.

Problem	Possible Cause	Solution
Stirr is noisy during operation.	Normal operation; potential wear on motor.	Some motor noise is normal. If excessive, ensure legs are properly attached and the unit is not straining against a thick mixture.

## 8. SPECIFICATIONS

---

- **Brand:** utensil
- **Model Name:** Utensil Stirr
- **Model Number:** ST-012-UT
- **Color:** Grey
- **Product Dimensions:** 5.12"D x 5.12"W x 9.06"H
- **Item Weight:** 5.1 ounces
- **Blade Material:** Nylon
- **Container Material (Body):** Plastic
- **Controls Type:** Push Button
- **Special Feature:** Adjustable Speed Control
- **Power Source:** 4 x AA Batteries (not included)
- **Heat Resistance (Legs):** Up to 120°C (248°F)
- **Dishwasher Safe:** Yes (Nylon Legs only)

## 9. WARRANTY AND SUPPORT

---

For any questions, concerns, or support regarding your Stirr Automatic Pan Stirrer, please contact utensil customer service. Please retain your proof of purchase for warranty claims.

For more information, visit the official utensil website or contact their support channels.