

## Morphy Richards 590000

# Morphy Richards 1.5-Litre Stainless Steel Tea Maker

Model: 590000

## INTRODUCTION

Thank you for choosing the Morphy Richards 1.5-Litre Stainless Steel Tea Maker. This appliance is designed for efficient boiling of water and preparation of tea. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed before operating.
- This appliance is equipped with a 15-ampere plug. Ensure you have a compatible 15-ampere power

outlet available.

## PRODUCT COMPONENTS

---

Your Morphy Richards Tea Maker comes with the following components:

- Tea Maker Unit (Kettle)
- Power Base with Cord
- Instructional Manual (this document)
- Customer Care List
- Guarantee Card
- Separate Tea Strainer



Image: The main tea maker unit, showcasing its stainless steel body and black handle/lid.



Image: The tea maker unit detached from its power base, illustrating the cordless design.



Image: The included separate tea strainer, useful for straining tea leaves.

## SETUP

---

- 1. Unpacking:** Carefully remove all packaging materials from the tea maker and its components.
- 2. Initial Cleaning:** Before first use, fill the tea maker with clean water up to the maximum level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
- 3. Placement:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling where it can be pulled or tripped over.
- 4. Power Connection:** Plug the 15-ampere power cord into a compatible 15-ampere wall outlet.



Image: The power base with its attached 15-ampere power cord.

## OPERATING INSTRUCTIONS

---

### Boiling Water

- Fill the Kettle:** Open the lid and fill the tea maker with the desired amount of fresh water. Do not fill below the minimum mark or above the maximum mark (1.5 litres).
- Close Lid:** Ensure the lid is securely closed.
- Place on Base:** Place the tea maker firmly onto its power base. The 360-degree cordless design allows placement from any angle.
- Power On:** Press the main power switch located at the bottom of the tea maker unit. A red indicator light will illuminate, signifying that the appliance is heating.
- Automatic Shut-off:** The tea maker will automatically switch off once the water has reached boiling point. The red indicator light will turn off.
- Serve:** Carefully lift the tea maker from its base and pour the hot water.



Image: The tea maker with its lid open, ready for filling with water.



Image: Close-up of the main red power switch on the tea maker unit.

## Making Tea (Brew Function)

The tea maker features a dedicated brew function for preparing tea directly in the unit.

- 1. Boil Water:** Follow steps 1-5 from the "Boiling Water" section to boil the desired amount of water.
- 2. Add Ingredients:** Once the water has boiled and the main switch has turned off, open the lid and add your tea leaves, milk, and sugar directly into the tea maker. You may use the internal filter basket or the separate strainer for tea leaves.
- 3. Activate Brew Function:** Close the lid. Locate the secondary brew switch (often a small blue button or switch) on the handle or lid. Press this switch to activate the brewing function. This will keep the water warm and allow the tea to steep.
- 4. Brewing Time:** Allow the tea to brew for your preferred duration.
- 5. Serve:** Once brewing is complete, switch off the brew function. Carefully lift the tea maker from its base and pour the prepared tea.



Image: View of the internal filter basket, designed to hold tea leaves during brewing.



Image: Close-up of the blue brew function switch, used to maintain warmth for tea brewing.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and hygiene of your tea maker.

- Always Unplug:** Before cleaning, always unplug the tea maker from the power outlet and allow it to cool completely.
- Exterior Cleaning:** Wipe the exterior of the tea maker and the power base with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Interior Cleaning (Hand Wash):** The interior of the tea maker should be hand washed. You can use a soft brush or sponge with mild dish soap to clean the inside. Rinse thoroughly with clean water.
- Filter Cleaning:** The internal filter basket can be removed for cleaning. Rinse it under running water to remove any tea leaf residues.
- Descaling:** Over time, mineral deposits (limescale) may build up inside the tea maker, especially in hard water areas. To descale:
  - Fill the tea maker with a mixture of one part white vinegar and two parts water.
  - Boil the solution and let it stand for at least 30 minutes, or longer for heavy deposits.

- Discard the solution and rinse the interior thoroughly several times with fresh water.
- If necessary, repeat the process.

6. **Do Not Immerse:** Never immerse the tea maker unit or its power base in water or any other liquid.

## TROUBLESHOOTING

---

If you encounter any issues with your tea maker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Tea maker does not turn on.	Not plugged in, power outlet faulty, main switch not pressed, kettle not properly seated on base.	Ensure the power cord is securely plugged into a working 15-ampere outlet. Press the main power switch. Ensure the tea maker is correctly placed on its power base.
Water is not boiling.	Insufficient water, lid not closed, descaling needed.	Ensure water level is above the minimum mark. Close the lid securely. Perform descaling if limescale buildup is visible.
Tea maker switches off too quickly.	Limescale buildup.	Perform descaling as per the Maintenance section.
Tea has an unusual taste/smell.	New appliance residue, limescale, improper cleaning.	Perform initial cleaning steps again. Descale the tea maker. Ensure thorough rinsing after cleaning.

If the problem persists after trying these solutions, please contact Morphy Richards customer support.

## SPECIFICATIONS

---

<b>Brand</b>	Morphy Richards
<b>Model Name</b>	590000
<b>Capacity</b>	1.5 Litres
<b>Material</b>	Stainless Steel
<b>Colour</b>	Stainless Steel
<b>Power</b>	1850 Watts
<b>Operating Voltage</b>	230 Volts
<b>Special Feature</b>	Cordless, 360-degree control
<b>Item Weight</b>	1.32 kg (1320 Grams)

<b>Included Components</b>	Tea Maker, Instructional manual, Customer care list, Guarantee card
<b>Product Care Instructions</b>	Hand wash, Wipe clean

## **WARRANTY AND SUPPORT**

---

Your Morphy Richards 1.5-Litre Stainless Steel Tea Maker comes with a **2-year warranty** on the product from the date of purchase.

For any warranty claims, technical assistance, or customer support, please refer to the included "Customer Care List" and "Guarantee Card" for contact details and procedures.

Please retain your purchase receipt as proof of purchase for warranty purposes.

© 2023 Morphy Richards. All rights reserved.