

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Versuni](#) /

› [Philips 7000 Series HR7776/90 Food Processor User Manual](#)

Versuni HR7776/90

Philips 7000 Series HR7776/90 Food Processor User Manual

Model: HR7776/90

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Philips 7000 Series HR7776/90 Food Processor. Please read these instructions carefully before using the appliance and retain them for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the appliance and its functions before use.
- **Sharp blades:** The blades and discs are very sharp. Handle them with extreme care, especially during assembly, disassembly, and cleaning.
- **Electrical safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage. Do not immerse the motor unit in water or any other liquid.
- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Proper assembly:** Ensure all parts are correctly assembled and locked into place before operating the appliance. Do not attempt to operate the appliance if any part is damaged.
- **Avoid overfilling:** Do not exceed the maximum fill levels indicated on the processing bowl or blender jar.
- **Unplug when not in use:** Always unplug the appliance from the power outlet before cleaning, assembling, disassembling, or when not in use.
- **Use original accessories:** Only use accessories and parts recommended by Philips.

PRODUCT OVERVIEW

The Philips HR7776/90 Food Processor is designed for versatile food preparation, featuring a powerful motor

and a range of attachments.



Image: The Philips HR7776/90 Food Processor displayed with its main unit, processing bowl, blender, and various discs and blades, alongside prepared food.

Main Components:

- **Motor Unit:** The base containing the motor and control panel. Equipped with suction cups for stability.
- **Processing Bowl:** Large capacity bowl for chopping, slicing, shredding, and kneading.
- **Lid with Feeding Chute and Pusher:** For safely adding ingredients during operation.
- **S-Blade:** For chopping, mincing, and pureeing.
- **Adjustable Slicing Disc:** For slicing vegetables and fruits to desired thickness.
- **Reversible Shredding/Grating Disc:** For fine or coarse shredding/grating.
- **Kneading Tool:** For preparing dough.
- **Emulsifying Disc:** For whipping cream or egg whites.
- **Blender Jar:** For blending liquids, smoothies, and soups.
- **Citrus Press:** For extracting juice from citrus fruits.



Image: The main motor unit of the Philips HR7776/90 Food Processor with the processing bowl and lid attached, showing the control dial.

Control Panel:

The control panel features a rotary dial with multiple speed settings (1-12) and a pulse function (P) for short bursts of maximum power. The 'OFF' position turns the appliance off.

SETUP

Before first use, wash all detachable parts thoroughly. Ensure the motor unit is placed on a stable, flat, and dry surface. The suction cups on the base will help secure the unit during operation.

Assembly Steps:

1. Place the motor unit on a stable surface.
2. Attach the desired accessory (e.g., S-blade, slicing disc, kneading tool) onto the drive shaft in the processing bowl.
3. Place the processing bowl onto the motor unit and turn it clockwise until it locks into place.
4. Place the lid onto the processing bowl and turn it clockwise until it locks. The appliance will not operate if the lid is not correctly locked.
5. Insert the pusher into the feeding chute.

OPERATING INSTRUCTIONS

Always ensure the appliance is correctly assembled and locked before plugging it in and selecting a speed.

General Operation:

- Prepare ingredients by cutting them into appropriate sizes to fit the feeding chute or bowl.
- Place ingredients into the processing bowl or blender jar.
- Select the desired speed using the rotary dial. For short bursts of power, use the 'P' (Pulse) setting.
- For continuous operation, select a speed from 1 to 12.
- When adding ingredients during operation, use the feeding chute and pusher. Never use your fingers or other utensils to push food down.



Image: A hand demonstrating how to place an apple into the wide feeding chute of the food processor's lid.

Specific Functions:

- **Chopping/Mincing:** Use the S-blade. Process ingredients like onions, garlic, herbs, or meat. For best results, process in short pulses.



Image: Finely chopped red onions on a white plate, illustrating the result of the food processor's chopping function.

- **Slicing:** Use the adjustable slicing disc. Ideal for uniform slices of vegetables like cucumbers, carrots, or potatoes. Adjust the disc for desired thickness.



Image: A variety of vegetables, including tomatoes, eggplant, and zucchini, neatly sliced using the food processor's slicing disc.

- **Shredding/Grating:** Use the reversible shredding/grating disc. Suitable for cheese, carrots, cabbage, etc.



Image: Two bowls containing shredded vegetables, one with bright orange carrots and another with lighter-colored shredded produce, prepared using the shredding disc.

- **Kneading:** Use the kneading tool for doughs. The 3.4-liter bowl capacity allows for processing larger quantities.
- **Blending:** Attach the blender jar for smoothies, soups, and sauces. Ensure the lid is securely closed.



Image: The Philips HR7776/90 Food Processor with its blender attachment fully assembled on the motor unit.

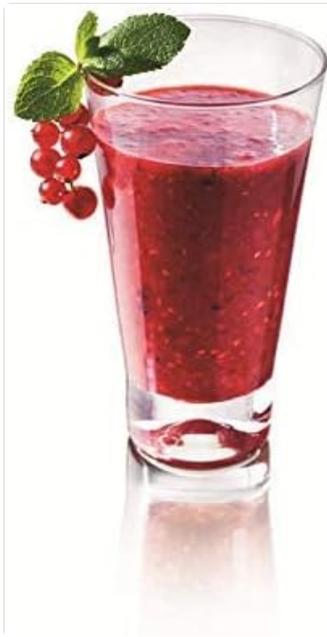


Image: A tall glass filled with a vibrant red smoothie, garnished with fresh red currants and a mint sprig, prepared using the blender attachment.

- **Citrus Press:** Use the citrus press attachment to extract fresh juice from oranges, lemons, and other citrus fruits.



Image: A clear glass of fresh orange juice, garnished with an orange slice and a straw, indicating use of the citrus press attachment.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your food processor.

Cleaning Steps:

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Carefully remove all detachable parts from the motor unit.
3. **Wash detachable parts:** Most detachable parts (bowls, lids, pushers, non-sharp accessories) are

dishwasher safe or can be washed by hand in warm, soapy water. Handle blades and discs with extreme caution due to their sharpness.

4. **Clean motor unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or rinse it under the tap.
5. **Dry thoroughly:** Ensure all parts are completely dry before reassembling or storing.
6. **Storage:** Store the food processor and its accessories in a dry place. The accessories can often be stored within the main bowl to save space.

TROUBLESHOOTING

If you encounter issues with your Philips HR7776/90 Food Processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; bowl/lid not correctly locked; safety interlock engaged.	Ensure power cord is securely plugged in. Check that the processing bowl and lid are correctly assembled and locked into place.
Poor processing results (e.g., uneven chopping).	Ingredients too large; too much food in the bowl; incorrect speed setting.	Cut ingredients into smaller, uniform pieces. Process smaller batches. Use the pulse function for better control or adjust speed.
Appliance stops during operation.	Overload protection activated; motor overheating.	Turn off and unplug the appliance. Remove some ingredients. Let the motor unit cool down for at least 15 minutes before restarting.
Vibration or excessive noise.	Appliance not on a stable surface; uneven load; suction cups not engaged.	Ensure the appliance is on a flat, stable surface. Distribute ingredients evenly. Press down on the motor unit to engage suction cups.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model Number:** HR7776/90
- **Power:** 1300 Watts
- **Bowl Capacity:** 3.4 Liters
- **Number of Speeds:** 12 + Pulse function
- **Material:** Plastic
- **Dimensions (L x W x H):** 25.4 x 28.9 x 43.6 cm
- **Weight:** 5 Kilograms
- **Special Feature:** Adjustable speed control
- **Recommended Uses:** Kneading, Slicing, Mincing, Emulsifying

WARRANTY AND SUPPORT

This Philips appliance typically comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service, please visit the official Philips website or contact their customer support line in your region. When contacting support, have your model number (HR7776/90) and purchase information readily available.