

SANYO VWM-800

Sanyo VWM-800 VHS Stereo VCR Instruction Manual

Model: VWM-800

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Sanyo VWM-800 VHS Stereo VCR. Please read this manual thoroughly before using the unit to ensure proper function and longevity.

1. SETUP AND CONNECTIONS

1.1 Unpacking

Carefully remove the VCR from its packaging. Ensure all components are present. Keep packaging for future transport or storage.

1.2 Rear Panel Overview



Image: Rear view of the Sanyo VWM-800 VHS Stereo VCR. This image displays the various input and output ports, including the power cable connection, coaxial input, and RCA audio/video jacks (red, white, yellow) for connecting to a television or other audio/video equipment.

Familiarize yourself with the rear panel connections. The VCR features standard RCA audio/video output jacks (yellow for video, white for left audio, red for right audio) and a coaxial input/output for antenna or cable connections.

1.3 Connecting to a Television

1. **Power Connection:** Plug the VCR's power cord into a standard electrical outlet.

2. **Audio/Video Connection (RCA):**

- Connect the yellow RCA cable from the VCR's "VIDEO OUT" jack to the "VIDEO IN" jack on your television.
- Connect the white RCA cable from the VCR's "AUDIO L OUT" jack to the "AUDIO L IN" jack on your television.
- Connect the red RCA cable from the VCR's "AUDIO R OUT" jack to the "AUDIO R IN" jack on your television.

Note: If your TV only has a single audio input, use the white (left) audio cable.

3. **Coaxial Connection (Optional):** If you are connecting an antenna or cable directly to the VCR, connect the coaxial cable to the "RF IN" jack on the VCR. Then, connect a second coaxial cable from the VCR's "RF OUT" jack to the "RF IN" jack on your television.

4. **Select Input:** Turn on your television and select the appropriate input source (e.g., AV1, Video 1, HDMI, or TV/Antenna channel 3 or 4 if using coaxial) that corresponds to the VCR's connection.

2. OPERATING INSTRUCTIONS

2.1 Front Panel Controls



Image: Front view of the Sanyo VWM-800 VHS Stereo VCR. This image highlights the VHS tape slot, power button, stop/eject button, channel up/down buttons, and the display panel.

The front panel provides essential controls for basic operation. These include the Power button, Stop/Eject button, Channel Up/Down, and the display for time and tape counter.

2.2 Remote Control Functions



Image: Remote control for the Sanyo VWM-800 VHS Stereo VCR. The remote features buttons for Power, Eject, TV/VCR switching, number pad for channel selection, Play, Stop, Rewind, Fast Forward, Pause, Record, Menu, and volume/channel controls.

The remote control offers comprehensive functionality, including power, channel selection, playback controls (Play, Stop, Rewind, Fast Forward, Pause), recording functions, and menu navigation.

2.3 Playing a VHS Tape

1. Ensure the VCR is powered on and the correct input is selected on your TV.
2. Insert a VHS tape into the tape slot on the front of the VCR. The VCR will automatically pull the tape in.

3. The VCR may begin playing automatically. If not, press the **PLAY** button on the VCR's front panel or the remote control.
4. Use the **REW** (Rewind), **FFWD** (Fast Forward), **PAUSE**, and **STOP** buttons for tape control.
5. To eject the tape, press the **EJECT** button on the VCR or remote.

2.4 Recording on VHS

The Sanyo VWM-800 supports recording. Ensure a blank or recordable VHS tape is inserted. Refer to the on-screen display menu (accessible via the remote's **MENU** button) for timer recording setup or press the **REC** button for instant recording.

3. MAINTENANCE

3.1 General Cleaning

Keep the exterior of the VCR clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the finish or internal components.

3.2 Head Cleaning

Over time, dust and debris can accumulate on the VCR's video heads, leading to degraded picture and sound quality. Use a dry-type VHS head cleaner tape periodically to maintain optimal performance. Follow the instructions provided with the head cleaner tape.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cord unplugged; Power outlet not working.	Check power cord connection; Try a different outlet.
No Picture/Sound	Incorrect TV input selected; A/V cables loose or incorrectly connected.	Select correct TV input (e.g., AV1, Video 1, HDMI, or TV/Antenna channel 3 or 4 if using coaxial); Ensure A/V cables are securely connected to the correct jacks.
Poor Picture Quality (Snowy/Distorted)	Dirty video heads; Damaged VHS tape.	Use a VHS head cleaner tape; Try a different tape to confirm if the issue is with the tape or VCR.
Tape Not Ejecting	Mechanism jam; Power issue.	Ensure VCR is powered on; Gently try pressing EJECT multiple times. If persistent, seek professional service.

5. SPECIFICATIONS

Brand: SANYO

Model: VWM-800

Type: VHS Stereo VCR

Features: Hi-Fi Stereo, 4-Head

Item Weight: 9.8 pounds

Package Dimensions: 19.9 x 12.6 x 6.5 inches

ASIN: B008PDQSTG

Date First Available: July 26, 2012

6. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact SANYO customer service. Specific warranty terms may vary based on region and retailer.