

manuals.plus /

› [Hörmann](#) /

› [Hörmann HS5 868-BS SW-Europa Handheld Transmitter Instruction Manual](#)

**Hörmann 436753**

# Hörmann HS5 868-BS SW-Europa Handheld Transmitter User Manual

## 1. PRODUCT OVERVIEW

---

The Hörmann HS5 868-BS SW-Europa is a portable handheld transmitter designed for controlling various compatible devices such as garage door openers, lights, smart home systems, and fans. This white remote control features five buttons, including four detection functions and an additional detection sensor, providing versatile control within a maximum range of 10 meters. It operates using high-frequency connectivity and is powered by a single CR2032 lithium-ion battery.



Figure 1.1: Front view of the Hörmann HS5 868-BS SW-Europa Handheld Transmitter, showcasing its white casing and button layout.



Figure 1.2: Side view of the Hörmann HS5 868-BS SW-Europa Handheld Transmitter, highlighting its slim profile.



Figure 1.3: Angled view of the Hörmann HS5 868-BS SW-Europa Handheld Transmitter, showing the top and side details.

## 2. SPECIFICATIONS

| Feature                 | Description                      |
|-------------------------|----------------------------------|
| Brand                   | Hörmann                          |
| Model Number            | 436753                           |
| Model Name              | 728023                           |
| Color                   | Multicolor (primarily white)     |
| Connectivity Technology | High Frequency                   |
| Compatible Devices      | Lights, Smart Home systems, Fans |
| Battery Composition     | Lithium-ion                      |
| Number of Batteries     | 1 CR2032 (included)              |
| Number of Buttons       | 4 (plus detection sensor)        |

| Feature           | Description    |
|-------------------|----------------|
| Controller Type   | Button Control |
| Maximum Range     | 10 Meters      |
| Manufacturer      | Hörmann        |
| Country of Origin | Germany        |

## 3. SETUP

---

### 3.1 Battery Installation

The Hörmann HS5 868-BS handheld transmitter comes with a CR2032 battery included. If the battery needs to be installed or replaced, follow these steps:

1. Locate the battery compartment cover on the back or side of the transmitter. This may require a small screwdriver or a coin to open.
2. Carefully remove the cover.
3. Insert the CR2032 battery with the positive (+) side facing up, ensuring it is seated correctly in the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

### 3.2 Pairing with a Receiver

To use your Hörmann HS5 868-BS transmitter, it must be paired with a compatible Hörmann receiver (e.g., a garage door opener). The exact pairing procedure may vary depending on your receiver model. Refer to the instruction manual of your Hörmann receiver for detailed pairing instructions. Generally, the process involves:

- Activating the learning mode on your receiver (often by pressing a 'Learn' or 'Program' button).
- Pressing a button on your new Hörmann HS5 868-BS transmitter within a specific timeframe.
- Confirming successful pairing, usually indicated by a light or sound from the receiver.

## 4. OPERATING INSTRUCTIONS

---

The Hörmann HS5 868-BS transmitter features four primary function buttons and an additional detection sensor. Each button can be programmed to control a specific function on your paired device.

### 4.1 Button Functions

- **Main Buttons (4):** These buttons are typically used to open/close garage doors, turn lights on/off, or activate other smart home functions. The specific function of each button is determined during the pairing process with your receiver.
- **Detection Sensor:** This additional sensor function may be used for specific applications, such as activating a light when motion is detected, or for advanced security features. Refer to your receiver's manual for details on how this sensor integrates with your system.

### 4.2 Operating Range

The transmitter has a maximum operating range of 10 meters. This range can be affected by environmental factors such as walls, other electronic devices, and radio interference. For optimal performance, ensure a clear line of sight between the transmitter and the receiver, if possible.

## 5. MAINTENANCE

---

### 5.1 Battery Replacement

When the transmitter's range decreases significantly or the indicator light (if present) no longer illuminates, it is likely time to replace the battery. Use a new CR2032 lithium-ion battery. Follow the steps outlined in Section 3.1 Battery Installation.

### 5.2 Cleaning

To clean the transmitter, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the device. Keep the transmitter free from dust and dirt to ensure proper button function.

### 5.3 Storage

Store the transmitter in a dry place, away from extreme temperatures and direct sunlight. Avoid dropping the device or subjecting it to strong impacts.

## 6. TROUBLESHOOTING

---

If you experience issues with your Hörmann HS5 868-BS handheld transmitter, consider the following common troubleshooting steps:

- **Transmitter Not Responding:**

- Check the battery. Replace it if it's old or depleted (refer to Section 5.1).
- Ensure the transmitter is within the 10-meter operating range of the receiver.
- Verify that the transmitter is correctly paired with your receiver (refer to Section 3.2). You may need to re-pair it.

- **Reduced Operating Range:**

- Replace the battery. A weak battery can significantly reduce range.
- Check for sources of interference (e.g., other wireless devices, large metal objects) between the transmitter and receiver.
- Ensure there are no physical obstructions blocking the signal path.

- **Buttons Not Functioning Correctly:**

- Ensure the buttons are not stuck or obstructed by debris.
- Re-pair the transmitter with the receiver to re-establish button assignments.

If these steps do not resolve the issue, contact Hörmann customer support or a qualified technician.

## 7. WARRANTY AND SUPPORT

---

Specific warranty information for the Hörmann HS5 868-BS SW-Europa handheld transmitter is not provided in the product data. For details regarding warranty coverage, duration, and claims, please refer to

the documentation included with your purchase or visit the official Hörmann website. For technical support or further assistance, please contact Hörmann customer service directly.

**Manufacturer:** Hörmann

**Website:** [www.hoermann.com](http://www.hoermann.com) (Please check for your regional Hörmann website)