

[Manuals.plus](#) /

› [T-Fal](#) /

› T-Fal MB750G36 Fresh Express Food Processor Grater and Slicer Instruction Manual

T-Fal MB750G36

T-Fal MB750G36 Fresh Express Food Processor Grater and Slicer Instruction Manual

INTRODUCTION

The T-Fal MB750G36 Fresh Express is a compact kitchen appliance designed to simplify food preparation by grating and slicing various ingredients quickly and efficiently. This manual provides essential information for the safe and effective use, maintenance, and care of your Fresh Express.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions thoroughly before operating the appliance.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Always use the food pusher to guide ingredients.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments and accessories recommended or sold by the manufacturer.
- Ensure the appliance is placed on a stable, flat, and dry surface during operation.

COMPONENTS

The T-Fal Fresh Express MB750G36 includes the following main components:

- **Motor Unit:** The main body containing the motor.
- **Feeding Tube:** Where ingredients are inserted.
- **Pusher:** Used to guide food into the cones.
- **5 Cone Attachments:** Various cones for different grating and slicing tasks.
- **Output Chute:** Where processed food exits the appliance.



This image displays the various cone attachments for the T-Fal Fresh Express, along with examples of finely grated carrots and uniformly sliced cucumbers, demonstrating the appliance's capabilities.



This image illustrates how the different colored cone attachments of the T-Fal Fresh Express can be neatly stacked for compact storage.

SETUP

1. Place the motor unit on a clean, dry, and stable countertop.
2. Attach the feeding tube securely to the motor unit. Ensure it clicks into place.
3. Select the desired cone attachment for your task (e.g., fine grating, coarse grating, thin slicing, thick slicing). Insert the cone into the feeding tube, ensuring it is properly seated.

4. Place the pusher into the feeding tube, but do not press down.
5. Ensure the appliance is unplugged before connecting to power.

OPERATING INSTRUCTIONS

1. After setup, plug the appliance into a suitable electrical outlet.
2. Place a bowl or container directly under the output chute to collect the processed food.
3. Prepare your ingredients by cutting them into pieces that fit comfortably into the feeding tube.
4. Insert the food into the feeding tube.
5. Press the power button to start the appliance.
6. Using the pusher, gently guide the food down into the rotating cone. **Do not use your fingers or any other utensil to push food.**
7. Continue feeding ingredients until all food is processed.
8. Once finished, release the power button and unplug the appliance from the outlet.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your Fresh Express.

1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: the feeding tube, pusher, and cone attachments.
3. The cone attachments, feeding tube, and pusher are dishwasher safe for easy cleaning. Alternatively, wash them by hand in warm, soapy water and rinse thoroughly.
4. Wipe the motor unit with a damp cloth. **Never immerse the motor unit in water or other liquids.**
5. Do not use abrasive cleaning agents, scouring pads, or harsh chemicals, as these can damage the surfaces.
6. Ensure all parts are completely dry before reassembling or storing.

STORAGE

Store your T-Fal Fresh Express in a clean, dry place when not in use.

- Ensure all components are clean and dry before storage.
- The cone attachments can be neatly stacked on the appliance for compact storage.
- Store the appliance away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Appliance not turning on:** Check if the power cord is securely plugged into a working outlet. Ensure all parts are correctly assembled and locked into place.
- **Food not processing correctly:** Verify that the chosen cone attachment is properly inserted. Ensure ingredients are cut to an appropriate size for the feeding tube. Do not overload the appliance.
- **Motor stops during operation:** The appliance may have an overload protection feature. Unplug the unit, remove any jammed food, wait a few minutes for the motor to cool down, then plug it back in and restart.

SPECIFICATIONS

- **Brand:** T-Fal
- **Manufacturer:** Tefal
- **Model:** MB750G36
- **ASIN:** B008PQITPE

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact T-Fal customer service. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B008PQITPE>

More documents and user manuals: <https://manuals.plus/>