

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [DELSEY PARIS](#) /

› DELSEY PARIS Helium Aero Hardside Expandable Luggage Model 07647PL Instruction Manual

DELSEY PARIS 07647PL

DELSEY PARIS Helium Aero Hardside Expandable Luggage

MODEL: 07647PL (CHECKED-MEDIUM 24 INCH)

Instruction Manual

INTRODUCTION

Welcome to your new DELSEY PARIS Helium Aero Hardside Expandable Luggage. This manual provides essential information for the setup, operation, and maintenance of your suitcase. Please read thoroughly to ensure optimal use and longevity of your product.

KEY FEATURES

- **Lightweight and Durable Shell:** Constructed from 100% polycarbonate, offering extreme resilience against cracking or breaking, finished with an eye-catching deep metallic sheen.
- **Smooth Mobility:** Equipped with four double spinner wheels for stable, multi-directional rolling, ensuring effortless movement with zero weight on your hand.
- **Integrated Security:** Features an integrated 3-dial TSA-accepted combination lock for enhanced security, allowing only TSA agents to access your belongings during travel.
- **Expandable Capacity:** The suitcase expands by up to 2 inches, providing additional packing space for your travel needs.
- **Organized Interior:** Includes two large, fully-lined compartments with web straps to keep items secure and wrinkle-free. Multiple pockets offer easy access and organization.
- **Comfortable Handling:** Recessed 'one-button' locking handle for great maneuverability, complemented by soft-touch top and side carry handles.



TSA-accepted combination lock



Lightweight and durable polycarbonate



Double spinner wheels

Front view of the luggage, illustrating the TSA-accepted combination lock, lightweight polycarbonate material, and double spinner wheels.

SETUP

1. Unpacking

Carefully remove all packaging materials and any protective films from the exterior of your luggage.

2. Setting the TSA Combination Lock

Your luggage comes with an integrated 3-dial TSA-accepted combination lock, preset to 0-0-0. To set your personal combination:

1. Ensure the dials are set to the factory preset 0-0-0.
2. Locate the small reset button (usually recessed) next to the dials. Use a pen or pointed object to push and hold this button until you hear a click.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. Push the main latch button (where the zipper pullers are inserted) firmly until you hear a click. Your new combination is now set.
5. It is crucial to remember your combination. Do not write it down on the luggage.



A detailed view of the integrated TSA combination lock, showing the dials and release mechanism.

OPERATION

1. Extending the Handle

To extend the telescopic handle, press the 'one-button' release located on the handle grip and pull the handle upwards. It will lock into position at various heights for your comfort. To retract, press the button again and push the handle down.

2. Using Spinner Wheels

Your luggage is equipped with four double spinner wheels designed for multi-directional movement. This allows the suitcase to glide smoothly in any direction, providing effortless maneuverability and reducing strain on your arm.





A close-up image of the durable double spinner wheels, designed for 360-degree rotation.

3. Expanding the Luggage

To utilize the expandable feature, locate the secondary zipper running along the perimeter of the suitcase. Unzip this section to increase the luggage's depth by approximately 2 inches, providing additional space for your belongings.

Expandable
compartment



Mesh divider and
tie-down straps



Soft-touch top and
side carry handles



Side profile of the luggage, illustrating the expandable zipper that increases internal capacity.

4. Internal Organization

The interior features two large, fully-lined packing compartments. Use the adjustable web straps to compress and secure your clothes, minimizing movement and wrinkles. A zippered mesh divider panel separates the two main compartments, and additional pockets are available for smaller items and accessories.





The interior of the suitcase, displaying the two main packing compartments, adjustable web straps, and a zippered mesh divider for organization.

Official Product Video: DELSEY Paris Helium Aero Hardside Expandable Luggage

This video provides an overview of the DELSEY Paris Helium Aero Hardside Expandable Luggage, showcasing its features such as the handle, spinner wheels, and interior compartments.

Official Product Video: DELSEY Paris Checked-Medium, Brushed Charcoal

A short product video demonstrating the DELSEY Paris Checked-Medium luggage in Brushed Charcoal, highlighting its design and functionality.

CARE AND MAINTENANCE

1. Cleaning the Exterior

To clean the polycarbonate exterior, wipe with a soft, damp cloth and a mild soap solution. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish. For stubborn marks, a gentle plastic cleaner may be used.

2. Cleaning the Interior

The interior lining can be spot cleaned with a damp cloth and a small amount of mild detergent. Ensure the interior is completely dry before closing the luggage to prevent mildew or odors.

3. Wheel Care

Periodically inspect the spinner wheels for any accumulated dirt, hair, or debris. Clean the wheels and their housings as needed to maintain smooth and effortless rolling performance.

TROUBLESHOOTING

1. Scratches and Scuffs

The glossy finish of hardside luggage can show cosmetic scratches and scuffs from normal handling during travel. These are typically superficial and do not compromise the structural integrity or durability of the suitcase. For minor scuffs, a soft cloth with a small amount of non-abrasive polish or a specialized plastic cleaner may help reduce their appearance.

2. Telescopic Handle Issues

If the telescopic handle becomes stiff, sticky, or extends unevenly, ensure no debris is lodged in the mechanism. Try fully extending and retracting the handle several times. Avoid forcing the handle, as this may cause damage.

3. Zipper Malfunctions

If a zipper becomes difficult to operate or snags, check for any fabric or foreign objects caught in the zipper teeth. Gently pull the fabric away from the zipper path. Applying a small amount of zipper lubricant (e.g., wax or silicone spray) can also improve smoothness. When closing the expandable section, ensure the internal fabric gussets are properly aligned to prevent catching.

SPECIFICATIONS

Property	Value
Product Dimensions	18 x 11.75 x 27.5 inches
Item Weight	10.2 pounds
Department	unisex-adult
Manufacturer	Delsey Luggage, Inc.
ASIN	B008PSWVD8
Item model number	07647PL

Capacity	89 Liters
----------	-----------

WARRANTY AND SUPPORT

DELSEY PARIS offers a limited warranty on its luggage products, covering manufacturing defects. For specific warranty terms, conditions, and to register your product or initiate a support claim, please visit the official DELSEY PARIS website. You can also find contact information for customer service there.

CONTACT INFORMATION

For further assistance, product registration, or to view additional products, please visit the official DELSEY PARIS website: [DELSEY PARIS Store on Amazon](#).