

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fujifilm](#) /

› [Fujifilm FinePix C25 Digital Camera User Manual](#)

Fujifilm FinePix C25

Fujifilm FinePix C25 Digital Camera User Manual

Model: FinePix C25

INTRODUCTION

The Fujifilm FinePix C25 is a compact digital camera designed for ease of use, allowing users to capture high-quality images with minimal effort. Featuring a 12-megapixel CCD sensor and a Fujinon 3x optical zoom lens, it delivers clear, high-resolution photographs. The camera includes a 2.4-inch TFT color LCD monitor for convenient viewing and navigation.

Key features include HD capability, Automatic Scene Recognition, Face Detection, and high ISO sensitivity levels, which contribute to capturing memorable moments in both still images and video. The camera also supports white balancing, digital image stabilization, and uses SD/SDHC memory cards for storage. A built-in flash and self-timer enhance its versatility.

WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are present:

- Fujifilm FinePix C25 Digital Camera
- 2 x AA Batteries
- USB Cable
- User Information Guide (this manual)

SETUP

1. Inserting Batteries

The camera operates on 2 AA batteries. Ensure correct polarity when inserting them into the battery compartment. The camera supports Alkaline and Lithium Ion battery types.



Image showing the front of the Fujifilm FinePix C25 digital camera, highlighting its compact design and lens. This is where the battery compartment is typically located on the underside or side.

2. Inserting a Memory Card

The FinePix C25 uses SD or SDHC memory cards for storing photos and videos. Locate the memory card slot, typically near the battery compartment, and insert the card until it clicks into place. Ensure the card is inserted in the correct orientation.

- **Supported Card Types:** SD, SDHC

3. Initial Power On

After inserting batteries and a memory card, press the power button to turn on the camera. Follow any on-screen prompts for initial setup, such as setting the date and time.

OPERATING THE CAMERA

Basic Photography

1. **Turn On:** Press the power button. The 2.4-inch LCD screen will activate.
2. **Select Mode:** Use the mode dial or menu to select your desired shooting mode. The camera features various scene modes and automatic exposure control.
3. **Frame Your Shot:** Use the LCD monitor or optical viewfinder to compose your image.
4. **Focus:** The camera uses Contrast Detection Autofocus. Half-press the shutter button to focus. The focus indicator will confirm when focus is achieved.
5. **Capture:** Fully press the shutter button to take a picture. The camera captures 12-megapixel still images with a JPEG Fine quality level.

Zoom Function

The FinePix C25 is equipped with a Fujinon 3x optical zoom lens, allowing you to magnify distant subjects without losing image quality. It also features a 6.3x digital zoom for further magnification, though this may reduce image clarity.

- **Optical Zoom:** 3x
- **Digital Zoom:** 6.3x

Using the Flash

The camera has a built-in flash with automatic flash modes. The flash will automatically fire in low-light conditions when set to auto mode. You can also manually select flash modes via the camera's menu.

Recording Videos

To record video, switch the camera to movie mode. The camera captures video at 640 x 480 pixels resolution in AVI format. Press the shutter button to start and stop recording.

- **Video Resolution:** 640 x 480 pixels
- **Video Format:** AVI

Image Playback

Press the playback button (usually indicated by a triangle icon) to review your captured photos and videos on the 2.4-inch LCD screen.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens with your fingers.
- **Cleaning the Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use solvents or alcohol.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **Storage:** Store the camera in a dry, dust-free environment, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

| Problem | Solution |
|--------------------------|--|
| Camera does not turn on. | Check if batteries are inserted correctly and fully charged. Replace with fresh batteries if necessary. Ensure the battery compartment is securely closed. |
| Cannot take pictures. | Ensure a memory card is inserted and has sufficient free space. Check if the lens cap is removed. Verify that the camera is not in playback mode. |
| Images are blurry. | Ensure the lens is clean. Half-press the shutter button to allow the camera to focus before fully pressing. Use digital image stabilization in shaky conditions. |
| Flash does not fire. | Check flash settings; it might be set to "Flash Off" or "Red-eye Reduction" mode. Ensure the subject is within the flash's effective range. |

| Problem | Solution |
|---------|----------|
|---------|----------|

| | |
|--------------------|---|
| Memory card error. | Reinsert the memory card. Try a different compatible SD/SDHC card. Format the card (<i>note: this will erase all data</i>). |
|--------------------|---|

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|------------------------------|
| Model Name | FinePix C25 |
| Brand | Fujifilm |
| Photo Sensor Resolution | 12 MP |
| Sensor Type | CCD |
| Optical Zoom | 3x |
| Digital Zoom | 6.3x |
| Lens Type | Fujinon 3X optical zoom lens |
| Image Stabilization | Digital |
| Display Type | LCD |
| Screen Size | 2.4 Inches |
| Supported File Format (Stills) | JPEG |
| Supported File Format (Video) | AVI |
| Video Capture Resolution | 640 x 480 pixels |
| Flash Type | Built-In |
| Memory Card Slots | SD, SDHC |
| Battery Type | AA (Alkaline, Lithium Ion) |
| Item Weight | 128 Grams |
| Maximum Shutter Speed | 2000 Seconds |
| Minimum Shutter Speed | 4 Seconds |
| Exposure Control | Automatic |
| Auto Focus Technology | Contrast Detection |

| Feature | Detail |
|--------------|--------------|
| Connectivity | USB (1 port) |

WARRANTY AND SUPPORT

For warranty information and technical support regarding your Fujifilm FinePix G25 camera, please refer to the official Fujifilm website or contact their customer service directly. Details are typically provided in the separate warranty card included with your product or available on the manufacturer's support pages.

Manufacturer: FUJIFILM