

REVLON RVDR5036EME

Revlon Volume Booster Hair Dryer 1875W (Model RVDR5036EME) Instruction Manual

Your guide to safe and effective use of your Revlon hair dryer.

1. IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
- Do not wrap the electrical cord around the appliance while not in use or during storage.
- Always unplug the appliance immediately after using.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Revlon Volume Booster Hair Dryer is designed to provide voluminous lift and body with efficient drying. It features advanced Ionic Technology to reduce frizz and enhance shine.



Image 2.1: Revlon Volume Booster Hair Dryer with its included diffuser attachment. The dryer is green with black accents.

Key Features:

- **1875 Watts:** Provides powerful airflow for fast drying.
- **Ionic Technology:** Helps maintain a neutral charge on the hair's surface, reducing frizz and static for smooth, shiny hair.
- **3 Heat / 2 Speed Settings:** Offers complete drying and styling flexibility for various hair types and desired styles.
- **Cool Shot Button:** Releases cool air to set your hairstyle for long-lasting results.
- **Volumizing Finger Diffuser:** Softens airflow to define natural curls and waves, adding volume.
- **Soothing Concentrator:** Directs airflow for precise styling and smoothing.
- **Removable End Cap:** Allows for easy cleaning and maintenance of the air filter.
- **Hanging Ring:** For convenient storage.



Image 2.2: Labeled diagram showing the Smoothing Concentrator, Cold Shot Button, Diffuser, 3 Heat / 2 Speed Settings, Removable End Cap, and Hanging Ring on the Revlon hair dryer.

3. SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Plug In:** Ensure the power switch is in the "OFF" position. Plug the power cord into a standard electrical outlet.
4. **Attach Accessories (Optional):**
 - **Concentrator:** For precise drying and smoothing, attach the concentrator nozzle to the front of the dryer.
 - **Diffuser:** For enhancing natural curls and adding volume, attach the diffuser to the front of the dryer.

4. OPERATING INSTRUCTIONS

Follow these steps for effective hair drying and styling:

1. **Prepare Hair:** Towel-dry your hair to remove excess moisture. For best results, apply a heat protectant or styling product.

2. Select Settings:

- Use the **Heat Switch** (HOT, WARM, COOL) to select your desired temperature.
- Use the **Speed Switch** (HIGH, LOW, OFF) to select your desired airflow intensity.



Image 4.1: Close-up view of the heat (Hot, Warm, Cool) and speed (High, Low, Off) selector switches on the Revlon hair dryer handle.

3. Begin Drying:

- For general drying, use a higher heat and speed setting.
- For styling with a brush, use the concentrator attachment and direct airflow as you brush.
- For curls and volume, use the diffuser attachment. Gently cup sections of hair in the diffuser bowl and lift towards the scalp. Use a low speed and warm heat setting to avoid disturbing the curl pattern.

4. **Set Style:** Once your hair is dry and styled, press and hold the **Cool Shot Button** to blast cool air over your hair. This helps to close the hair cuticles, locking in your style and adding shine.

5. **Finish:** Turn the dryer off by setting the Speed Switch to "OFF" and unplug the appliance from the outlet.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

1. Cleaning the Air Filter:

- Ensure the hair dryer is unplugged and completely cool.

- Twist or pull off the removable end cap (rear filter cover).
 - Gently clean any accumulated lint or hair from the filter screen using a soft brush or cloth.
 - Replace the end cap securely.
2. **General Cleaning:** Wipe the exterior of the dryer with a damp cloth. Do not use abrasive cleaners or solvents.
 3. **Storage:** Store the appliance in a cool, dry place. Do not wrap the electrical cord tightly around the appliance, as this can damage the cord. Use the hanging ring for convenient storage.

6. TROUBLESHOOTING

If you encounter issues with your Revlon Volume Booster Hair Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in, power outlet issue, or internal safety cut-off activated.	Ensure the dryer is securely plugged into a working outlet. Check your circuit breaker. If the dryer overheated, unplug it and allow it to cool for 10-15 minutes before trying again.
Weak airflow.	Blocked air intake filter.	Unplug the dryer and clean the removable rear air filter as described in the Maintenance section.
Dryer overheats or shuts off during use.	Blocked air intake/outlet, or prolonged use.	Unplug the dryer immediately. Clean the air filter. Allow the dryer to cool down completely before resuming use. Ensure vents are not blocked during operation.
Hair is still frizzy.	Incorrect technique or product use.	Ensure you are using the Ionic Technology benefits by not over-drying. Use the Cool Shot button to set the style. Consider using anti-frizz styling products.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model Number:** RVDR5036EME
- **Power:** 1875 Watts
- **Power Source:** Corded Electric
- **Material:** Ceramic
- **Color:** Green
- **Product Dimensions:** 4 x 11.1 x 9.1 inches
- **Item Weight:** 1.68 Pounds
- **UPC:** 761318350361
- **Manufacturer:** Helen of Troy

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Revlon Hair Tools website. Keep your purchase receipt as proof of purchase.

Online Support: www.revlon.com/hair-tools

© 2025 REVLON. All rights reserved. Model RVDR5036EME.