

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER dustbuster 20V Cordless Handheld Vacuum BDH2000L User Manual

BLACK+DECKER BDH2000L

BLACK+DECKER dustbuster 20V Cordless Handheld Vacuum BDH2000L User Manual

Model: BDH2000L

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER dustbuster 20V Cordless Handheld Vacuum, model BDH2000L. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and retain it for future reference.



Image 1: The BLACK+DECKER dustbuster 20V Cordless Handheld Vacuum, model BDH2000L.

2. IMPORTANT SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock,

and personal injury. This appliance is for household use only.

- Do not use the appliance to pick up liquids, flammable or combustible materials, or anything that is burning or smoking.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the appliance if the charger cord or plug is damaged.
- Ensure the appliance is switched OFF before charging.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW AND COMPONENTS

The BDH2000L dustbuster is designed for quick and efficient clean-ups. It features a powerful 20V MAX* lithium-ion battery for strong suction and cordless convenience.

Included Components:

- BDH2000L Hand Vacuum
- Charging Dock
- Flip-up Brush
- Washable Filter (VF110)

Includes:



**Washable Filter
(VF110)**



**Built-in
Flip-up Brush**



**Extendable
Crevice Tool**



Charging base



Image 2: The vacuum comes with a washable filter (VF110), built-in flip-up brush, extendable crevice tool, and a charging base.

Key Features:

- **Lightweight Design:** Easy to handle and maneuver.
- **Washable Dustbowl:** Translucent and easy to empty and clean.
- **180° Rotating Slim Nozzle:** For accessing tight and hard-to-reach spaces.
- **Built-in Flip-up Brush:** Integrated for versatile cleaning.
- **Pull-out Crevice Tool:** Extendable for enhanced reach.
- **Cyclonic Action:** Helps keep the filter clean and maintains strong suction power.



*Source: Circana Group/Retail Tracking Service,
U.S. unit sales, 12 months ending October 2023

dustbuster®

Image 3: Diagram highlighting the lightweight design, washable dustbowl, pull-out crevice tool, 180° rotating slim nozzle, and built-in flip-up brush.

4. SETUP AND CHARGING

Initial Charging:

1. Place the hand vacuum onto the charging dock. Ensure the vacuum is switched to the "OFF" position.
2. Plug the charging dock into a standard electrical outlet.
3. Allow the vacuum to charge for approximately 4 hours for a full charge before first use. The charging indicator light will illuminate during charging.

The charging base provides convenient storage and ensures your vacuum is always ready for use.



One-touch
easy empty, wash and go

Image 4: The vacuum resting on its charging base for convenient storage and power replenishment.



Image 5: The vacuum charging on its base, indicating fast charging capability.

5. OPERATING INSTRUCTIONS

Powering On/Off:

To turn the vacuum on, slide the power switch to the "ON" position. To turn it off, slide the switch back to the "OFF" position.

Using Attachments:

- **Rotating Slim Nozzle:** The nozzle can rotate to help you clean tight, hard-to-reach spaces. To rotate, press the button shown in Figure M (from the provided image) and rotate the nozzle to the left or right until it clicks into place.
- **Extendable Crevice Tool:** A crevice tool is built into the nozzle and can be extended for increased reach. Pull the extension piece until it locks into position (refer to Figure K from the provided image).
- **Flip-up Brush:** A brush accessory is built into the nozzle and can be flipped upwards for use (refer to Figure L from the provided image). This is ideal for upholstery and delicate surfaces.



**On-board flip-up brush and
extendable crevice tool
for quick mess clean-up**

Image 6: Demonstrates the on-board flip-up brush and extendable crevice tool for quick mess clean-up.



Flip up brush



**Extendable
crevice tool**

Image 7: Detailed view showing how to deploy the flip-up brush and extendable crevice tool.



*Source: Circana Group/Retail Tracking Service,
U.S. unit sales, 12 months ending October 2023

Image 8: The vacuum effectively cleaning up pet food on a hard surface.



**Portable, rechargeable,
lightweight vacuum
for around the home**

Image 9: The long reach slim nozzle is used for cleaning in tight spaces.



Long reach slim nozzle for cleaning in tight spaces

Image 10: The portable, rechargeable, and lightweight vacuum is suitable for use around the home, such as on furniture.

6. MAINTENANCE

Emptying the Dustbowl:

The translucent dustbowl allows you to see when it needs emptying. To empty, simply detach the bowl from the main unit and dispose of the contents. This is a one-touch process for ease of use.



Charging base for convenient storage

Image 11: Demonstrates the one-touch easy empty feature and how to wash the dustbowl and filter.

Cleaning the Filter and Dustbowl:

Both the dustbowl and the filter (VF110) are washable. After emptying the dustbowl, you can wash it thoroughly with mild soap and a damp cloth. The filter can also be rinsed under running water. Ensure both are completely dry before reassembling them into the vacuum.

Replacing the Filter:

The filters should be replaced every 6 to 9 months, or whenever they appear worn or damaged. Replacement filters (VF110) are available from BLACK+DECKER dealers. To replace, remove the old filter as described above and fit the new filter into place.

7. TROUBLESHOOTING

If your product does not work, check the following:

- Ensure the charger is correctly plugged in for recharge. (The charger may feel slightly warm to the touch during operation, which is normal).

- Verify that the charger cord is not damaged and is securely attached.
- Confirm the charger is plugged into a working electrical outlet.
- Make sure the vacuum's switch is in the "OFF" position when charging.

For assistance with your product, visit the BLACK+DECKER website or call their support line at 1-800-544-6986.

Nozzle / Accessories

- **Figure K** - A crevice tool is built into the nozzle and can be extended as shown in **figure K** by pulling the extension piece until it locks into position.
- **Figure L** - A brush accessory is built into the nozzle and can be flipped upwards for use.
- **Figure M** - The nozzle can be rotated for better access in tight spots. To rotate the nozzle, press the button shown in **figure M** and rotate the nozzle to the left or right until it clicks into place.

Replacing the filters

The filters should be replaced every 6 to 9 months and whenever worn or damaged. Replacement filters are available from your BLACK+DECKER dealer.

Visit www.blackanddecker.com to locate dealers.

- Remove the old filters as described above.
- Fit the new filters as described above.

Maintenance

Bowls and filters can be washed thoroughly; however, use only mild soap and a damp cloth to clean the main part of the vacuum.

IMPORTANT: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (other than those listed in this manual) should be performed by authorized service centers or other qualified service personnel, always using identical replacement parts.

Troubleshooting

If the product does not work, check the following:

- The charger was correctly plugged in for recharge. (It feels slightly warm to the touch.)
- The charger cord is not damaged and is correctly attached.
- The charger is plugged into a working electrical outlet.
- The switch is in the "OFF" position when charging.

For assistance with your product, visit our website www.blackanddecker.com for the location of the service center nearest you or call the BLACK+DECKER help line at **1-800-544-6986**.

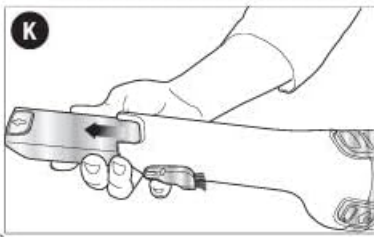 
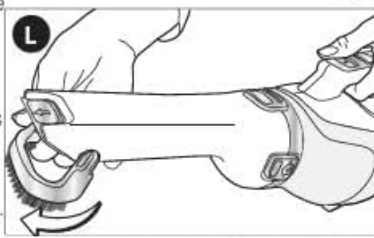 
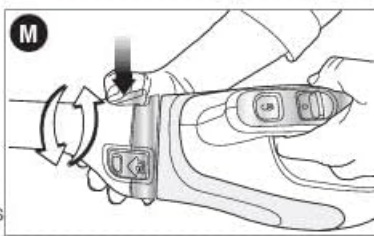 




Image 12: Excerpt from the original manual showing instructions for nozzle/accessories (K, L, M), filter replacement, maintenance, and troubleshooting.

8. SPECIFICATIONS

Brand	BLACK+DECKER
Model Name	BDH2000L
Special Feature	Cordless, Compact
Filter Type	Cloth (VF110)
Included Components	BDH2000L Hand Vacuum, Charging Dock, Flip-up Brush, Washable Filter (VF110)
Power Source	Battery Powered (20V MAX* Lithium-Ion)
Capacity	1.3 Pounds
Wattage	24 watts
Charging Time	4 Hours

Product Dimensions	14.5"L x 5.56"W x 8.13"H
Item Weight	3.5 pounds
Noise Level	80 dB
Manufacturer	Stanley Black & Decker
UPC	885911297066

*Maximum initial battery voltage (measured without a workload) is 20 volts. Nominal voltage is 18.

9. WARRANTY AND SUPPORT

Warranty Information:

This BLACK+DECKER product is covered by a **2-year limited warranty**. This warranty covers defects in material or workmanship. For full warranty details, please refer to the official BLACK+DECKER website or contact customer support.

Customer Support:

For product support, replacement parts, or warranty claims, please contact BLACK+DECKER customer service:

- **Phone:** 1-800-544-6986
- **Website:** www.blackanddecker.com

When contacting support, please have your model number (BDH2000L) and purchase information ready.