

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Acctim](#) /

› [Acctim 14357 Pulsaris Alarm Clock User Manual](#)

## Acctim 14357

# Acctim 14357 Pulsaris Alarm Clock User Manual

## INTRODUCTION

---

Thank you for purchasing the Acctim 14357 Pulsaris Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read these instructions carefully before use and retain them for future reference.

## PRODUCT OVERVIEW

---

### Features

- Alarm with snooze function
- Battery backup for timekeeping during power outages
- Mains powered operation
- Compact dimensions: H.W.L 52 x 144 x 82 mm

### Components

Familiarize yourself with the main components of your Acctim Pulsaris alarm clock.



**Figure 1: Front View.** This image displays the front of the Acctim 14357 Pulsaris Alarm Clock. It features a large, clear digital display with bright blue numbers indicating the time. Indicators for 'PM' and 'ALARM' are visible. Below the display are several control buttons: 'TIME', 'ALARM', 'MIN', 'HOUR', and a prominent 'SNOOZE' bar in the center. The clock has a silver finish.



**Figure 2: Back View.** This image shows the rear of the Acctim 14357 Pulsaris Alarm Clock. The design is simple and smooth, with a silver finish matching the front. A black power cord is visible, extending from the lower-center portion of the back panel, indicating its mains-powered operation.

## SETUP

---

### Power Connection

1. Unpack the alarm clock and place it on a stable, flat surface.
2. Connect the power cord to a standard electrical outlet. The display will illuminate.

3. Install a backup battery (not included) in the designated compartment (usually at the bottom or back) to ensure timekeeping during power interruptions. Refer to the battery compartment cover for correct polarity.

## OPERATING INSTRUCTIONS

---

### Setting the Time

1. Press and hold the **TIME** button.
2. While holding the **TIME** button, press the **HOUR** button repeatedly to set the hour. Observe the 'PM' indicator for afternoon hours.
3. While still holding the **TIME** button, press the **MIN** button repeatedly to set the minutes.
4. Release the **TIME** button to save the current time.

### Setting the Alarm

1. Press and hold the **ALARM** button.
2. While holding the **ALARM** button, press the **HOUR** button repeatedly to set the alarm hour.
3. While still holding the **ALARM** button, press the **MIN** button repeatedly to set the alarm minutes.
4. Release the **ALARM** button to save the alarm time.
5. To activate the alarm, slide the **ALARM ON/OFF** switch (located on the side or back) to the 'ON' position. The 'ALARM' indicator on the display will light up.

### Using the Snooze Function

When the alarm sounds, press the large **SNOOZE** bar. The alarm will temporarily stop and sound again after approximately 9 minutes. To turn off the alarm completely, slide the **ALARM ON/OFF** switch to the 'OFF' position.

## MAINTENANCE

---

To maintain your alarm clock, follow these simple guidelines:

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Ensure proper ventilation around the unit.
- Replace the backup battery annually or when the clock experiences frequent power outages to ensure continuous timekeeping.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is too bright at night.	The clock features a bright LED display.	This model does not have an adjustable dimmer. Consider placing the clock further away or using a light-filtering cover if the brightness is disruptive.
Clock display is off or flickering.	No mains power or loose connection.	Check if the power cord is securely plugged into both the clock and the wall outlet. Ensure the outlet is functional.

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the <b>ALARM ON/OFF</b> switch is in the 'ON' position and the 'ALARM' indicator is lit. Verify the alarm time is set correctly.
Time is incorrect after a power outage.	Backup battery is dead or not installed.	Install a fresh backup battery or replace the existing one. Reset the time as per instructions.

## SPECIFICATIONS

---

**Model Number:** 14357

**Brand:** Acctim

**Power Source:** Mains powered with battery backup

**Dimensions (H x W x L):** 52 x 144 x 82 mm

**Weight:** Approximately 299.37 g

**Display Type:** Digital LED

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact Acctim customer service directly. Keep your proof of purchase for any warranty claims.