

Sharp RRMCGA535WJSA

Sharp Aquos LCD TV Remote Control Instruction Manual

Model: RRMCGA535WJSA

Brand: Sharp

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your new Sharp Aquos LCD TV Remote Control, model RRMCGA535WJSA. This genuine Sharp remote transmitter is designed to provide seamless control over your compatible Sharp Aquos LCD TV models. Please read this manual thoroughly before use to ensure proper functionality and to maximize your viewing experience.

SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the remote control to direct sunlight, high humidity, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the remote control. This may void the warranty and cause damage.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not incinerate.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Sharp Aquos LCD TV Remote Control (Model: RRMCGA535WJSA)
- Instruction Manual (this document)

Note: Batteries are typically not included and must be purchased separately.

PRODUCT OVERVIEW

Familiarize yourself with the buttons and features of your remote control.



Figure 1: Front View of Remote Control

This image displays the front of the Sharp Aquos remote control, showing all primary buttons including power, input selection, channel, volume, numeric keypad, and navigation controls. The Sharp and Aquos logos are visible at the bottom.



Figure 2: Back View of Remote Control

This image shows the rear side of the Sharp Aquos remote control, highlighting the smooth, ergonomic design and the battery compartment cover.



**Figure 3: Remote Control with Battery Compartment
Open**

This image illustrates the Sharp Aquos remote control with its battery compartment cover slid open, revealing the space for battery insertion.



Figure 4: Close-up of Hidden Panel

This close-up image shows the lower section of the Sharp Aquos remote control with its hinged panel opened, revealing additional function buttons such as SLEEP, AUDIO, AV MODE, and CC (Closed Caption).

Button Functions:

Button	Function
POWER	Turns the TV on or off.
INPUT / SOURCE	Selects the input source (e.g., HDMI, AV, Component).
CH +/-	Changes the TV channel up or down.
VOL +/-	Adjusts the volume level.
MUTE	Mutes or unmutes the TV sound.
MENU	Opens the TV's on-screen menu.
ENTER	Confirms selections within the menu.
Navigation Arrows (Up/Down/Left/Right)	Navigates through menu options.

Button	Function
EXIT / RETURN	Exits the current menu or returns to the previous screen.
Numeric Keypad (0-9)	Directly enters channel numbers.
SLEEP (under hidden panel)	Sets the TV to turn off automatically after a set period.
AUDIO (under hidden panel)	Selects audio modes or tracks.
AV MODE (under hidden panel)	Adjusts picture and sound settings for different content types.
CC (Closed Caption) (under hidden panel)	Turns closed captions on or off.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Slide the battery compartment cover downwards to open it (refer to Figure 3).
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

Basic Operation:

- **Power On/Off:** Press the **POWER** button to turn your Sharp Aquos TV on or off.
- **Volume Control:** Press the **VOL +** button to increase volume and **VOL -** to decrease volume.
- **Channel Selection:** Use the **CH +** or **CH -** buttons to change channels sequentially. Alternatively, use the numeric keypad to directly enter a channel number.
- **Input Source Selection:** Press the **INPUT** or **SOURCE** button to cycle through available input sources (e.g., HDMI 1, HDMI 2, AV, Component).
- **Mute:** Press the **MUTE** button to temporarily silence the TV audio. Press again to restore sound.

Menu Navigation:

- Press the **MENU** button to display the TV's on-screen menu.
- Use the **Navigation Arrows** (Up, Down, Left, Right) to move through menu options.
- Press the **ENTER** button to select a highlighted option or confirm a setting.
- Press the **EXIT** or **RETURN** button to close the menu or go back to the previous menu level.

Advanced Functions (Hidden Panel):

Some advanced functions are located under a hinged panel at the bottom of the remote control (refer to Figure 4). Gently open this panel to access buttons such as:

- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **AUDIO:** Adjusts audio settings or selects audio tracks.
- **AV MODE:** Cycles through preset picture and sound modes (e.g., Standard, Movie, Game).

- **CC (Closed Caption):** Toggles closed captions on or off.

MAINTENANCE

Cleaning:

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Follow the battery installation steps outlined in the "Setup" section. Always replace both batteries at the same time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote control range is poor.	Weak batteries; obstruction between remote and TV; infrared sensor on TV is blocked.	Replace batteries. Ensure no objects are blocking the line of sight between the remote and the TV's IR sensor.
Specific buttons not responding.	Dirt or debris under the button; internal malfunction.	Clean the remote control. If the issue persists, the remote may require replacement.
TV not responding to any remote commands.	TV is unplugged or turned off; TV's IR sensor is faulty.	Ensure the TV is powered on and plugged in. Test with another remote if available. Consult TV's manual for IR sensor location.

SPECIFICATIONS

Feature	Detail
Model Number	RRMCGA535WJSA
Brand	Sharp
Compatible Devices	Sharp Aquos LCD Televisions (various models, see product title for list)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Dimensions (Approx.)	8.8 x 2.4 x 0.9 inches (Package Dimensions)
Weight (Approx.)	4 ounces
Special Feature	Ergonomic design, Hidden function panel

WARRANTY AND SUPPORT

Legal Disclaimer:



 

This item is provided in new condition. Please note that this item is offered "as is" as it is past its original manufacturer's warranty period. Any implied warranties are disclaimed to the fullest extent permitted by law.

Customer Support:

For further assistance or inquiries regarding your Sharp Aquos LCD TV, please refer to your television's original instruction manual or visit the official Sharp support website. For issues specifically with this replacement remote control, please contact the seller from whom it was purchased.

© 2023 Sharp Corporation. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents

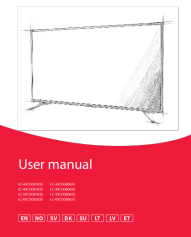	<p>Guía de inicio rápido para televisores SHARP Roku</p> <p>Aprenda a configurar su televisor SHARP Roku con esta guía de inicio rápido. Cubre la conexión de dispositivos, la configuración de la red y la personalización de la pantalla de inicio.</p>
	<p>Sharp Q5000 Series TV Quick Start Guide</p> <p>A concise guide to setting up your new Sharp Q5000 Series TV, covering unboxing, connections, network setup, and basic operation. Learn how to get the most out of your Sharp television with this easy-to-follow manual.</p>
	<p>SHARP 4K UHD Smart LED TV User Manual</p> <p>This user manual provides comprehensive instructions for operating SHARP LC-CUG8052E and LC-CUG8062E series 4K UHD Smart LED TVs. Learn about setup, safety guidelines, remote control functions, smart features like AQUOS NET+, Netflix, YouTube, and various connectivity options for an optimal viewing experience.</p>
	<p>SHARP AQUOS LCD TV Operating Manual LC-32XL8E LC-32XL8S LC-37XL8E LC-37XL8S</p> <p>Comprehensive operating manual for SHARP AQUOS LCD Televisions, models LC-32XL8E, LC-32XL8S, LC-37XL8E, and LC-37XL8S. This guide covers setup, daily operation, connecting external devices, advanced features like AQUOS LINK, troubleshooting, and technical specifications to optimize your viewing experience.</p>



[\[pdf\]](#) User Manual Guide Diagram

Provided by ManualsAndMore Download User Manual Sharp LC 32D43U Parts LC32D43U


manualsandmore |||

TopPage LC-32/37D43U LCD COLOR TELEVISION LC-32D43U MODELS LC-37D43U PARTS AND DIAGRAMS VIEW Part ... WJ00 AD J Cable Band X2

LHLDWA131WJKZ AE J Cable Clamp X3 QACCD A039WJPZ AQ J AC Cord X4

RRMCGA535WJSA AY X Remote Control Unit X5 TINS-D004WJZZ AM N Operation Manual X6 Not Availabl...

 lang:i-klington **score:25** filesize: 4.11 M page_count: 11 document date: 2019-07-23

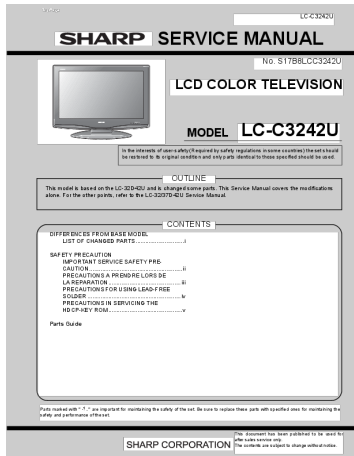

[\[pdf\]](#) User Manual Guide

Provided by ManualsAndMore Download User Manual Sharp LC C3242U Service LCC3242U


manualsandmore |||

TopPage LC-C3242U SERVICE MANUAL No. S17B8LCC3242U LCD COLOR TELEVISION MODEL LC-C3242U In the ... WJ00 AD J Cable Band X2

LHLDWA131WJKZ AE J Cable Clamp X3 QACCD A039WJPZ AQ J AC Cord X4

RRMCGA535WJSA AY X Remote Control Unit X5 TINS-D085WJZZ AN N X Operation Manual X6 Not Availa...

 lang:en **score:24** filesize: 729.3 K page_count: 14 document date: 2019-07-23

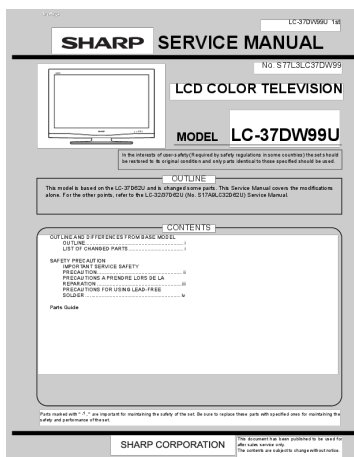

[\[pdf\]](#) User Manual Guide

V0I00044 book ikeda SHARP LC 37DW99U 01 MANUAL drive google uc id 1 tDKILSBichV4

nXDNE5Bsr bUIZjmdm8 export |||

 
TopPage LC-37DW99U 1st SERVICE MANUAL No. S77L3LC37DW99 LCD COLOR TELEVISION MODEL LC-37DW99U I ... ARK DELIVERY 5 SUPPLIED

ACCESSORIES X1 LHLDWA083WJ00 X2 LHLDWA131WJKZ X3

QACCD A039WJPZ X4 **RRMCGA535WJSA** X5 TCADEA208WJZZ X6

TCAUZA286WJZZ X7 TGAN-A768WJZZ X8 TINS-D361WJZZ X9 Not Availa...

lang:en **score:22** filesize: 1.27 M page_count: 14 document date: 2007-07-07

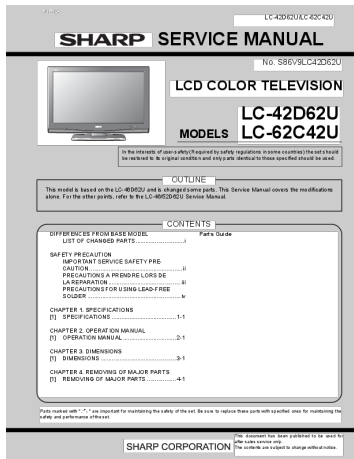


[pdf] User Manual Specifications Dimension Guide Guide

V0I00013 book ikeda SHARP LC 42D62U 02 MANUAL drive google uc id

1dUo5pgRcTedkiURNEZEbLmDWe VH6ACy export |||

TopPage LC-42D62U/LC-62C42U SERVICE MANUAL No. S86V9LC42D62U LCD COLOR TELEVISION LC-42D62U MOD ... PRICE NEW PART RANK MARK DELIVERY 5 SUPPLIED ACCESSORIES X1 QACCD A039WJPZ AR X AC Cord X2 **RRMCGA535WJSA** BA N X Remote Control Unit X3 LHLDWA131WJKZ AE J Cable Clamp X4 LHLDWA083WJ00 ...

 lang:en **score:21** filesize: 2.13 M page_count: 24 document date: 2006-09-19

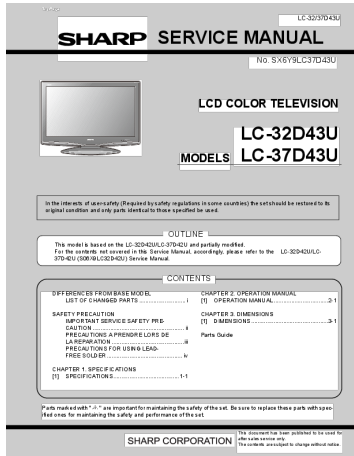


[pdf] User Manual Specifications Dimension Guide Guide Diagram

V0G00035 book t kawata TopPage LC 32 37D43U SERVICE MANUAL 1 32D43U CHAPTER

SPECIFICATIONS Service Manual INPUT 6 15 pin mini D sub Audio in Ø 3 5 mm jack *1 Emergency alert messages via Cable are unreceivable *2 The dimensional drawings shown on the inside back cover As part of policy continuous improvement SHARP reserves right to make design and specication changes for product sharp diagramas diagramasde otros2

TopPage LC-32/37D43U SERVICE MANUAL No. SX6Y9LC37D43U LCD COLOR TELEVISION LC-32D43U MODELS LC-3 ... WJ00 AD J Cable Band X2 LHLDWA131WJKZ AE J Cable Clamp X3 QACCD A039WJPZ AQ J AC Cord X4 **RRMCGA535WJSA** AY X Remote Control Unit X5 TINS-D004WJZZ AM N Operation Manual X6 Not Availabl...

 lang:en **score:19** filesize: 2.14 M page_count: 22 document date: 2007-01-19

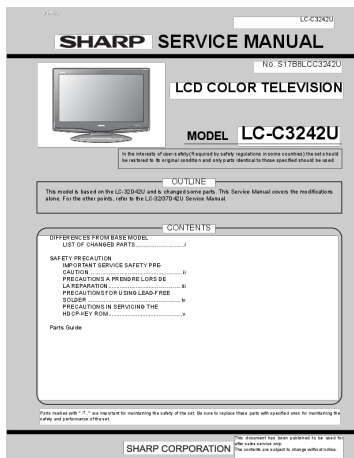

[pdf] User Manual Guide Diagram

V0I00032 book tetuka TopPage LC C3242U SERVICE MANUAL This model is based on the 32D42U and changed some parts Service Manual covers modifications alone For other points refer to 32 37D42U document has been published be used for after sales service only The contents are subject change without notice LCC3242U diagramas diagramasde televisores

TopPage LC-C3242U SERVICE MANUAL No. S17B8LCC3242U LCD COLOR TELEVISION MODEL LC-C3242U In the ... WJ00 AD J Cable Band X2 LHLDWA131WJKZ AE J Cable Clamp X3 QACCD A039WJPZ AQ J AC Cord X4 **RRMCGA535WJSA** AY X Remote Control Unit X5 TINS-D085WJZZ AN N X Operation Manual X6 Not Availa...

lang:en **score:19** filesize: 1.18 M page_count: 14 document date: 2007-03-29




[pdf] User Manual Specifications Dimension Guide Diagram

V0D00022 book montawa SHARP LC 46D62U 01 MANUAL drive google u 0 uc id 1acRxg

gQPXOV18SAYqmSumJsq8qOW1b3 export |||

SUPPLEMETNoTpPaagTeTACHED LC-46D62U/LC-52D62U SERVICE MANUAL No. S86V8LC52D62U LCD COLOR TELEVISION ... 3WJ00 AD X Cable Tie X3 LHLDWA131WJKZ AF X Cable Clamp X6 QACCD A039WJPZ AR X AC Cord X7 **RRMCGA535WJSA** BA N X Remote Control Unit X8 SSAKA0101GJZZ AC X Polyethylene Bag X9 SSAKAA032W...

 lang:i-klngon **score:16** filesize: 32.43 M page_count: 182 document date: 2006-09-19

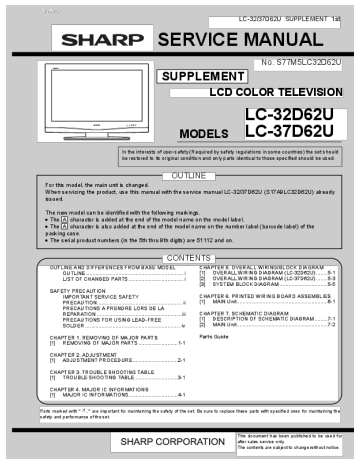

[\[pdf\]](#) User Manual Diagram Label

V0100046 book ikeda SERVICE MANUAL When servicing the product use this manual with service C2020 VCKY CZ1HB102KY AB J Capacitor 1000p 50V Ceramic C2024 LCSPMPWBCGDT diagramas diagramasde televisores

TopPage LC-32/37D62U SUPPLEMENT 1st SERVICE MANUAL No.

S77M5LC32D62U SUPPLEMENT LCD COLOR TELEVIS ... ARK DELIVERY 7

SUPPLIED ACCESSORIES X1 LHLDWA083WJ00 X2 LHLDWA131WJKZ X3

QACCD A039WJPZ X4 **RRMCGA535WJSA** X5 TCADEA208WJZZ X6

TCAUZA286WJZZ X7 TCAUZA296WJZZ X8 TGAN-A768WJZZ X9 TiNS-C976W...

lang:en **score:13** filesize: 22.17 M page_count: 124 document date: 2007-08-24



[\[pdf\]](#) User Manual Specifications Dimension Guide Diagram

V0100031 book ikeda lc 32d62u 37d62u models SERVICE MANUAL identified in this manual electrical components having such features are C2020 VCKY CZ1HB102KY AB J Capacitor 1000p 50V Ceramic C2023 LC3237D62U diagramas diagramasde televisores

TopPage LC-32D62U/LC-37D62U 1st SERVICE MANUAL No. S17A9LC32D62U

LCD COLOR TELEVISION LC-32D62U ... RK DELIVERY 10 SUPPLIED

ACCESSORIES X1 LHLDWA083WJ00 X2 LHLDWA131WJKZ X3

QACCD A039WJPZ X4 **RRMCGA535WJSA** X5 TCADEA208WJZZ X6

TCAUZA263WJZZ X7 TGAN-A768WJZZ X8 TINS-C976WJZZ X9 Not Availa...

lang:i-klington **score:13** filesize: 51.5 M page_count: 162 document date: 2007-04-09



[\[pdf\]](#) User Manual Specifications Dimension Guide Diagram

V0100020 book ikeda lc 32d42u 37d42u models SERVICE MANUAL 4 Inspect all protective devices such as non metallic control knobs insulation materials cabinet backs adjustment and compartment covers or shields isolation sharp LC 32 37D42U 37D43U diagramas diagramasde otros

TopPage LC-32D42U/LC-37D42U SERVICE MANUAL No. S06X9LC32D42U LCD

COLOR TELEVISION LC-32D42U MODE ... WJ00 AD J Cable Band X2

LHLDWA131WJKZ AE J Cable Clamp X3 QACCD A039WJPZ AQ J AC Cord X4

RRMCGA535WJSA AY X Remote Control Unit X5 TiNS-C770WJZZ AP N X

Operation Manual X5 Not Availa...

lang:nl **score:12** filesize: 22.17 M page_count: 138 document date: 2006-12-20