

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for COBY TFTV Series (RC022)

Redi-Remote RTRC022

Redi-Remote Replacement Remote Control Instruction Manual

Model: RTRC022

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, model RTRC022. This remote is designed to function as a direct replacement for the original COBY RC022 remote and is compatible with various COBY TFTV series televisions. No programming is required; simply insert batteries and begin use.

PRODUCT OVERVIEW

The Redi-Remote RTRC022 is a pre-programmed replacement remote control. It features a standard layout with primary controls at the top and secondary, advanced functions located under a sliding cover at the bottom.



Image: Redi-Remote replacement remote control. The top section includes power, volume, channel, mute, menu, and number buttons. The lower section, initially covered by a sliding panel, reveals additional function buttons such as MODE, RETURN, CC, MTS, EXIT, FORMAT, P. MODE, FAV, CH LIST, INFO, EPG, SOUND, and directional navigation with an OK button.

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as marked inside the compartment. Four AAA batteries are included with the remote.
4. Replace the battery compartment cover until it clicks securely into place.

2. Compatibility

This remote control is specifically designed to be compatible with the following COBY television models:

- TFTV1212
- TFTV2224
- TFTV1514
- RC022 (original remote model it replaces)
- TFTV1923
- TFTV1524
- TFTV1022
- TFTV2214
- TFTV1904
- TFTV1913

No programming is required. The remote is ready for use with compatible COBY units immediately after battery installation.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your COBY television for optimal performance.

Top Section Buttons (Primary Controls)

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **VOL + / VOL - (Volume):** Increases or decreases the volume level.
- **MUTE:** Silences or restores the television audio.
- **CH+ / CH- (Channel):** Changes the television channel up or down.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers.
- **ENT (Enter):** Confirms channel number entry or other selections.

Lower Section Buttons (Advanced Functions)

To access these buttons, slide down the cover located at the bottom of the remote control.

- **MODE:** Selects different operating modes.
- **RETURN:** Returns to the previous screen or menu.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **EXIT:** Exits the current menu or function.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.

- **OK:** Confirms selections within menus.
- **FORMAT:** Adjusts the screen aspect ratio or display format.
- **P. MODE (Picture Mode):** Cycles through preset picture settings.
- **FAV (Favorite):** Accesses favorite channels list.
- **CH LIST (Channel List):** Displays the list of available channels.
- **INFO:** Displays program information.
- **EPG (Electronic Program Guide):** Accesses the electronic program guide.
- **SOUND:** Accesses audio settings or sound modes.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the television's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Certain buttons not working:**
 - Verify that the sliding cover is fully open if you are trying to use the lower section buttons.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
- **Remote does not control other devices:**
 - This Redi-Remote is designed exclusively for the specified COBY television models and cannot be programmed to control auxiliary devices.

SPECIFICATIONS

Model Number	RTRC022
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries	4 AAA batteries (included)
Special Feature	No Programming Required
Max Number of Supported Devices	1
Compatible Devices	Television (COBY TFTV series)
Connectivity Technology	Infrared

For any concerns or issues with your Redi-Remote replacement remote control, please contact the manufacturer, Redi-Remote, directly. Refer to the product packaging or purchase documentation for specific contact information. This remote is manufactured by Redi-Remote.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008ROPG96>

More documents and user manuals: <https://manuals.plus/>