

[Manuals.plus](#) /
› [Redi-Remote](#) /
› Redi-Remote Replacement Remote Control for COBY TFTV Series (Models TFTV3717, TFTV2204, TFTV3207, TFTV3217, TFTV4217, TFTV2701, TFTV2617, TFTV2707) and RC023 Instruction Manual

Redi-Remote RTRC023

Redi-Remote Replacement Remote Control Instruction Manual

For COBY TFTV Series Models: TFTV3717, TFTV2204, TFTV3207, TFTV3217, TFTV4217, TFTV2701, TFTV2617, TFTV2707, and RC023

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for seamless operation with various COBY TFTV series televisions. This remote is a direct replacement for the original COBY RC023 remote and requires no programming.

PRODUCT OVERVIEW



Image Description: A black replacement remote control with a two-part design. The upper section features primary controls like Power (red), Sleep, TV/Video, Display, Volume Up/Down, Mute, Channel Up/Down, Menu, Recall, and number buttons (0-9, 100, ENT). The lower section, initially covered by a sliding panel, reveals additional function buttons including Mode, Return, S Mode, P Mode, Exit, directional arrows with an OK button, Favorite Channel controls (FAV+, FAV-), Channel List, MTS, EPG, Captions, V-Chip, Scale, Still, and Info. The

bottom of the remote has "SLIDE DOWN" text indicating how to access the lower buttons.

The Redi-Remote replacement remote control is designed for intuitive use. It features a standard layout with essential controls on the upper section and advanced functions accessible by sliding down the lower panel.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote control is ready for use immediately after battery installation. No programming is required.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement control.

Upper Section Controls

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **CH +/- (Channel Up/Down):** Changes the television channel.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly enter channel numbers.
- **ENT (Enter):** Confirms channel selection or menu options.

Lower Section Controls (Slide Down to Access)

To access these functions, gently slide down the lower panel of the remote control.

- **MODE:** Cycles through various operational modes.
- **RETURN:** Returns to the previous screen or menu.
- **S MODE (Sound Mode):** Adjusts sound settings.
- **P MODE (Picture Mode):** Adjusts picture settings.
- **EXIT:** Exits the current menu or function.
- **Directional Arrows (Up, Down, Left, Right) & OK:** Navigates menus and confirms selections.
- **FAV +/- (Favorite Channel Up/Down):** Navigates through favorite channels.
- **CH LIST (Channel List):** Displays the list of available channels.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).

- **EPG (Electronic Program Guide):** Accesses the program guide.
- **CAPT (Closed Captions):** Toggles closed captions on or off.
- **V-CHIP:** Accesses V-Chip parental control settings.
- **SCALE:** Adjusts the screen aspect ratio or zoom.
- **STILL:** Pauses the current video frame.
- **INFO:** Displays detailed information about the current program or input.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace all four batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure there is a clear line of sight between the remote and the television's infrared sensor.
 - Check if the batteries are inserted correctly and are not depleted. Replace with new batteries if necessary.
 - Verify that the television is powered on.
- **Specific buttons not working:**
 - Clean the remote control, especially around the non-functioning buttons, to remove any debris.
 - Ensure the lower panel is fully slid down if you are trying to use a button from that section.
- **Remote controls other devices:**
 - This remote is designed specifically for COBY TFTV models and cannot be programmed to control auxiliary devices. If it is affecting other devices, ensure it is pointed directly at the intended COBY TV.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTRC023
Compatible Devices	COBY TFTV Series (TFTV3717, TFTV2204, TFTV3207, TFTV3217, RC023, TFTV4217, TFTV2701, TFTV2617, TFTV2707)
Connectivity Technology	Infrared
Power Source	4 x AAA Batteries (included)
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces

Special Feature	No Programming Required
Max Number of Supported Devices	1 (Television)

SUPPORT INFORMATION

For any concerns or questions regarding your Redi-Remote replacement remote control, please contact the manufacturer, Redi-Remote, directly. Refer to your purchase documentation or the seller's information for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B008ROPGXC>

More documents and user manuals: <https://manuals.plus/>