

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for RCA TV Models L32WD26D, L26HD32D, L32HD32D, L26WD26D, L22HD32D (Model RT274930)

Redi-Remote RT274930

Redi-Remote Replacement Remote Control Instruction Manual

Model: RT274930

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, model RT274930. This remote is designed to function as a direct replacement for specific RCA television models, offering full functionality without the need for programming.

2. COMPATIBILITY

The Redi-Remote model RT274930 is compatible with the following RCA television models:

- RCA L32WD26D
- RCA L26HD32D
- RCA 076R0PF010
- RCA L32HD32D
- RCA L26WD26D
- RCA 274930
- RCA L22HD32D

This remote is specifically designed for these units and cannot be programmed to control auxiliary devices.

3. PACKAGE CONTENTS

- 1 x Redi-Remote Replacement Remote Control (Model RT274930)
- 4 x AAA Batteries

4. SETUP

To begin using your Redi-Remote replacement remote control, follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.

3. Insert the four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

The remote control is now ready for use with your compatible RCA television. No additional programming is required.



Image: The Redi-Remote Replacement Remote Control, showing its button layout and design. This remote is designed for direct use with specified RCA TV models.

5. OPERATING INSTRUCTIONS

The Redi-Remote functions identically to your original RCA remote control for the specified models. Simply point the remote at your television and press the desired buttons.

Note on Button Access: A sliding cover is present over the lower half of the remote. To access additional functions, gently slide this cover downwards to reveal the hidden buttons.

6. FEATURES AND LIMITATIONS

- **No Programming Required:** This remote is pre-programmed for immediate use with compatible RCA TV models.
- **Dedicated Functionality:** Designed to control only the specific RCA unit it is intended for. It cannot be programmed to control auxiliary devices such as DVD players, sound systems, or cable boxes.
- **No Laser Pointers or LED Lights:** This remote does not include laser pointers or integrated LED lights.

7. TROUBLESHOOTING

If the remote control does not function as expected, consider the following:

- **Check Batteries:** Ensure the AAA batteries are inserted correctly with the correct polarity (+/-). Replace batteries if they are old or depleted.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the television's infrared receiver. Obstructions can block the signal.
- **Compatibility:** Verify that your RCA television model is listed in the compatibility section (Section 2) of this manual.
- **Remote Reset:** Remove the batteries, wait 30 seconds, then reinsert them. This can sometimes resolve minor issues.

If issues persist after following these steps, please refer to the Support section.

8. SPECIFICATIONS

Model Number	RT274930
Brand	Redi-Remote
Compatible Devices	RCA Televisions (specific models listed in Section 2)
Power Source	4 x AAA Batteries (included)
Dimensions (L x W x H)	7.5 x 2.25 x 0.75 inches (19.05 x 5.72 x 1.91 cm)
Weight	4.5 ounces (127.57 grams)
Color	Black

9. CARE AND MAINTENANCE

- Keep the remote control dry. Moisture can damage internal circuits.
- Avoid exposing the remote to extreme temperatures.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

10. SUPPORT

For any concerns or questions regarding your Redi-Remote replacement remote control, please contact the seller directly for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008ROPIZI>

More documents and user manuals: <https://manuals.plus/>