

- Manuals.plus /
- › [Redi-Remote](#) /
- › Redi-Remote Replacement Remote Control User Manual for RCA Models 276263, 076R0PF021, L26HD35DA, L26HD35D, L32HD35D

Redi-Remote RT276263

Redi-Remote Replacement Remote Control User Manual

For RCA TV Models: 276263, 076R0PF021, L26HD35DA, L26HD35D, L32HD35D

PRODUCT OVERVIEW

This manual provides instructions for the Redi-Remote replacement remote control, designed for specific RCA television models. This remote is a custom-built replacement and does not require programming for the listed compatible units.

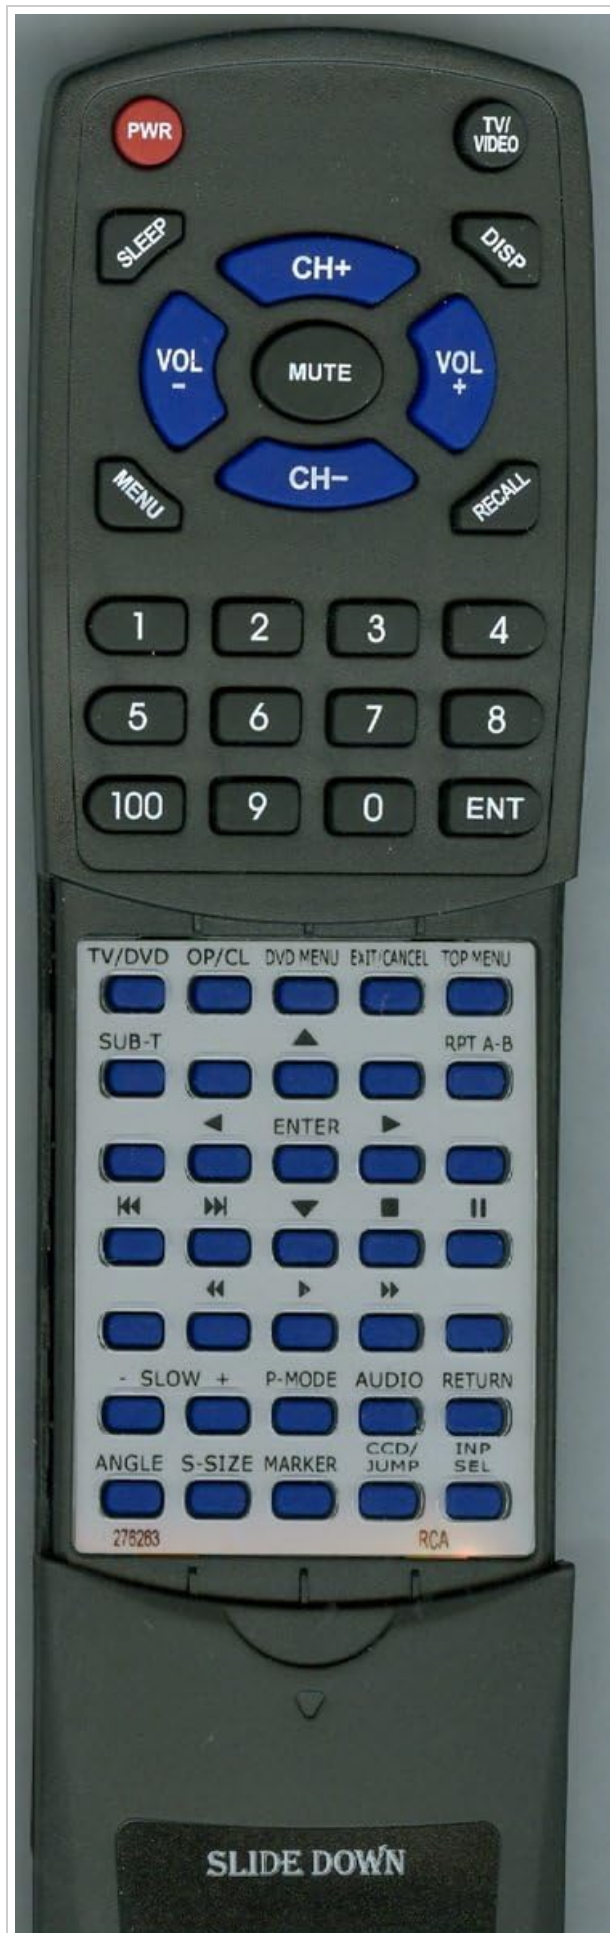


Image 1: Front view of the Redi-Remote replacement remote control. The remote features a standard button layout for TV functions on the upper half and a slide-down panel revealing additional controls for DVD playback and advanced TV settings on the lower half.

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries. These are typically included with your purchase and may already be installed. If not, follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use

This Redi-Remote replacement remote control is pre-programmed for the specified RCA models and does not require any additional setup or code entry. Once batteries are installed, it is ready for immediate use with your compatible RCA television.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your RCA television for optimal performance.

Upper Section Buttons

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **CH+ / CH- (Channel Up/Down):** Changes the television channel.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume.
- **MUTE:** Silences or restores the television audio.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers.
- **ENT (Enter):** Confirms channel selection or menu options.

Lower Section Buttons (Slide Down Panel)

To access these buttons, slide down the lower half of the remote control's faceplate, as indicated by "SLIDE DOWN" on the remote.

- **TV/DVD:** Toggles between TV and DVD modes (if applicable to your unit).
- **OP/CL (Open/Close):** Opens or closes the DVD tray.
- **DVD MENU:** Accesses the DVD disc menu.
- **EXIT/CANCEL:** Exits current menu or cancels an operation.
- **TOP MENU:** Returns to the top menu of a DVD.
- **SUB-T (Subtitle):** Toggles subtitle display on/off or cycles through subtitle languages.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections within menus.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Backward):** Controls DVD

playback.

- **RPT A-B (Repeat A-B):** Repeats a selected section of a DVD.
- **SLOW +/-:** Adjusts slow-motion playback speed.
- **P-MODE (Picture Mode):** Cycles through picture presets.
- **AUDIO:** Changes audio tracks or modes.
- **RETURN:** Returns to the previous screen or menu.
- **ANGLE:** Changes the camera angle on compatible DVDs.
- **S-SIZE (Screen Size):** Adjusts the screen aspect ratio.
- **MARKER:** Sets or navigates to markers on a DVD.
- **CCD/JUMP:** Functions related to Closed Captioning or jumping to specific points.
- **INP SEL (Input Select):** Cycles through available input sources.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace all batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed.
 - Check for any obstructions between the remote and the television's infrared sensor.
 - Verify that the remote is pointed directly at the television.
- **Specific buttons not working:**
 - If only certain buttons are unresponsive, try replacing the batteries.
 - Ensure the remote is clean and free of debris that might obstruct button presses.
 - For issues with the power button, as reported by some users, ensure the remote is fully compatible with your specific TV model and that batteries are fresh.
- **Remote not controlling the TV/DVD:**
 - Confirm your television model is listed as compatible: 276263, 076R0PF021, L26HD35DA, L26HD35D, L32HD35D.
 - This remote is designed for specific RCA units and cannot be programmed for other devices.

SPECIFICATIONS

Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Model Number	RT276263
Batteries	4 AAA batteries (included)
Connectivity Technology	Infrared
Compatible Devices	RCA Televisions (Models: 276263, 076R0PF021, L26HD35DA, L26HD35D, L32HD35D)
Special Feature	No Programming Required

WARRANTY INFORMATION

This Redi-Remote product is a custom-built replacement remote. Specific warranty details are not provided in the product information. For any warranty-related inquiries or concerns, please contact the seller directly.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or any product-related questions, please contact the seller, RemotesPro, through your purchase platform. They can provide specific support for your Redi-Remote replacement control.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008ROPJHA>

More documents and user manuals: <https://manuals.plus/>