

[Manuals.plus](#) /

> [Redi-Remote](#) /

> Redi-Remote Replacement Remote Control Instruction Manual for DURABRAND DWT1304, NE142UD, DWT2405, DCT1304R, DWT1304A, DWT1905

Redi-Remote RTNE142UD

Redi-Remote Replacement Remote Control Instruction Manual

For DURABRAND Models: DWT1304, NE142UD, DWT2405, DCT1304R, DWT1304A, DWT1905
Model: RTNE142UD

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, model RTNE142UD. This remote is designed to be compatible with various DURABRAND television models, including DWT1304, NE142UD, DWT2405, DCT1304R, DWT1304A, and DWT1905. It functions as a direct replacement, offering all essential controls for your compatible DURABRAND unit without requiring programming.

PACKAGE CONTENTS

- 1 x Redi-Remote Replacement Remote Control (Model RTNE142UD)
- 4 x AAA Batteries (included)

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote control is now ready for use with your compatible DURABRAND television. No additional programming is required.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement control.



Figure 1: Overview of the Redi-Remote Replacement Remote Control. This image displays the full remote control, including the main button layout and the slide-down panel revealing additional controls.

Main Button Functions

- **PWR (Power):** Turns the television on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **VOL + / VOL - (Volume Up / Down):** Adjusts the audio volume.
- **MUTE:** Silences or restores the audio.
- **CH+ / CH- (Channel Up / Down):** Changes the television channel.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly select channels. Use '100' for channels 100 and above.
- **ENT (Enter):** Confirms channel selection or menu options.

Hidden Button Functions (Slide Down Panel)

The lower half of the remote control features a slide-down cover. Slide this cover down to reveal additional buttons for advanced functions.

- **GAME:** Activates the game mode or input.
- **CH RTN (Channel Return):** Returns to the previous channel. (Note: This may duplicate the 'RECALL' function depending on the TV model.)
- **Additional Buttons:** A grid of unmarked buttons is present. Their specific functions may vary depending on the DURABRAND TV model. Refer to your television's original manual for details on these auxiliary controls.

MAINTENANCE

Cleaning the Remote

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote's response becomes sluggish or stops functioning. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the television's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the television.
- **Some buttons not working:**
 - This remote is designed for specific DURABRAND models. While it provides core functions, some advanced or unique features of your TV might not be directly supported if they were not part of the original remote's primary functions.

- Clean the remote's surface, especially around the non-working buttons, to ensure no debris is interfering.
- **Remote does not control other devices:**
 - This Redi-Remote is a dedicated replacement for specific DURABRAND televisions and cannot be programmed to control auxiliary devices such as DVD players, sound systems, or cable boxes.

SPECIFICATIONS

- **Model:** RTNE142UD
- **Brand:** Redi-Remote
- **Compatible DURABRAND Models:** DWT1304, NE142UD, DWT2405, DCT1304R, DWT1304A, DWT1905
- **Dimensions:** 7 x 2.5 x 1 inches (approximately)
- **Item Weight:** 4.5 ounces (approximately)
- **Batteries:** 4 x AAA (included)
- **Connectivity Technology:** Infrared
- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1 (Television)

WARRANTY AND SUPPORT

For any concerns or issues with your Redi-Remote replacement control after purchase, please contact the seller directly for support. This product is a custom replacement remote and is not an original manufacturer's remote control.

Please refer to your purchase documentation for specific warranty details provided by the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008ROPQDW>

More documents and user manuals: <https://manuals.plus/>