

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Jensen VM9312HD, 30702560, 30702200, VM9312

Redi-Remote RT30702200

Redi-Remote Replacement Remote Control Instruction Manual

For Jensen Models: VM9312HD, 30702560, 30702200, VM9312

1. INTRODUCTION

This document provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for use with Jensen audio/video units. This remote is a custom-built replacement and is not an original Jensen product. It is engineered to perform all functions of the original remote for the compatible Jensen models listed below.

- **Compatible Jensen Models:** VM9312HD, 30702560, 30702200, VM9312

2. PRODUCT OVERVIEW

The Redi-Remote replacement control offers a full range of functions for your compatible Jensen unit. It features a durable design with clearly labeled buttons. A unique design element is the slide-down cover located on the lower half of the remote, which conceals additional function buttons. This remote is designed for immediate use without requiring any programming.



Image 2.1: Redi-Remote Replacement Remote Control. This image displays the Redi-Remote replacement remote control. The upper section features power, volume, channel, mute, menu, and number buttons. The lower section, revealed by sliding down a cover, includes buttons for eject, source, audio, subtitle, angle, display, repeat, setup, playback controls, and navigation. The model number 30702200 and 'JENSEN' are visible on the lower panel.

3. SETUP AND BATTERY INSTALLATION

This Redi-Remote replacement control requires no programming. Simply install the batteries, and it is ready for use with your compatible Jensen unit.

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert **four (4) AAA batteries** into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside. (Batteries are typically included with the remote).
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use new batteries and replace all four batteries at the same time. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

The Redi-Remote is designed to replicate the functionality of your original Jensen remote. Point the remote directly at your Jensen unit for optimal performance.

4.1. Basic Functions (Upper Section)

- **PWR (Power):** Turns the Jensen unit on or off.
- **SLEEP:** Activates the sleep timer function.
- **TVI/VIDEO:** Switches between TV and Video input sources.
- **DISP (Display):** Toggles display information on the screen.
- **VOL + / VOL - (Volume):** Adjusts the audio volume level.
- **MUTE:** Silences or restores the audio.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the main menu of the Jensen unit.
- **RECALL:** Recalls the previously viewed channel or input.
- **Number Pad (0-9, 100, ENT):** Used for direct channel entry or numerical input in menus.

4.2. Advanced Functions (Lower Section - Slide Down Cover)

Slide down the cover on the lower half of the remote to access additional controls, typically for DVD receiver functions.

- **EJECT:** Ejects a disc from the player.
- **SRC (Source):** Selects the input source.
- **MUTE:** (Duplicate function) Silences or restores audio.
- **POWER:** (Duplicate function) Turns the unit on or off.
- **TITLE:** Accesses the disc title menu.
- **MENU:** Accesses the disc menu.
- **AUDIO:** Changes audio tracks or languages.
- **SUB-T (Subtitle):** Toggles subtitles on or off.
- **ANGLE:** Changes the viewing angle on compatible discs.

- **DISP (Display):** (Duplicate function) Toggles display information.
- **RPT A-B (Repeat A-B):** Repeats a specified section of playback.
- **RPT (Repeat):** Repeats the current track or chapter.
- **OP/CL (Open/Close):** Opens or closes the disc tray.
- **WIDE:** Adjusts the screen aspect ratio.
- **TILT + / TILT -:** Adjusts screen tilt (if applicable to your unit).
- **SETUP:** Accesses the system setup menu.
- **PRESET + / PRESET -:** Navigates through radio presets.
- **/BAND:** Changes radio bands (AM/FM).
- **Playback Controls (◀◀, ▶/||, ▶▶):** Rewind, Play/Pause, Fast Forward.
- **SCN (Scan):** Scans through radio stations or disc tracks.
- **RDM (Random):** Activates random playback.
- **SEL (Select):** Confirms selections in menus.
- **Navigation Arrows (▲, ◀, ▶, ▼):** Used for menu navigation.
- **GOTO:** Jumps to a specific time or chapter.
- **ZOOM:** Zooms in or out on the video.
- **PIC (Picture):** Adjusts picture settings.
- **CLEAR:** Clears input or cancels a selection.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or exposing it to moisture.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the Jensen unit's infrared sensor.
 - Ensure you are within the effective range and line of sight of the Jensen unit.
- **Certain functions not working:**
 - Verify that the Jensen unit model is listed as compatible.
 - Some functions may only be available in specific modes (e.g., DVD functions only when a DVD is playing).

7. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Redi-Remote
Model Number	RT30702200
Compatible Devices	Jensen VM9312HD, 30702560, 30702200, VM9312 (DVD Receiver)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Controls the specific Jensen unit only)
Batteries Required	4 x AAA (Included)
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces (approximately)

8. WARRANTY AND SUPPORT

As a custom-built replacement remote, specific warranty details may vary. For any concerns regarding the remote control after purchase, please contact the seller directly for assistance. Ensure you retain your purchase receipt for any support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B008ROPQQO>

More documents and user manuals: <https://manuals.plus/>