

OUTLAW Outlaw 2-Speed Super Duty Clipper

Oster Outlaw 2-Speed Super Duty Clipper Kit

USER MANUAL

1. Introduction

The Oster Outlaw 2-Speed Super Duty Clipper Kit is engineered for versatile grooming, capable of handling tasks from heavy-duty clipping to precision work on various coat types. Its design prioritizes user comfort and efficiency, featuring a lightweight housing that operates quietly and runs cooler. The vent-free design prevents hair from blowing during use, contributing to a cleaner grooming experience. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your clipper kit.



Image of the Oster Outlaw 2 Speed Super Duty Clipper Kit, showing the clipper unit with a power cord and a blade attached.

2. Safety Information

Important Safety Precautions:

- Always keep blades away from eyes and face during operation and handling.
- Do not use the clipper on infants or in sensitive areas of any animal.
- Keep the electric clipper away from all water sources to prevent electric shock.
- Always unplug the clipper from the power outlet when not in use, before cleaning, or when changing blades.
- Follow all recommended cleaning and maintenance procedures as outlined in this manual.

3. Package Contents

Please refer to your product packaging for a complete and accurate list of all included components and accessories in your Oster Outlaw 2-Speed Super Duty Clipper Kit.

4. Setup

Before first use, ensure all components are present and undamaged. The clipper operates via a power cord.

1. **Unpack:** Carefully remove the clipper and all accessories from the packaging.
2. **Inspect:** Check the clipper, power cord, and blades for any signs of damage. Do not use if damaged.
3. **Attach Blade:** Ensure the clipper is unplugged. Align the blade with the clipper head and snap it into place securely. Refer to the blade manufacturer's instructions for specific attachment details if necessary.
4. **Initial Oiling:** Apply a few drops of clipper oil (typically included in the kit) to the blade teeth before the first use. This ensures smooth operation and prolongs blade life.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet.

5. Operating Instructions

The Oster Outlaw clipper features two speed settings for optimal control across various grooming tasks.

- **Power On/Off:** Locate the power switch on the clipper body. Toggle it to the 'ON' position to start the clipper.
- **Speed Selection:** The clipper offers two speeds. Use the lower speed for precision work, sensitive areas, or lighter coats. The higher speed is suitable for heavy-duty clipping, thicker coats, or faster removal of hair. Adjust the speed according to the coat type and desired outcome.
- **Grooming Technique:** Always hold the clipper firmly. Move the clipper against the direction of hair growth for best results. Maintain a consistent angle and pressure. Ensure the blade remains cool by periodically checking its temperature and applying oil as needed.
- **Vent-Free Design:** The vent-free housing prevents hair from blowing into the motor, contributing to a cleaner work area and cooler operation.

6. Maintenance

Proper maintenance ensures the longevity and performance of your clipper.

- **Cleaning Blades:** After each use, unplug the clipper. Use a small brush (often included) to remove loose hair from the blades. For thorough cleaning, detach the blade and use a blade wash solution or a mild disinfectant. Ensure blades are completely dry before reattaching or storing.
- **Oiling Blades:** Apply 2-3 drops of clipper oil to the blade teeth before, during (if blades become warm), and after each use. This lubricates the blades, reduces friction, prevents rust, and helps dissipate heat.

- **Clipper Body Cleaning:** Wipe the clipper body with a clean, damp cloth. Do not immerse the clipper in water or use harsh chemicals.
- **Storage:** Store the clipper in a clean, dry place, away from direct sunlight and extreme temperatures. Keep the power cord neatly coiled to prevent damage.

7. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Clipper does not turn on.	No power, faulty cord, or internal issue.	Check power outlet. Inspect power cord for damage. If issues persist, contact customer support.
Blades get hot quickly.	Insufficient oil, dull blades, or prolonged use.	Apply clipper oil frequently. Replace dull blades. Take short breaks during extended grooming sessions.
Clipper pulls hair or cuts poorly.	Dull blades, dirty blades, or incorrect blade attachment.	Clean and oil blades. Ensure blade is correctly attached. Replace dull blades.
Excessive vibration or noise.	Loose blade, internal component issue.	Check blade attachment. If problem continues, discontinue use and contact customer support.

8. Specifications

Brand:

OUTLAW

Manufacturer:

Oster

Model:

Outlaw 2-Speed Super Duty Clipper

Power Source:

Corded Electric

Material:

Stainless Steel (Blades)

Special Features:

Two-Speed Control, Lightweight Design, Vent-Free Design

Product Dimensions:

Approximately 11 x 5 x 3 inches

Weight:

Approximately 2.55 Pounds

ASIN:

B008RPPGS6

9. Warranty and Support

For information regarding the product warranty, please refer to the documentation included with your clipper kit

or visit the official Oster/OUTLAW website. For technical support or service inquiries, please contact the manufacturer's customer service department using the contact information provided in your product packaging or on their official website.

10. Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is intended for grooming purposes only and should be used in accordance with the instructions provided.