

Avanti MO7103SST

Avanti MO7103SST Counter Top Microwave Oven User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Avanti MO7103SST Counter Top Microwave Oven. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Information

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door, hinges, or latches.
- Only qualified service personnel should adjust or repair this appliance.
- Always ensure proper ventilation around the microwave.

SETUP

Unpacking

Carefully remove all packaging materials from the microwave oven. Inspect the oven for any damage. Remove any protective film from surfaces. Ensure the glass turntable and turntable ring are present.

Placement

Place the microwave oven on a flat, stable surface capable of supporting its weight. Ensure adequate air circulation by maintaining a minimum clearance of 3 inches (7.5 cm) on the top, sides, and rear of the oven. Do not block ventilation openings.

The microwave oven should not be placed near heat sources such as a range or oven, or in direct sunlight, as this may affect its performance.



Image: Front view of the Avanti MO7103SST microwave oven, showing the door, handle, and control panel.



Image: Diagram illustrating the dimensions of the Avanti MO7103SST microwave oven: 17.75 inches wide, 12.75 inches deep, and 10.25 inches high.

Electrical Requirements

Connect the microwave oven to a properly grounded 3-prong outlet. Do not use an extension cord or adapter plug. Ensure the electrical circuit is rated for 115 Volts and 700 Watts.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a digital display, number pad (0-9), and dedicated function buttons for various cooking modes and settings.

Setting the Clock

1. Press the **CLOCK** button once.
2. Use the number pad to enter the current time.
3. Press the **CLOCK** button again to confirm.

Basic Microwave Cooking (Time Cook)

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the **COOK** button.
4. Use the number pad to enter the desired cooking time.
5. Press the **START/STOP** button to begin cooking.

Preset Cooking Functions

The oven includes six pre-programmed settings for common food items:

- **BAKED POTATO**
- **POPCORN**
- **PIZZA**
- **BEVERAGE**
- **FROZEN DINNER**
- **REHEAT**

To use a preset function, simply press the corresponding button. The oven will automatically set the cooking time and power level. Press **START/STOP** to begin.

Defrost Functions

The Avanti MO7103SST offers two defrost options:

- **SPEED DEFROST:** For quick defrosting of smaller items. Press the **SPEED DEFROST** button and enter the desired time.
- **DEFROST BY WEIGHT:** For defrosting based on the weight of the food. Press the **DEFROST BY WEIGHT** button and enter the food's weight.

Press **START/STOP** to initiate the defrost cycle.



Image: Interior view of the Avanti MO7103SST microwave oven with the door open, showing a bowl on the removable glass turntable.

MAINTENANCE AND CARE

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

Cleaning the Interior

For spills and splatters, wipe the interior with a soft, damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.

Turntable Care

The glass turntable and turntable ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Blown fuse/tripped circuit breaker.	Ensure door is firmly closed; Check power cord connection; Check household fuse/circuit breaker.


Problem	Possible Cause	Solution
Food not heating	Incorrect cooking time/power level; Microwave-safe dish not used.	Adjust cooking time/power; Use only microwave-safe cookware.
Turntable not rotating	Turntable not properly seated; Debris under turntable ring.	Ensure turntable and ring are correctly positioned; Clean under the turntable ring.
Display shows error code	Internal malfunction.	Unplug the oven for 30 seconds, then plug back in. If error persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	MO7103SST
Capacity	0.7 Cubic Feet
Wattage	700 watts
Voltage	115 Volts
Product Dimensions (W x D x H)	17.75 x 12.75 x 10.25 inches
Item Weight	22.9 Pounds
Color	Black/Stainless Steel
Material	Stainless Steel, Glass
Installation Type	Countertop
Special Features	Defrost, Turntable
Included Components	Microwave, Turntable, Care and Use Manual


WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Avanti website. Keep your proof of purchase for warranty claims. For technical assistance or service inquiries, please contact Avanti customer service directly.

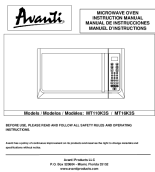

[Avanti Microwave Oven Instruction Manual MT110K3S / MT16K3S](#)

This is the instruction manual for Avanti Microwave Ovens, models MT110K3S and MT16K3S. It provides detailed information on safety precautions, installation, operation, control panel features, cooking techniques, and troubleshooting.

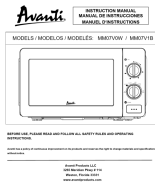

[Avanti MM07V0W / MM07V1B Microwave Oven Instruction Manual](#)

Comprehensive instruction manual for Avanti MM07V0W and MM07V1B microwave ovens, covering safety, installation, operation, cooking techniques, care, troubleshooting, and warranty information. Includes specifications and customer service details.




[Avanti MT09V0W/MT09V1B/MT09V3S Microwave Oven Instruction Manual](#)

User manual for the Avanti MT09V0W, MT09V1B, and MT09V3S microwave ovens. Provides safety instructions, installation guide, operating procedures, control panel details, cooking techniques, care and maintenance, troubleshooting, and warranty information.



[Avanti 1.5 cu. ft. Microwave Oven Instruction Manual](#)

This instruction manual provides detailed information on the safe operation, installation, and maintenance of the Avanti 1.5 cu. ft. Microwave Oven, models MT150V0W and MT150V3S.

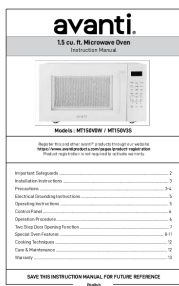

[Avanti 1.5 cu. ft. Microwave Oven Instruction Manual](#)

Instruction manual for the Avanti 1.5 cu. ft. Microwave Oven, covering important safeguards, installation, operation, control panel, special features, cooking techniques, care, and warranty.



[Avanti 0.9 cu. ft. Microwave Oven Instruction Manual](#)

Comprehensive instruction manual for the Avanti 0.9 cu. ft. Microwave Oven, covering important safeguards, installation, operation, control panel features, special oven functions, cooking techniques, and maintenance.