



Manuals.plus /

› Trademark Poker /

› Trademark Poker King's Head Dark Wood Dartboard Cabinet Set Instruction Manual

Trademark Poker 15-DG91004

Trademark Poker King's Head Dark Wood Dartboard Cabinet Set Instruction Manual

Model: 15-DG91004

1. INTRODUCTION

Thank you for purchasing the Trademark Poker King's Head Dark Wood Dartboard Cabinet Set. This set provides a complete dart playing experience, featuring a durable dartboard and a stylish cabinet. This manual provides essential information for the safe setup, operation, and maintenance of your dartboard cabinet set.

2. PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- Dark Wood Dartboard Cabinet
- Self-Healing Sisal Fiber Dartboard (Official 18-inch diameter)
- 6 Steel Tip Darts
- Chalkboard Scoreboard (integrated into cabinet doors)
- Chalk
- Eraser
- Wall Mounting Hardware

3. SAFETY INFORMATION

- **Adult Supervision:** Darts are sharp. Always ensure adult supervision when children are present.
- **Clear Area:** Ensure the playing area is clear of people, pets, and fragile objects before playing.
- **Proper Mounting:** Mount the cabinet securely to a sturdy wall stud to prevent it from falling.
- **Dart Handling:** Handle darts by the barrel, not the tip.
- **Target Only:** Always aim darts at the dartboard. Never throw darts at people or animals.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all components from the packaging. Inspect all parts for any damage. If any parts are missing or damaged, contact customer support.

4.2 Mounting the Cabinet

1. **Select Location:** Choose a suitable wall location, preferably with a wall stud for secure mounting. The center of the dartboard should be 5 feet 8 inches (1.73 meters) from the floor.
2. **Mark Holes:** Hold the cabinet against the wall at the desired height and mark the positions for the mounting screws.
3. **Drill Pilot Holes:** Drill pilot holes at the marked locations. If mounting into drywall without a stud, use appropriate wall anchors (not included).
4. **Secure Cabinet:** Attach the cabinet to the wall using the provided mounting hardware. Ensure it is level and securely fastened.



Figure 1: The King's Head Dartboard Cabinet in its closed position, ready for mounting.

4.3 Installing the Dartboard

1. **Position Dartboard:** The dartboard typically hangs on a central bracket within the cabinet. Align the dartboard's hanging mechanism with the bracket.
2. **Secure Dartboard:** Ensure the dartboard is securely seated and centered within the cabinet opening. The number 20 segment should be at the top.



Figure 2: The dartboard cabinet opened, showing the installed dartboard and integrated scoreboards.

5. OPERATING INSTRUCTIONS

5.1 Playing Darts

- **Throw Line:** The standard throw line (oche) is 7 feet 9¼ inches (2.37 meters) from the face of the dartboard.
- **Dart Grip:** Hold the dart comfortably with your fingers on the barrel.
- **Aim and Throw:** Aim for your desired target on the dartboard and throw the dart with a smooth, controlled motion.
- **Retrieving Darts:** Always retrieve darts carefully by pulling them straight out of the board.



Figure 3: The complete set, including the cabinet, darts, chalk, and eraser.

5.2 Using the Scoreboard

The cabinet doors feature integrated chalkboards for keeping score. Use the provided chalk and eraser to track scores for various dart games, such as 301, 501, or Cricket.



Figure 4: The cabinet doors feature chalkboards for scorekeeping, as shown with a practice target board.

6. MAINTENANCE

6.1 Dartboard Care

- **Rotation:** Periodically rotate the dartboard to distribute wear evenly across different scoring segments. This extends the life of the self-healing sisal fibers.
- **Storage:** When not in use, close the cabinet doors to protect the dartboard from dust and light.

6.2 Cabinet Care

- **Cleaning:** Wipe the wood cabinet with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and dry immediately. Avoid harsh chemicals.
- **Chalkboards:** Use the provided eraser or a damp cloth to clean the chalkboards.

6.3 Dart Care

- **Tip Sharpening:** Occasionally sharpen steel tips with a dart sharpener to maintain optimal penetration and reduce bounce-outs.
- **Flight Maintenance:** Straighten bent flights or replace damaged ones to ensure stable dart flight.

7. TROUBLESHOOTING

- **Darts not sticking:** Ensure dart tips are sharp. Check if the dartboard fibers are overly compressed in one area (rotate the board).
- **Cabinet feels loose:** Re-tighten mounting screws. Ensure the cabinet is mounted into a wall stud or appropriate heavy-duty anchors.
- **Chalkboard not erasing cleanly:** Use a slightly damp cloth to wipe the board, then dry thoroughly.

8. SPECIFICATIONS

Feature	Detail
Model Number	15-DG91004
Brand	Trademark Poker
Material	Engineered Wood (Cabinet), Sisal Fiber (Dartboard)
Color	Brown
Dimensions (Closed)	Approx. 20" W x 25" H x 3.25" D (50.8 cm W x 63.5 cm H x 8.26 cm D)
Dartboard Diameter	18 inches (Official Size)
Weight	Approx. 16.58 lbs (7.52 kg)
Included Components	Cabinet, Dartboard, 6 Steel Tip Darts, Chalk, Eraser, Mounting Hardware

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact Trademark Poker customer support. For technical assistance or replacement parts, please visit the Trademark Poker official website or contact their customer service department.

Please retain this manual for future reference.