

## **BLACK+DECKER GD1810BC**

# **BLACK+DECKER Electric Griddle with Removable Temperature Probe (Model GD1810BC) User Manual**

This manual provides instructions for the BLACK+DECKER Electric Griddle (Model GD1810BC), featuring a removable temperature probe, nonstick cooking surface, and large capacity for various cooking needs.

## **1. INTRODUCTION**

Thank you for choosing the BLACK+DECKER Electric Griddle. This appliance is designed for convenient indoor cooking, offering a large nonstick surface and precise temperature control for a variety of meals. Please read this manual thoroughly before use to ensure safe and efficient operation.

## **2. IMPORTANT SAFETY INFORMATION**

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### 3. PRODUCT FEATURES

- **Extra-Large Capacity:** The 8-serving cooking area offers 180 square inches of griddle surface, ideal for family meals.
- **Nonstick Cooking Surface:** A durable nonstick surface ensures easy cooking and quick cleanup.
- **Adjustable Temperature Control Probe:** The removable probe allows for precise temperature adjustments from "keep warm" to 400°F.
- **Removable Drip Tray:** Collects excess grease and fat for convenient disposal and healthier cooking.
- **Cool Touch Plastic Handles:** Designed for safe handling and movement of the griddle.
- **High Wattage:** Operates at 1440W for fast and even heating.



Figure 3.1: Overview of the BLACK+DECKER Electric Griddle.



**ExtraLarge  
Capacity**

Cook for the whole family

Figure 3.2: The extra-large cooking surface provides ample space for multiple items.



Figure 3.3: The adjustable temperature control probe allows for precise heat settings.

## 4. SETUP

1. **Unpack:** Carefully remove all packaging materials and any labels from the griddle.
2. **Clean:** Wash the griddle surface and drip tray with warm, soapy water. Rinse thoroughly and dry completely.
3. **Assemble:** Insert the removable temperature control probe into the receptacle on the side of the griddle. Ensure it is firmly seated.
4. **Position:** Place the griddle on a stable, heat-resistant, and level surface, away from walls or cabinets to allow for proper ventilation.
5. **Drip Tray:** Slide the removable drip tray into its designated slot beneath the griddle surface.

## 5. OPERATING INSTRUCTIONS

1. **Preheat:** Plug the temperature control probe into a standard 120V AC electrical outlet. Turn the temperature dial to

- your desired setting (e.g., 350°F for pancakes). The indicator light will illuminate, signaling that the griddle is heating.
2. **Ready to Cook:** The indicator light will turn off once the selected temperature is reached. The light will cycle on and off during cooking to maintain the temperature.
  3. **Cooking:** Place food directly onto the nonstick cooking surface. Adjust the temperature as needed for different foods.
  4. **Grease Management:** For foods that produce excess grease (like bacon), ensure the drip tray is in place. The griddle is designed to allow grease to flow into the tray.
  5. **Finish Cooking:** Once cooking is complete, turn the temperature dial to "OFF" and unplug the griddle from the outlet. Allow the griddle to cool completely before cleaning.

Your browser does not support the video tag.

Video 5.1: Demonstration of the Black + Decker Pancake Griddle in use, showing its large cooking surface and ease of use for breakfast items.

Your browser does not support the video tag.

Video 5.2: A user demonstrating the griddle's features, including its nonstick surface and temperature control, while preparing pancakes.

## 6. CLEANING AND MAINTENANCE


---

1. **Cool Down:** Always allow the griddle to cool completely before cleaning.
2. **Remove Probe:** Detach the temperature control probe from the griddle. The probe is not submersible.
3. **Empty Drip Tray:** Remove and empty the drip tray. Wash it with warm, soapy water.
4. **Clean Griddle:** The griddle plate is fully immersible once the temperature probe is removed. Wash the griddle surface with warm, soapy water using a soft cloth or sponge. Avoid abrasive cleaners or metal scouring pads that can damage the nonstick coating.
5. **Rinse and Dry:** Rinse the griddle and drip tray thoroughly and dry all parts completely before storing.
6. **Storage:** The cool-touch handles can be folded inward for compact storage. Store the griddle in a dry place.



## Removable Drip Tray

Figure 6.1: The removable drip tray simplifies cleanup of excess grease.

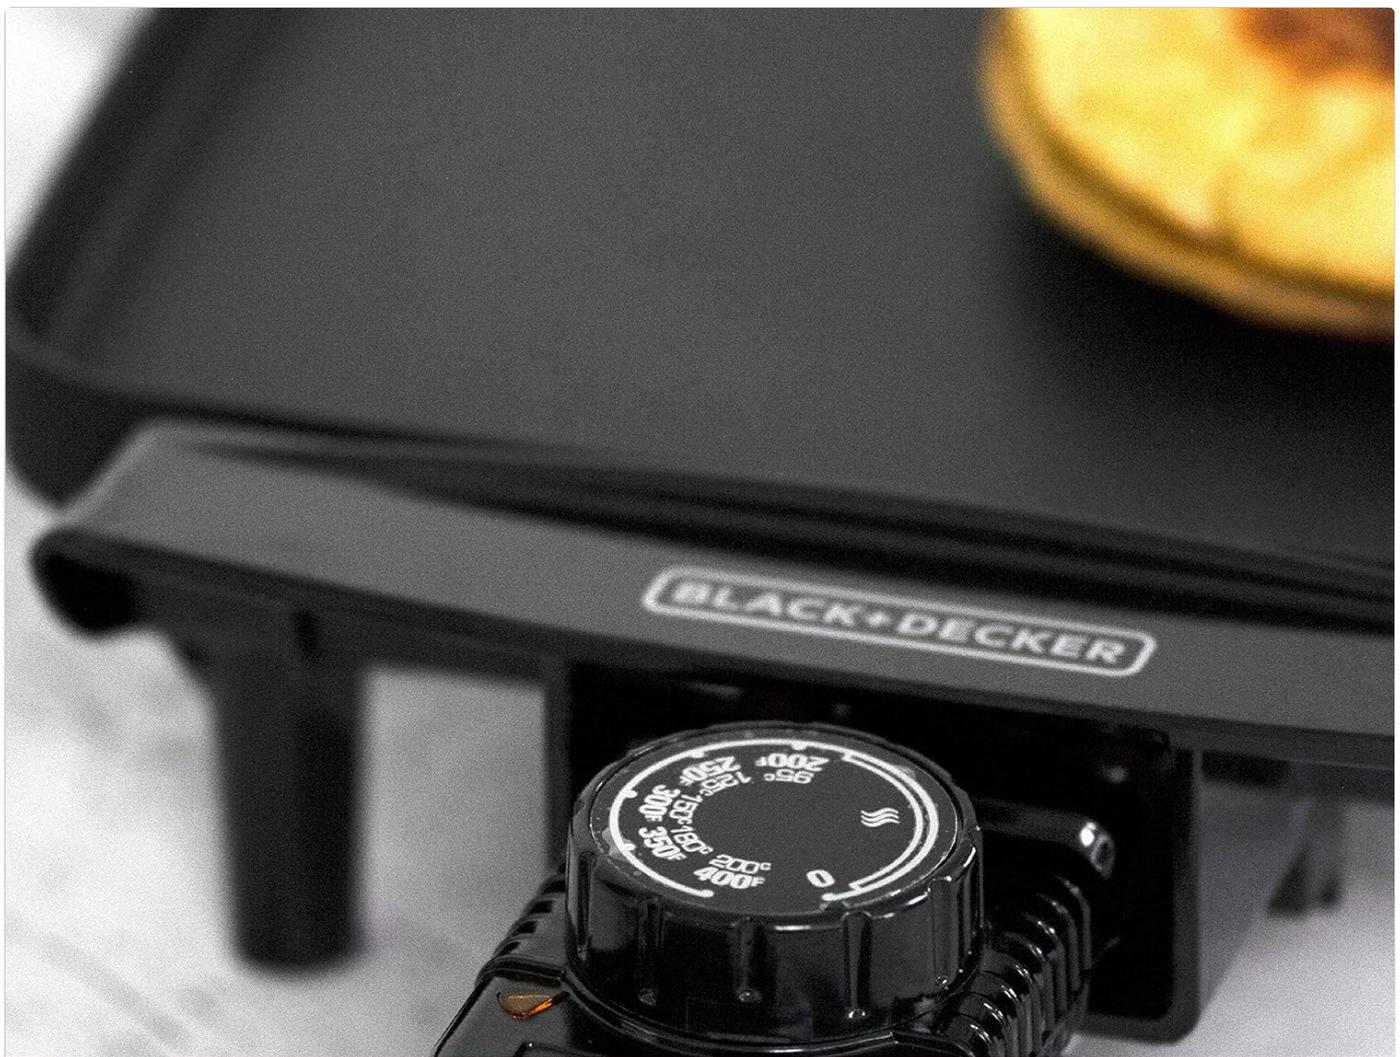

## Cool Touch Handles

Safely move the griddle using the cool touch handles

Figure 6.2: Cool touch handles ensure safe movement of the griddle.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Griddle not heating.	Not plugged in; temperature probe not fully inserted; power outlet issue.	Ensure probe is fully inserted and plugged into a working outlet. Check circuit breaker.
Food sticking to surface.	Nonstick coating damaged; insufficient oil/butter (if recipe requires).	Ensure nonstick surface is not scratched. Use a small amount of cooking oil or butter if desired.
Uneven heating.	Temperature probe not functioning correctly; griddle not preheated sufficiently.	Allow adequate preheating time until indicator light turns off. If problem persists, contact customer service.

## 8. SPECIFICATIONS

**Model Number:** GD1810BC

**Brand:** BLACK+DECKER

**Color:** Black

**Material:** Iron

**Product Dimensions:** 8.7"D x 21.2"W x 4.4"H

**Wattage:** 1440 watts

**Voltage:** 120 Volts

**Number of Settings:** 6 (Warm to 400°F)

**Special Features:** Cool Touch, Manual, Non Stick Coating, Temperature Control

**Included Components:** Griddle, Drip Tray, Temperature Dial Probe, Manual

**Item Weight:** 4.27 pounds (1.94 Kilograms)

**UPC:** 050875807068

## 9. WARRANTY AND SUPPORT

---

For warranty information, product support, or to register your product, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Keep your receipt as proof of purchase.

For further assistance, you may contact BLACK+DECKER customer service.