



[Manuals.plus](#) /

› [Generac](#) /

› Generac 7019 OneWash 3100 PSI Gas-Powered Pressure Washer User Manual

Generac 7019

Generac 7019 OneWash 3100 PSI Gas-Powered Pressure Washer User Manual

Model: 7019 | Brand: Generac

INTRODUCTION

The Generac 7019 OneWash Residential Pressure Washer is designed to provide powerful and versatile cleaning for various outdoor tasks. This gas-powered unit delivers 3100 PSI of pressure and 2.4 GPM, making it suitable for cleaning everything from patio furniture to driveways and decks. Its user-friendly design ensures easy assembly, hose connections, and comfortable operation across different terrains. This manual provides essential information for the safe and effective use of your pressure washer.



Figure 1: Front view of the Generac 7019 OneWash Pressure Washer.

SAFETY INFORMATION

Always prioritize safety when operating the pressure washer. Read and understand all safety warnings and instructions before use.

- **Read the Manual:** Thoroughly read the entire instruction manual before operating the unit.
- **Eye and Hearing Protection:** Always wear appropriate eye protection (safety glasses or goggles) and hearing protection when operating the pressure washer.
- **Proper Ventilation:** Operate the gas engine in a well-ventilated area to prevent carbon monoxide poisoning. Never operate indoors.
- **Fuel Handling:** Handle gasoline with extreme care. Store fuel in an approved container in a well-ventilated area away from ignition sources. Do not refuel a hot engine.
- **High-Pressure Spray:** The high-pressure spray can cause serious injury. Never direct the spray at people, pets, or electrical devices.
- **Stable Surface:** Operate the pressure washer on a stable, level surface to prevent tipping.

- **Children and Pets:** Keep children and pets away from the operating area.

SETUP

Assembly

Your Generac pressure washer requires minimal assembly. Typically, this involves attaching the handle, wheels, and spray gun holder. Refer to the included assembly guide for detailed, step-by-step instructions specific to your model.



Figure 2: Left side view of the pressure washer, showing the frame and wheel assembly.

Fuel and Oil

Before starting, ensure the engine has sufficient oil and fuel. Use fresh, unleaded gasoline and the recommended engine oil type as specified in your product manual. The unit features a large fuel tank for extended cleaning time between refills.

Connecting Hoses

Connect your garden hose to the pressure washer's water inlet. Ensure the connection is secure to prevent leaks. Then, connect the high-pressure hose to the pump outlet. The horizontal axial cam pump design allows for easy hose connections without needing to kneel down.

Video 1: Official Generac video demonstrating the features and setup of the OneWash Pressure Washer.

OPERATING INSTRUCTIONS

Starting the Engine

To start the engine, ensure the fuel valve is open and the choke is set correctly. Pull the recoil starter handle firmly until the engine starts. Once started, gradually move the choke to the 'run' position.

Nozzle Selection

The Generac 7019 comes with a set of quick-connect nozzle tips, each designed for specific cleaning tasks:

- **Red (0-degree):** Concentrated, high-impact stream for tough spots. Use with extreme caution.
- **Green (25-degree):** Fan spray for general cleaning of decks, patios, and driveways.
- **White (40-degree):** Wide fan spray for gentle cleaning of delicate surfaces like vehicles and siding.
- **Black (Soap):** Low-pressure stream for applying detergent.



Figure 3: Close-up of the Power Dial gun and integrated nozzle storage.

Using the Power Dial Gun

The ergonomic spray gun features an integrated Power Dial, allowing you to easily adjust pressure settings for various tasks directly on the gun. Simply turn the dial to select the desired setting:

- **Soap:** For applying detergent.
- **Car:** Gentle pressure for vehicle washing.
- **Wood:** Moderate pressure for cleaning wood surfaces.
- **Concrete:** High pressure for tough concrete cleaning.



Figure 4: Detailed view of the Power Dial on the spray gun, showing different cleaning settings.



Figure 5: The Generac pressure washer in use, cleaning house siding.



Figure 6: The Generac pressure washer positioned on a wooden deck, ready for use.

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Check Oil Levels:** Before each use, check the engine oil level and add if necessary.
- **Clean Air Filter:** Periodically inspect and clean or replace the air filter.
- **Spark Plug:** Inspect and clean or replace the spark plug as needed.
- **Nozzle Cleaning:** Clean nozzle tips regularly to prevent blockages.
- **Storage:** For long-term storage, drain all fuel and water from the unit. Store in a dry, protected area.

TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to these common troubleshooting tips:

- **Engine Won't Start:** Check fuel level, oil level, spark plug connection, and ensure the choke is set correctly.
- **Low Pressure:** Ensure the water supply is fully open, the garden hose is not kinked, and the nozzle tip is clean and correctly installed.
- **Pulsating Pressure:** This can indicate air in the pump. Ensure all air is purged from the system by running water through the pump with the engine off and the spray gun trigger open.
- **Leaks:** Check all hose connections for tightness and inspect hoses for damage.

SPECIFICATIONS

Feature	Detail
Brand	Generac
Model Number	7019
Power Source	Gas Powered
Maximum Pressure	3100 PSI
Maximum Flow Rate	2.4 GPM
Item Weight	65 Pounds
Product Dimensions (L x W x H)	24.2"L x 18.9"W x 35.5"H
Tank Volume	0.5 Gallons
Hose Length	25 feet (High-Pressure)



Figure 7: Dimensions of the Generac 7019 Pressure Washer.

WARRANTY AND SUPPORT

The Generac 7019 Pressure Washer comes with a **3-year limited warranty**. For warranty claims, technical assistance, or customer support, please refer to the contact information provided in your product packaging or visit the official Generac website. You can also reach out to customer support through your retailer.