

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ICE-WATCH](#) /

› [Ice-Watch Chronograph Multi-Color Dial Men's Watch CH.KOE.BB.S.12 User Manual](#)

## ICE-WATCH CH.KOE.BB.S.12

# **Ice-Watch Chronograph Multi-Color Dial Men's Watch**

Model: CH.KOE.BB.S.12

## INTRODUCTION

This manual provides essential instructions for the proper use, care, and maintenance of your Ice-Watch Chronograph Multi-Color Dial Men's Watch, model CH.KOE.BB.S.12. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

## PRODUCT OVERVIEW



**Figure 1:** Front view of the Ice-Watch Chronograph CH.KOE.BB.S.12. This image displays the multi-color dial with orange accents, three chronograph sub-dials, and the main timekeeping hands. The black silicone band and the orange transparent case are also visible.

The Ice-Watch Chronograph CH.KOE.BB.S.12 is a quartz movement watch featuring a multi-color dial with chronograph functionality. It is designed for durability and style, suitable for various activities.

## SETUP

## 1. Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all protective films are removed from the crystal and case back.

## 2. Setting the Time

1. Pull the crown (central knob on the right side of the watch) out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown back in to the normal position to start the watch.

## 3. Setting the Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the date change mechanism.
3. Once the correct date is displayed, push the crown back in to the normal position.



**Figure 2:** Side view of the watch, illustrating the crown and chronograph pushers. The crown is used for time and date adjustments, while the pushers control the chronograph functions.

## OPERATING THE CHRONOGRAPH

---

Your Ice-Watch features a chronograph function for measuring elapsed time. The chronograph is operated using the two pushers located above and below the crown.

- Start:** Press the upper pusher (A) to start the chronograph. The chronograph second hand will begin to move.
- Stop:** Press the upper pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
- Reset:** After stopping the chronograph, press the lower pusher (B) to reset all chronograph hands to their zero positions.

*Note:* Ensure the chronograph is stopped before attempting to reset it. Do not operate the pushers or crown while the watch is submerged in water.

## MAINTENANCE

---

### 1. Cleaning

To clean your watch, wipe the case and band with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials.

### 2. Water Resistance

This watch is marked as **10 ATM Water Resistant** on the dial, meaning it is suitable for swimming, snorkeling, and showering. However, it is crucial to ensure the crown is fully pushed in and the pushers are not operated while the watch is wet or submerged to prevent water ingress.

### 3. Battery Replacement

The watch is powered by a product-specific battery. When the watch stops or the second hand begins to jump erratically (indicating a low battery), it is recommended to have the battery replaced by a qualified watch technician. This ensures the water resistance seal is properly maintained.



**Figure 3:** Rear view of the watch, showing the stainless steel case back. This area typically contains model information and is where a watch technician would access the battery compartment.

## TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Chronograph hands not resetting to zero:** This may indicate a need for calibration or service. Consult a professional watch repair service.
- **Date not changing:** Ensure the time is set correctly, especially past midnight. If the issue persists, avoid manual adjustment between 9 PM and 3 AM.
- **Water inside the watch:** Immediately take the watch to a professional for inspection and drying to prevent further damage.

For issues not covered here, or if troubleshooting steps do not resolve the problem, please contact authorized service personnel.

## SPECIFICATIONS

Model Number	CH.KOE.BB.S.12
--------------	----------------

<b>Brand</b>	ICE-WATCH
<b>Movement Type</b>	Quartz
<b>Display Type</b>	Chronograph
<b>Case Diameter</b>	53 Millimetres
<b>Band Material</b>	Silicone
<b>Band Color</b>	Black
<b>Dial Color</b>	Multi-Color (Orange/Black)
<b>Water Resistance</b>	10 ATM (100 meters / 330 feet)
<b>Item Weight</b>	87 Grams
<b>Product Dimensions (LxWxH)</b>	10.01 x 10.01 x 5 cm
<b>Battery</b>	1 Product Specific battery (included)
<b>Manufacturer</b>	Ice-Watch

## WARRANTY

This Ice-Watch product is covered by a manufacturer's warranty. For specific details regarding the warranty period, coverage, and terms, please refer to the warranty card included with your purchase or visit the official Ice-Watch website. Keep your proof of purchase for warranty claims.

## SUPPORT

Should you require further assistance or have questions not addressed in this manual, please contact Ice-Watch customer support through their official website or the contact information provided with your product documentation. When contacting support, please have your watch model number (CH.KOE.BB.S.12) and purchase details readily available.

## Related Documents - CH.KOE.BB.S.12

 <p><a href="#">Ice-Watch User Manual: Getting Started and Setting Instructions</a></p>	<p>Official user manual for Ice-Watch timepieces, covering getting started, basic care, setting the date, and setting the time. Learn how to maintain your watch for optimal performance.</p>
 <p><a href="#">Ice-Watch User Manual and Operating Instructions</a></p>	<p>Comprehensive user manual for Ice-Watch timepieces, detailing setup, time/date adjustment, chronograph operation, and maintenance for optimal performance and water resistance.</p>

	<p><a href="#"><b>ICE Digit Boliday Digital Watch User Manual - Operation and Features</b></a></p> <p>Detailed user manual for the ICE Digit Boliday digital watch by ICE-Watch, covering all functions including time setting, chronograph, timer, world time, alarms, and water resistance.</p>
	<p><a href="#"><b>ICE WATCH Size Guide: Find Your Perfect Fit</b></a></p> <p>This guide provides detailed sizing information for various ICE WATCH models, helping you select the perfect watch for your wrist. Includes case width and total length measurements for models like ICE Boliday, ICE Smart, ICE Digit, ICE Chrono, and more.</p>
	<p><a href="#"><b>ICE Digit Explorer User Manual</b></a></p> <p>Comprehensive user manual for the ICE Digit Explorer watch, detailing its functions, settings, and operation.</p>
	<p><a href="#"><b>Ice-Watch Instruction Manual: Setting Time, Date, and Chronograph</b></a></p> <p>A comprehensive guide for Ice-Watch owners detailing how to set the time and date, operate the chronograph functions, and essential care instructions to maintain your watch's performance and longevity.</p>