

Manuals.plus /

› Sunbeam /

› Sunbeam 113494-001 Breadmaker Paddle Instruction Manual

## Sunbeam 113494-001-000

# Sunbeam 113494-001 Breadmaker Paddle Instruction Manual

For Sunbeam and Oster Bread Machines, including Model 5891

## INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of your Sunbeam 113494-001 Breadmaker Paddle. This replacement paddle is designed to restore the kneading function of compatible Sunbeam and Oster bread machines, ensuring optimal performance for your bread-making needs.

## PRODUCT OVERVIEW

The Sunbeam 113494-001 breadmaker paddle is a crucial component for your bread machine, responsible for mixing and kneading dough. It is constructed from durable plastic, designed for longevity and effective dough processing.



**Image 1:** The Sunbeam 113494-001 breadmaker paddle, a black plastic kneading blade.


## COMPATIBILITY AND MODEL VERIFICATION

This paddle is specifically designed to fit Sunbeam and Oster bread machines, including **Sunbeam Model 5891**. To ensure proper fitment, it is critical to verify your bread machine's model number before installation. Incompatible paddles may not function correctly or could damage your appliance.

**\*IMPORTANT\***  
**Before Placing Your Order**  
**Check On The Sides,**  
**The Bottom And The Control Panel**  
**For The Brand Name & Model Number**  
**Displayed As An Adhesive Decal,**  
**Ink Stamp Or Embedded Impression.**

**Image 2:** An important notice advising users to check the brand name and model number on their bread machine before purchasing a replacement part. This information is typically found on the sides, bottom, or control panel as an adhesive decal, ink stamp, or embedded impression.

Locate the identification label on your bread machine. This label typically contains the brand name, model number, and other electrical specifications. Compare your machine's model number with the compatible models listed for this paddle.

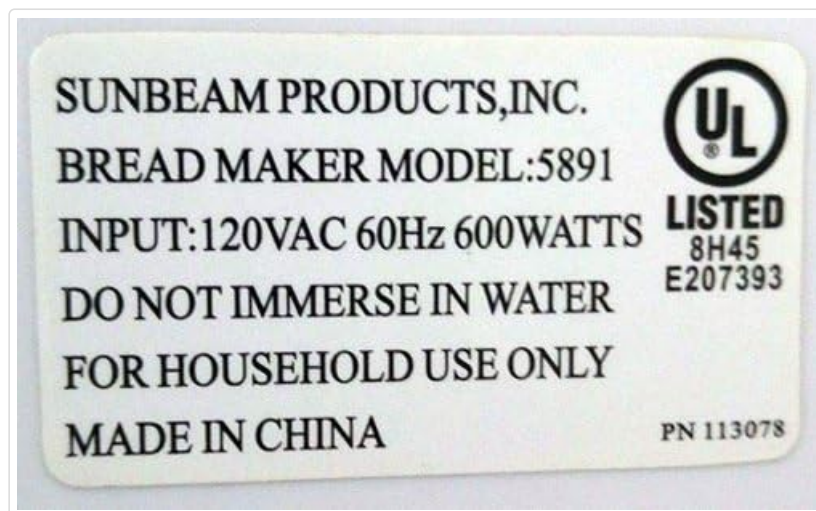

**Image 3:** Example of a Sunbeam bread maker label, showing "BREAD MAKER MODEL: 5891" along with electrical specifications and manufacturing details. This label helps confirm compatibility.



**Image 4:** Another example of a Sunbeam bread maker label, indicating "Model no.: 5891-33" and "SERVICE#5891". This label also provides electrical details and care instructions in multiple languages.

## INSTALLATION INSTRUCTIONS

---

1. **Ensure Safety:** Before installing the paddle, unplug your bread machine from the power outlet to prevent electrical hazards.
2. **Remove Bread Pan:** Carefully remove the bread pan from the bread machine.
3. **Inspect Drive Shaft:** Check the drive shaft at the bottom of the bread pan for any debris or residue. Clean if necessary.
4. **Install Paddle:** Align the hole in the center of the new Sunbeam 113494-001 paddle with the drive shaft in the bread pan. Press the paddle firmly onto the shaft until it is securely seated. Ensure it can rotate freely.
5. **Reinsert Bread Pan:** Place the bread pan back into the bread machine, ensuring it is locked into position according to your machine's specific instructions.

*Note:* The paddle should fit snugly but allow for rotation. If it feels excessively loose or does not seat properly, re-verify compatibility with your bread machine model.

## OPERATING THE BREADMAKER WITH THE NEW PADDLE

---

Once the paddle is correctly installed, your bread machine is ready for use. The paddle will automatically engage during the kneading cycles of your selected bread program. It will mix the ingredients thoroughly to form dough and continue kneading to develop gluten, which is essential for bread structure.

- Always add ingredients in the order specified by your bread machine's recipe or manual.
- Ensure the paddle is at the bottom of the bread pan before adding ingredients.
- Monitor the initial mixing phase to ensure the paddle is effectively incorporating all ingredients.

## MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance will extend the life of your breadmaker paddle and ensure hygienic operation.

- **Cleaning:** After each use, remove the paddle from the bread pan. The manufacturer recommends **Hand Wash Only**. Use warm, soapy water and a soft sponge or cloth to clean the paddle. Avoid abrasive cleaners or scouring pads that could damage the surface.
- **Drying:** Thoroughly rinse the paddle and dry it completely before storing or reinstalling.
- **Storage:** Store the paddle in a clean, dry place, preferably with the bread pan, to prevent loss.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Paddle does not rotate or mix dough effectively.	<ul style="list-style-type: none"> <li>• Paddle not seated correctly on the drive shaft.</li> <li>• Drive shaft or paddle hole is obstructed by dried dough.</li> <li>• Paddle is incompatible with the bread machine model.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove bread pan, ensure paddle is firmly pressed onto the shaft.</li> <li>• Clean the drive shaft and paddle thoroughly.</li> <li>• Verify your bread machine's model number against the paddle's compatibility.</li> </ul>
Paddle gets stuck in the baked bread.	<ul style="list-style-type: none"> <li>• Common occurrence with bread machines.</li> <li>• Paddle may be slightly loose on the shaft, allowing dough to bake around it.</li> </ul>	<ul style="list-style-type: none"> <li>• Allow bread to cool slightly before attempting to remove the paddle.</li> <li>• Use a non-abrasive tool (e.g., plastic spatula) to gently pry the paddle out.</li> <li>• Ensure paddle is securely seated before starting a cycle.</li> </ul>
Dough is not fully mixed or kneaded.	<ul style="list-style-type: none"> <li>• Incorrect ingredient ratios.</li> <li>• Paddle not functioning optimally.</li> </ul>	<ul style="list-style-type: none"> <li>• Refer to your bread machine's recipe book for correct ingredient measurements.</li> <li>• Ensure paddle is clean and properly installed.</li> </ul>

## SPECIFICATIONS

- **Part Number:** 113494-001-000
- **Model Number (Compatible Bread Machine):** 5891
- **Brand:** Sunbeam / Oster
- **Material:** Plastic
- **Color:** Black
- **Item Weight:** Approximately 2.11 ounces (60 grams)
- **Product Care Instructions:** Hand Wash Only
- **UPC:** 744539031073
- **ASIN:** B008W736J0

## WARRANTY AND SUPPORT

For specific warranty information regarding your Sunbeam 113494-001 Breadmaker Paddle, please refer to the documentation provided with your original bread machine or contact Sunbeam customer support directly. If you encounter issues not covered in this manual, or require further assistance, please reach out to Sunbeam customer service.

Contact information for Sunbeam can typically be found on their official website or in your bread machine's original user manual.