

[Manuals.plus](#) /

> [DINEX](#) /

> Dinex DX1196ST8714 Lid with Straw Slot for 8 Oz. Tumbler Instruction Manual

DINEX DX1196ST8714

Instruction Manual

DINEX DX1196ST8714 LID WITH STRAW SLOT FOR 8 OZ. TUMBLER

Model: DX1196ST8714 | Brand: DINEX

1. Introduction

This manual provides essential information for the proper use and care of your Dinex DX1196ST8714 Lid. Designed for 8 oz. tumblers, this translucent plastic lid features a convenient straw slot, making it ideal for various beverage service applications. Please read these instructions thoroughly before use to ensure optimal performance and longevity of the product.

2. Product Overview and Components

The Dinex DX1196ST8714 Lid is a single-piece, translucent plastic lid. It is designed to securely fit 8 oz. tumblers and includes a dedicated slot for a straw.



Figure 2.1: Top view of the Dinex DX1196ST8714 Lid. This image shows the flat, circular design of the lid, highlighting the

embossed Dinex logo and the overall translucent appearance.



Figure 2.2: Angled view of the Dinex DX1196ST8714 Lid. This perspective clearly displays the straw slot and the structural elements designed for a secure fit on a tumbler.

What's in the Box:

- Dinex DX1196ST8714 Lid (Quantity as per packaging)

3. Setup and Assembly

The Dinex DX1196ST8714 Lid is designed for immediate use and requires no assembly. Simply ensure the lid is clean before first use.

1. **Inspect:** Before first use, inspect each lid for any signs of damage or manufacturing defects. Do not use damaged lids.
2. **Clean:** Wash the lid thoroughly with warm, soapy water and rinse completely. Allow to air dry or dry with a clean cloth.

4. Operating Instructions

To use the Dinex DX1196ST8714 Lid with your 8 oz. tumbler:

1. **Fill Tumbler:** Pour your desired beverage into an 8 oz. tumbler. Ensure the liquid level is below the rim to prevent spills when attaching the lid.
2. **Position Lid:** Place the lid squarely on top of the tumbler, aligning the edges.
3. **Secure Lid:** Press down firmly around the edges of the lid until it creates a secure seal with the tumbler. You may hear a slight click as it locks into place.
4. **Insert Straw:** If desired, insert a straw through the designated straw slot in the center of the lid.



Figure 4.1: Lid attached to a blue tumbler. This image demonstrates the lid's fit on a standard 8 oz. tumbler, showing how it seals the container.



Figure 4.2: Lid attached to a clear tumbler. This image provides another view of the lid in use, highlighting its translucent nature and secure fit.

Note: This lid is designed for single-use or limited reuse in appropriate settings. Always ensure a tight seal to prevent leaks.

5. Care and Maintenance

Proper care and maintenance will help ensure hygiene and extend the life of the lid if intended for multiple uses.

- **Cleaning:** Wash immediately after each use with warm water and mild dish soap. Use a soft sponge or cloth.
- **Rinsing:** Rinse thoroughly to remove all soap residue.
- **Drying:** Allow to air dry completely before storing, or dry with a clean, lint-free cloth.
- **Storage:** Store in a clean, dry place away from direct sunlight and extreme temperatures.
- **Dishwasher Safety:** Consult your local regulations or product packaging for specific dishwasher safety guidelines. Generally, these lids are designed for disposable or limited reuse and may not be suitable for high-temperature commercial dishwashers.

Important: Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the lid's surface.

6. Troubleshooting

This section addresses common issues you might encounter with the Dinex DX1196ST8714 Lid.

Problem	Possible Cause	Solution
Lid does not fit securely.	<ul style="list-style-type: none">• Incorrect tumbler size (not 8 oz.).• Lid or tumbler rim is wet or dirty.• Lid is damaged or warped.	<ul style="list-style-type: none">• Ensure you are using an 8 oz. tumbler compatible with this lid.• Clean and dry both the lid and the tumbler rim before attempting to seal.• Replace the lid if it appears damaged.
Liquid leaks from under the lid.	<ul style="list-style-type: none">• Lid not fully sealed.• Tumbler overfilled.• Lid or tumbler rim is damaged.	<ul style="list-style-type: none">• Press down firmly around the entire edge of the lid to ensure a complete seal.• Do not overfill the tumbler.• Inspect lid and tumbler for cracks or deformities; replace if damaged.

7. Specifications

Feature	Detail
Model Number	DX1196ST8714
Brand	DINEX
Color	Translucent
Material	Plastic
Compatibility	8 oz. Tumblers
Features	Straw Slot, Disposable (as per feature bullets)
Product Dimensions	15 x 6.5 x 15 inches (Packaging/Case Dimensions); 3 Pounds (Weight of case)
ASIN	B008X632OO

Note: Product dimensions and weight refer to the packaged case of 1000 lids. Individual lid dimensions are designed to fit 8 oz. tumblers.

8. Warranty and Support

For information regarding warranty, returns, or product support for your Dinex DX1196ST8714 Lid, please refer to the original purchase documentation or contact the retailer/distributor from whom the product was acquired. You may also visit the official [DINEX Store on Amazon](#) for general brand information.

As this product is typically sold in bulk for commercial or institutional use, specific warranty details may vary based on your supplier agreement.

