



Manuals.plus /

› Cuisinart /

› Cuisinart MSC-600 3-In-1 Cook Central 6-Quart Multi-Cooker Instruction Manual

## Cuisinart MSC-600

# Cuisinart MSC-600 3-In-1 Cook Central 6-Quart Multi-Cooker Instruction Manual

Brand: **Cuisinart** | Model: **MSC-600**

## INTRODUCTION

The Cuisinart MSC-600 3-In-1 Cook Central 6-Quart Multi-Cooker is designed to simplify your cooking process. This versatile appliance combines the functions of a slow cooker, a browning/sauté pan, and a steamer into one convenient unit, allowing you to create delicious one-pot meals with ease. Its intuitive controls and thoughtful design make it an essential tool for any kitchen.

## PRODUCT OVERVIEW AND KEY FEATURES

- **One-Touch Mode Switching:** Seamlessly transition between cooking modes when your recipe calls for combination cooking.
- **Extra-Large Blue Backlit LCD Display:** Easily view time and temperature settings for precise control.
- **Removable 6-Quart Nonstick Aluminum Cooking Pot:** Ensures even heat distribution for browning and sautéing, and simplifies cleanup.
- **Glass Lid with Cool-Touch Handle:** Monitor cooking progress without releasing heat, and handle safely.
- **Dishwasher-Safe Removable Parts:** Pot, steaming rack, and glass lid are dishwasher-safe for effortless cleanup.
- **Steaming Rack Included:** Elevate ingredients for healthy steaming.
- **BPA Free:** All parts that come in contact with food are BPA free.



*The Cuisinart MSC-600 Multi-Cooker, showcasing its sleek stainless steel design and digital control panel.*



## *Delicious meals*

3 fully programmable functions:  
slow cook, steam, brown/sauté.

*Prepare delicious meals with the multi-cooker's three fully programmable functions: slow cook, steam, and brown/sauté.*

### **COMPONENTS**

The Cuisinart MSC-600 Multi-Cooker consists of several key components designed for optimal performance and user convenience:

- **Glass Lid with Handle:** The tempered glass lid allows you to monitor your food without lifting the lid, preserving heat and moisture. Its high-arch, cool-touch handle ensures safe handling.
- **Removable Steaming Rack:** This rack can be placed in either a high or low position within the cooking pot, elevating ingredients for effective steaming.
- **6-Quart Nonstick Aluminum Cooking Pot:** The heart of the multi-cooker, this pot is nonstick for easy food release and cleanup. Its generous capacity is perfect for large meals, and it features convenient pouring spouts.



## Slow cook

On high/low/simmer/warm for up to 24 hours.

*The main components of the Cuisinart Multi-Cooker, including the removable nonstick cooking pot, glass lid, and steaming rack.*

### CONTROL PANEL OVERVIEW

The intuitive control panel features a large, blue backlit LCD display that clearly shows time and temperature settings. It provides easy access to all cooking functions and adjustments.

- **Cooking Function Buttons:** Select from Slow Cook, Brown/Sauté, or Steam.
- **Time Directionals (+/-):** Adjust your desired cooking time in minutes or hours.
- **Temperature Directionals (+/-):** Set cooking temperatures up to 400°F.
- **Start/Stop Button:** Initiate or end any cooking function.

*Watch this video for a detailed overview of the Cuisinart MSC-600 Multi-Cooker's features, including its removable parts and the functionality of its digital control panel.*

### OPERATING INSTRUCTIONS

#### Slow Cook Function

Ideal for dishes requiring long, slow simmering. The Slow Cook function offers three temperature settings: High, Low, and Simmer. It also features a 24-hour programmable timer and an automatic Keep Warm mode, ensuring your food is ready when you are.



## Brown/sauté

Temps up to 400°F; steam for up to 90 minutes.

*The multi-cooker set to Slow Cook mode, offering high, low, simmer, and warm settings for up to 24 hours.*

### **Brown/Sauté Function**

Use this function to brown meats or sauté vegetables directly in the cooking pot, eliminating the need for a separate stovetop pan. Temperatures can be set from 150°F up to 400°F, allowing for versatile cooking. The display will flash until the set temperature is reached.



## Dishwasher safe

Removable, dishwasher-safe, 6-quart nonstick cooking pot and glass lid with cool touch handles.

*The multi-cooker set to Brown/Sauté mode, with temperatures adjustable up to 400°F.*

### Steam Function

Steaming is a healthy cooking method that requires no butter or oil. Use the included steaming rack with up to 2 quarts of water or liquid. The steam function can operate for up to 90 minutes, perfect for vegetables, fish, or even custards.

### RECIPE EXAMPLE: LEMON ROSEMARY CHICKEN

This recipe demonstrates the seamless transition between the Brown/Sauté and Slow Cook functions for a flavorful one-pot meal.

1. Set the multi-cooker to **Brown/Sauté** at 400°F. Allow it to preheat until the temperature stops flashing and the unit beeps.
2. Add a small amount of olive oil to the nonstick cooking pot.
3. Lightly dredge chicken thighs (or preferred chicken pieces) in seasoned flour (pre-seasoned with salt and pepper).
4. Carefully place chicken pieces into the hot pot, ensuring they are not touching. Brown on one side until golden.
5. Flip the chicken pieces and brown the other side until golden.
6. Remove the browned chicken from the pot and set aside.
7. Add sliced onions, minced garlic, and fresh rosemary sprigs to the pot. Sauté until softened and fragrant, incorporating any flavorful bits from the bottom of the pot.
8. Add lemon juice, chicken broth, and lemon zest to the pot, stirring to combine.

- Return the browned chicken pieces to the pot, nestling them among the vegetables and liquid.
- Switch the multi-cooker to **Slow Cook** (High setting). Set the timer for 2 hours. The unit will automatically switch to Keep Warm mode once cooking is complete.

*Follow along with this video demonstration to prepare a delicious Lemon Rosemary Chicken using the Cuisinart Multi-Cooker's Brown/Sauté and Slow Cook functions.*

## CARE AND CLEANING

Proper care ensures the longevity of your Cuisinart Multi-Cooker:

- **Removable Parts:** The nonstick cooking pot, glass lid, and steaming rack are dishwasher-safe for easy cleanup.
- **Main Unit:** Wipe the stainless steel housing with a damp cloth. Do not immerse the main unit in water.
- **Storage:** Ensure all parts are clean and dry before storing.

# Cook Central<sup>®</sup> 6-Quart Multicooker



*The removable cooking pot, lid, and steaming rack are all dishwasher safe for convenient cleaning.*

## PRODUCT SPECIFICATIONS

Specification	Value
Brand	Cuisinart
Model Number	MSC-600
Capacity	6 Quarts
Color	Silver
Material	Stainless Steel
Product Dimensions	18"D x 11"W x 10.5"H
Wattage	960 watts
Voltage	120 Volts
Control Method	Touch
Control Type	Programmable
Number of Settings	3 (Slow Cook, Brown/Sauté, Steam)
Dishwasher Safe Parts	Removable pot, lid, steaming rack
UPC	086279046543

# Cook Central® 6-Quart Multicooker



*Detailed dimensions of the Cuisinart MSC-600 Multi-Cooker.*

## TROUBLESHOOTING

For common issues and solutions, please refer to the official Troubleshooting Guide:  
[Troubleshooting Guide \(PDF\)](#)

## WARRANTY AND SUPPORT

The Cuisinart MSC-600 3-In-1 Cook Central 6-Quart Multi-Cooker comes with a **Limited 3-Year Warranty**.  
For detailed instructions, safety information, and full warranty terms, please consult the User Manual:  
[User Manual \(PDF\)](#)