

ewave 3517203600

Daewoo Microwave Glass Plate/Tray 10" User Manual

Model: 3517203600 | Brand: ewave

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your ewave 10-inch Microwave Glass Plate/Tray, model 3517203600. This glass tray is designed as a replacement part for various microwave oven models, ensuring proper rotation and even heating of food.

2. SAFETY INFORMATION

- Always ensure the glass tray is clean and free of debris before placing it in the microwave.
- Handle the glass tray with care to prevent chipping or breakage.
- Do not use a cracked or broken glass tray, as it can lead to uneven heating or damage to the microwave.
- Ensure the tray is properly seated on the turntable support before operating the microwave.
- This product is microwave safe and dishwasher safe.

3. SETUP AND INSTALLATION

The ewave 10-inch Microwave Glass Plate/Tray is designed for easy installation. Follow these steps to properly set up the tray in your compatible microwave oven:

- Unpack the Tray:** Carefully remove the glass tray from its packaging. Inspect it for any signs of damage during transit.
- Clean the Microwave Interior:** Before installing the new tray, ensure the microwave oven's interior, especially the turntable support and roller ring (if applicable), is clean and free of food particles or grease.
- Position the Roller Ring (if applicable):** If your microwave uses a roller ring, place it securely in the center groove at the bottom of the microwave cavity.
- Place the Glass Tray:** Carefully place the glass tray onto the turntable support or roller ring. Ensure the three indentations on the underside of the glass tray align with the corresponding pegs on the turntable coupler in the center of the microwave.
- Verify Stability:** Gently rotate the tray by hand to ensure it sits flat and rotates smoothly without wobbling.



Figure 3.1: The ewave 10-inch Microwave Glass Plate/Tray. This image shows the clear glass construction and the three central indentations designed to fit onto the microwave's turntable coupler, ensuring proper rotation.

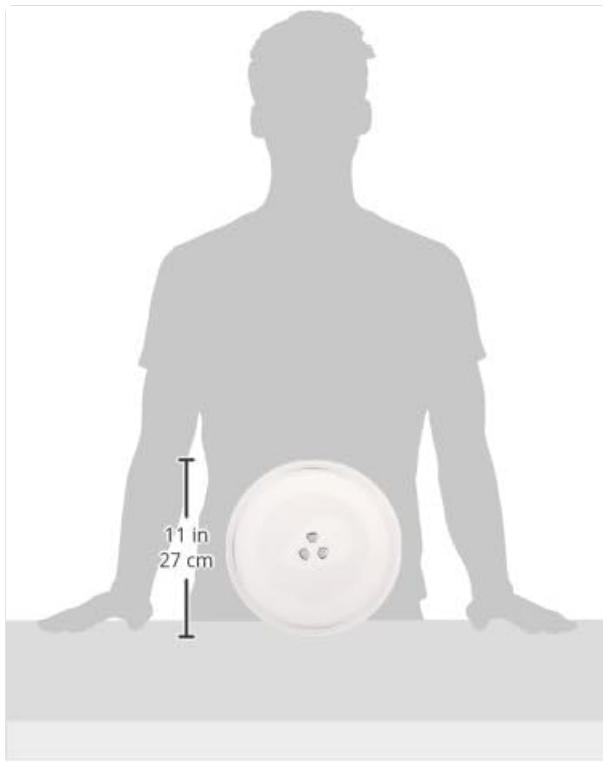


Figure 3.2: Dimensional view of the glass plate. This diagram illustrates the 10-inch diameter of the glass plate, confirming its size for compatibility with various microwave models.

4. OPERATING INSTRUCTIONS

Once installed, the glass plate operates as an integral part of your microwave's turntable system. No specific operational steps are required for the plate itself beyond ensuring it is correctly positioned.

- Place food containers directly on the glass tray for heating.
- Ensure that containers do not exceed the diameter of the tray to allow for proper rotation.
- The tray will rotate automatically when the microwave is in operation, ensuring even cooking.

Compatible Models:

This 10-inch glass tray is compatible with the following Daewoo and Emerson microwave models:

- Daewoo MW8625
- Daewoo MW8675
- Daewoo MW8778
- Emerson MW8618W
- Emerson MW8625W
- Emerson MW8626W
- Emerson MW8669W
- Emerson MW8675S
- Emerson MW8675W
- Emerson MW8700W
- Emerson MW8778B
- Emerson MW8785SS

Note: This list is based on common compatibility. Always verify the required tray size and coupling mechanism for your specific microwave model before purchase.

5. MAINTENANCE AND CLEANING

Regular cleaning of your glass tray will ensure hygiene and prolong its lifespan.

- Daily Cleaning:** After each use, wipe the tray with a damp cloth to remove any food spills.
- Deep Cleaning:** For stubborn stains or dried-on food, the glass tray can be washed with warm, soapy water. Use a non-abrasive sponge or cloth.
- Dishwasher Safe:** The glass tray is dishwasher safe, allowing for convenient and thorough cleaning.
- Drying:** Ensure the tray is completely dry before placing it back into the microwave.
- Inspection:** Periodically inspect the tray for any chips, cracks, or signs of wear. Replace the tray if any damage is observed.

6. TROUBLESHOOTING

If you encounter issues with your microwave glass plate, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Tray does not rotate.	Tray not seated correctly on coupler/roller ring; debris under tray; motor malfunction.	Ensure tray is properly aligned with the coupler. Clean under the tray and roller ring. If problem persists, consult your microwave's service manual.
Tray wobbles or makes noise.	Tray not seated correctly; roller ring damaged or missing; uneven surface.	Re-seat the tray. Check the roller ring for damage or proper placement. Ensure the microwave is on a flat, stable surface.
Food not heating evenly.	Tray not rotating; food container too large; microwave power issues.	Verify tray rotation. Use smaller, microwave-safe containers. If the tray rotates correctly, the issue may be with the microwave unit itself.
Tray is chipped or cracked.	Impact damage; thermal shock.	Replace the glass tray immediately to prevent further damage or safety hazards.

7. SPECIFICATIONS

Model Number	3517203600
Brand	ewave
Material	Glass
Shape	Round
Diameter	10 inches (approximately 25.4 cm)
Product Dimensions	10 x 0.6 x 10 inches
Item Weight	1.4 pounds (approximately 0.64 kg)
Special Features	Microwave Safe, Dishwasher Safe

Manufacturer

Funai Corporation Inc

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your ewave Microwave Glass Plate/Tray, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: [Funai Corporation Inc](#)

© 2024 ewave. All rights reserved.