

[manuals.plus](#) /

- › [Step2](#) /
- › [Step2 Grand Walk-In Kitchen & Grill Kids Playset Instruction Manual](#)

## Step2 85316

# Step2 Grand Walk-In Kitchen & Grill Kids Playset

Model: 85316

## 1. PRODUCT OVERVIEW

---

The Step2 Grand Walk-In Kitchen & Grill is an interactive playset designed for imaginative play. It features a spacious walk-in design, realistic electronic elements, and a comprehensive accessory package to enhance the play experience.



**Figure 1:** The complete Step2 Grand Walk-In Kitchen & Grill Playset, showcasing its spacious design and various play areas.

## 2. SAFETY INFORMATION

---

**WARNING: CHOKING HAZARD - Small parts. Sharp points. Adult assembly required.**

- Ensure all small parts are securely fastened during assembly and regularly check for loose components.
- Adult supervision is recommended during play.
- Keep batteries out of reach of small children.

## 3. SETUP AND ASSEMBLY

---

Adult assembly is required. Please follow the included assembly hardware and instructions carefully. A power drill may expedite the process.

### 3.1. Components

The playset includes the main kitchen and grill structure, along with a 103-piece accessory package. This package contains various culinary products, condiments, dishes, and utensils.



**Figure 2:** The extensive 103-piece accessory package, including various play food items, pots, pans, and utensils.

### 3.2. Battery Installation

The playset requires **4 AAA batteries** for its electronic features (not included). Locate the battery compartments on the stove burners and grill, typically on the underside or rear of the electronic components. Insert batteries according to polarity markings.

### 3.3. Placement

This playset is suitable for both indoor and outdoor use. When placing outdoors, consider a shaded area to prevent excessive sun exposure and potential fading of colors. Ensure sufficient space around the playset for children to move and play safely.





**Figure 3:** Children engaging with the playset, demonstrating the spacious walk-in design that accommodates multiple users.

## 4. OPERATING INSTRUCTIONS

---

The Grand Walk-In Kitchen & Grill offers various interactive elements for engaging play.

### 4.1. Electronic Features

- **Stove Burners:** Place a pot or pan on the stove burners to activate realistic sizzling and boiling sounds, accompanied by lights.
- **Grill:** Open the grill lid and press the button to activate grilling sounds and lights, simulating a real barbecue experience.
- **Microwave:** The pretend microwave features electronic sounds for added realism.

# Realistic Lights & Sounds

The grill and pretend stovetop light up & make real cooking sounds



Figure 4: A close-up view of the playset's stove and grill, highlighting the interactive lights and sounds features.

## 4.2. Functional Areas

- **Refrigerator:** The playset includes a pretend refrigerator with a molded-in water and ice dispenser for realistic role-play.
- **Sink:** A pretend sink with a swivel faucet allows for imaginative dishwashing.
- **Storage:** Utilize the various cupboards, shelves, and bins for organizing the 103-piece accessory set.





**Figure 5:** Multiple children interacting with the kitchen's various features, including the sink, countertop, and storage areas.

### 4.3. Official Product Video

Your browser does not support the video tag.

**Video 1:** An official product video showcasing the Step2 Grand Walk-In Kitchen & Grill, demonstrating its features and interactive play opportunities.

## 5. MAINTENANCE

Regular cleaning and inspection will ensure the longevity and safety of your playset.

### 5.1. Cleaning

To maintain a sanitary play environment, wipe down the playset with disinfectant wipes or standard household cleaners. Avoid abrasive cleaners that may damage the plastic surface.

### 5.2. Durability

The playset is constructed from durable, double-walled plastic designed to withstand years of use. The colors are molded-in, ensuring they will not chip, fade, crack, or peel.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your playset, please review the following common solutions:

- **Electronic Features Not Working:** Check that 4 AAA batteries are correctly installed and are not depleted. Replace batteries if necessary.
- **Loose Components:** Periodically inspect all screws and connections. Tighten any loose parts to ensure stability and safety.

## 7. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	36.61 x 47.2 x 50.7 inches
Item Weight	30.4 pounds
Item Model Number	85316
Manufacturer Recommended Age	24 months - 8 years
Batteries Required	4 AAA batteries (not included)
Manufacturer	Step2



**Figure 6:** Visual representation of the playset's dimensions, showing an average 2-year-old child for scale.

## 8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Step2 website. Contact customer service for assistance with any product-related inquiries.

### Related Documents - 85316



#### [Step2 Adventure Camper 4205 Assembly Instructions and Safety Guide](#)

Detailed assembly instructions, safety guidelines, and operational information for the Step2 Adventure Camper (Model 4205). This guide covers setup, warnings, maintenance, and part identification for safe play.





### [Step2 Neat & Tidy Cottage Homestyle Edition Assembly Instructions](#)

Comprehensive assembly instructions for the Step2 Neat & Tidy Cottage Homestyle Edition playhouse. Includes a list of parts, hardware, and step-by-step visual guides for assembly. Features multilingual support and tips for installation.



### [Step2 Double Showers Splash Water Table: Assembly & Safety Guide \(Model 421500\)](#)

Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Double Showers Splash Water Table (Model 421500). Includes details on adult supervision, cleaning, and product specifications.



### [Step2 Clubhouse Climber 8012/8023 Assembly and Safety Instructions](#)

Comprehensive assembly, safety warnings, operation, and maintenance instructions for the Step2 Clubhouse Climber 8012/8023 playset. Includes parts list, installation guide, and safety guidelines.



### [Step2 Putt & Splash Center Assembly Instructions and Safety Guide](#)

Comprehensive assembly instructions and safety guidelines for the Step2 Putt & Splash Center, designed for children aged 1.5 years and up. Learn how to safely assemble, clean, and use the water play center.



### [Step2 Lifestyle Dream Kitchen™ Assembly and Safety Guide](#)

Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Lifestyle Dream Kitchen™ toy. Learn how to safely assemble and maintain your child's play kitchen.