



Manuals.plus /

- › F&D /
- › F&D F700UF 5.1 Multimedia Speaker System User Manual

F&D F700U

F&D F700UF 5.1 Multimedia Speaker System User Manual

Model: F700U

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your F&D F700UF 5.1 Multimedia Speaker System. Please read this manual thoroughly before using the product and retain it for future reference. Following these guidelines will ensure optimal performance and longevity of your speaker system.

2. SAFETY INSTRUCTIONS

- **Power Source:** Connect the speaker system only to an AC power source as indicated on the unit.
- **Ventilation:** Ensure adequate ventilation around the subwoofer and satellite speakers. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Keep objects filled with liquids, such as vases, away from the apparatus.
- **Heat Sources:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, flat surface to prevent it from falling.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Subwoofer Unit
- 5 x Satellite Speakers (4 Satellites + 1 Center Satellite)
- 1 x Remote Control
- 1 x Audio Input Cable (RCA to 3.5mm or RCA to RCA)
- 1 x User Manual

4. PRODUCT OVERVIEW



Image 1: F&D F700UF 5.1 Multimedia Speaker System components.

4.1. Main Unit (Subwoofer)

The subwoofer unit houses the main amplifier, control panel, and various input/output ports. It delivers powerful bass frequencies for an immersive audio experience.

4.1.1. Front Panel Controls and Indicators

- **ON/STANDBY Button:** Powers the unit on or off, or puts it into standby mode.
- **SOURCE Button:** Cycles through available input sources (FM, DVD, USB/SD, AUX).
- **NORMAL / PRO LOGIC / SOUND Buttons:** Selects different sound modes for audio processing.
- **VOLUME +/- Buttons:** Adjusts the overall master volume level.
- **Input Indicators:** LEDs for FM, DVD, USB/SD, AUX to show the currently selected source.

4.1.2. Side Panel Ports

- **USB Port:** For connecting USB flash drives to play audio files.
- **SD Card Slot:** For inserting SD memory cards to play audio files.

4.2. Satellite Speakers

The system includes five satellite speakers: two front, two rear, and one center. These speakers reproduce mid-range and high-frequency sounds, providing clear dialogue and surround effects.

4.3. Remote Control

The included remote control allows convenient operation of all functions from a distance, including power, volume, source selection, and sound modes.

5. SETUP

5.1. Speaker Placement

- **Subwoofer:** Place the subwoofer on the floor, preferably in a corner or near a wall for enhanced bass response.
- **Front Speakers (Left & Right):** Position these speakers on either side of your TV or listening area, facing towards you.
- **Center Speaker:** Place the center speaker directly above or below your TV, ensuring dialogue is clear and centered.
- **Rear Speakers (Left & Right):** Position these speakers behind your listening position, slightly to the sides, to create an immersive surround sound field.
- Ensure all speakers are placed on stable surfaces and are not obstructed.

5.2. Connections

1. **Connect Satellite Speakers:** Connect each of the five satellite speakers to the corresponding output terminals on the rear of the subwoofer unit. Ensure correct polarity (+ to + and - to -).
2. **Connect Audio Source:**
 - **AUX Input:** Use the provided audio cable to connect the AUX input on the subwoofer to the audio output of your MP3 player, PC, or mobile device.
 - **DVD Input:** Use RCA cables (not included) to connect the DVD input on the subwoofer to the audio output of your DVD player or TV.
3. **Power Connection:** Plug the subwoofer's power cord into a standard AC wall outlet.

6. OPERATION

6.1. Basic Controls

- **Power On/Off:** Press the **ON/STANDBY** button on the front panel or remote control to turn the system on or off.
- **Volume Adjustment:** Use the **VOLUME +** or **VOLUME -** buttons on the front panel or remote control to adjust the master volume.
- **Source Selection:** Press the **SOURCE** button on the front panel or remote control to cycle through available input modes: FM, DVD, USB/SD, AUX. The corresponding indicator LED will light up.
- **Sound Modes:** Use the **NORMAL**, **PRO LOGIC**, or **SOUND** buttons on the front panel or remote to select desired audio processing modes.

6.2. FM Radio Operation

1. Select FM mode using the **SOURCE** button.
2. The system will automatically scan and store available FM stations.
3. Use the remote control's channel buttons (if available) or seek functions to navigate between stored stations.

6.3. USB/SD Card Playback

1. Insert a USB flash drive or SD card into the respective slot on the side panel of the subwoofer.
2. Select USB/SD mode using the **SOURCE** button. The system will automatically detect and begin playing compatible audio files (MP3 format is supported).
3. Use the remote control for playback functions such as Play/Pause, Next Track, Previous Track.

7. MAINTENANCE

- **Cleaning:** Wipe the surfaces of the speakers and subwoofer with a soft, dry, lint-free cloth. Do not use abrasive

cleaners, waxes, or solvents.

- **Storage:** If storing the system for an extended period, disconnect it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Ventilation:** Regularly check that the ventilation openings on the subwoofer are clear of dust and debris.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty; Unit in standby.	Ensure power cord is securely plugged in; Test outlet with another device; Press ON/STANDBY button.
No sound	Incorrect source selected; Volume too low; Audio cables not connected properly; Mute function active.	Select correct input source; Increase volume; Check all audio cable connections; Deactivate mute.
Distorted sound	Volume too high; Poor audio source quality; Speaker cables loose.	Reduce volume; Try a different audio source; Check speaker cable connections.
Remote control not working	Batteries depleted; Obstruction between remote and unit; Remote not pointed at sensor.	Replace batteries; Remove obstructions; Point remote directly at the subwoofer's sensor.
Poor FM reception	Weak signal; Antenna not positioned correctly.	Adjust the position of the FM antenna; Try auto-scanning again.

9. SPECIFICATIONS

Feature	Description
Model Name	F&D F700UF
Speaker Type	Satellite, Subwoofer
Surround Sound Channel Configuration	5.1
Compatible Devices	MP3 Player, Television (via AUX/DVD input)
Subwoofer Diameter	5 Inches
Tweeter Diameter	1 Inches
Power Source	AC
Control Method	Remote
Wireless Communication Technology	FM Radio
Connectivity Technology	Wired (for speakers), Auxiliary (for input)
Material	Wood (Subwoofer cabinet)
Item Weight	6.81 kg (approximately)

10. WARRANTY AND SUPPORT

The F&D F700UF 5.1 Multimedia Speaker System typically comes with a **1-year limited warranty** from the date of purchase.

This warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact F&D customer service or your authorized dealer. Contact information can usually be found on the manufacturer's official website or on the product packaging.