

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Craig](#) /

> [Craig Portable Rechargeable Digital Mini Tower FM Stereo Radio and USB/SD Slot \(CR4189\) - Instruction Manual](#)

Craig CR4189

Craig Portable Rechargeable Digital Mini Tower FM Stereo Radio and USB/SD Slot

Model: CR4189

INTRODUCTION

The Craig CR4189 is a versatile portable audio system designed for convenient music playback and FM radio reception. It features a built-in rechargeable battery, USB and SD card slots for MP3 playback, and an auxiliary input for connecting external audio devices. Its compact tower design and integrated carry handle make it ideal for use in various settings.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Craig CR4189 Portable Digital Mini Tower
- USB Charging Cable
- 3.5mm Aux-in Cable
- Remote Control (requires 1x CR2025 battery, included)
- Instruction Manual (this document)

CRAIG®



Figure 1: Included Accessories. This image displays the main unit alongside its USB charging cable, 3.5mm auxiliary input cable, and the remote control.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Craig CR4189 unit.





Figure 2: Overall Product View. This image shows the Craig CR4189 unit from the front, with the remote control placed in front of it.

CRAIG®

Built-In Rechargeable Battery

Mini-Tower Speaker

FM Stereo Radio

Digital Volume Control

LED Display



Figure 3: Front Panel Features. This diagram highlights key components such as the mini-tower speakers, LED display, digital volume control, and indicates the built-in rechargeable battery and FM stereo radio capabilities.

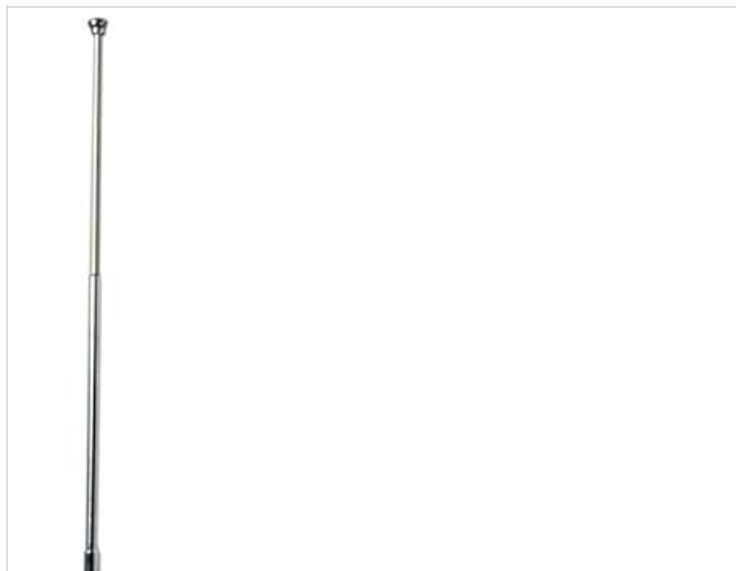




Figure 4: Top Panel and Antenna. This image shows the top of the unit with the extendable rod antenna fully raised, used for FM radio reception.



CRAIG®

MODEL NO.: CR4189

DIGITAL MINI TOWER with USB/SD Slot
Power Source: Built-in DC 3.7V, 1200mAh (4.4WH) rechargeable LI-Ion Battery,
recharge by DC 5V through the DC 5V (Micro USB) Port
Radio Frequency: 87.5-108MHz
Craig Electronics Inc.
P.O. Box 694659 Miami, Florida 33269, U.S.A.

MADE IN CHINA

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES OPERATION IS SUBJECT TO THE
FOLLOWING TWO CONDITIONS:
1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE
THAT MAY CAUSE UNDESIRE OPERATION.

For customer service e-mail: service@craigelectronics.com

MANUFACTURED DATE: JAN 2019



Figure 5: Bottom Panel Information. The bottom of the unit displays the product label, which includes the model number (CR4189), power specifications, and regulatory compliance details.

SETUP

1. Charging the Battery

Before first use, fully charge the built-in rechargeable battery. Connect the supplied USB charging cable to the unit's charging port and the other end to a standard USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status.

2. Inserting USB/SD Card

To play MP3 files from a USB flash drive or SD card, gently insert the storage device into the corresponding slot on the unit. Ensure the device is inserted correctly to avoid damage.

3. Connecting Aux-in Device

To play audio from an external device (e.g., smartphone, MP3 player), connect one end of the supplied 3.5mm Aux-in cable to the unit's AUX IN jack and the other end to the headphone jack or audio output of your external device.

4. Extending the Antenna

For optimal FM radio reception, fully extend the telescopic rod antenna located on the top of the unit.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button on the unit or remote control to turn the unit on or off.

2. Mode Selection

Press the **MODE** button on the unit or remote control to cycle through available modes: FM Radio, USB, SD, and AUX.

3. FM Radio Operation

- Ensure the antenna is extended.
- Select FM mode using the **MODE** button.
- Press the **PLAY/PAUSE** button to auto-scan and save available FM stations.
- Use the **PREVIOUS/NEXT** buttons to navigate between saved stations or manually tune.

4. USB/SD Playback

- Insert a USB flash drive or SD card with MP3 files.
- Select USB or SD mode using the **MODE** button. Playback should begin automatically.
- Use the **PLAY/PAUSE** button to pause or resume playback.
- Use the **PREVIOUS/NEXT** buttons to skip tracks.

5. AUX Input Playback

- Connect your external audio device to the AUX IN jack.
- Select AUX mode using the **MODE** button.
- Control playback directly from your connected external device.

6. Volume Control

Adjust the volume using the **VOLUME +/-** buttons on the unit or the remote control.

7. Using the Remote Control

The included remote control provides convenient access to all functions from a distance. Ensure the remote control's battery (CR2025) is properly installed and functional. Point the remote control towards the unit's IR sensor.

MAINTENANCE

Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid spraying liquids directly onto the unit.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the unit regularly, especially if it will not be used for an extended period. Store the unit in a cool, dry place.

Storage

When storing the unit, ensure it is turned off and disconnected from power. Keep it away from extreme temperatures, dust, and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Battery is discharged.	Connect the unit to a power source using the USB charging cable and allow it to charge.
No sound.	Volume is too low or muted. Incorrect mode selected. Aux cable not fully inserted.	Increase the volume. Ensure the correct mode (FM, USB, SD, AUX) is selected. Check that the Aux cable is securely connected at both ends.
Poor FM reception.	Antenna not extended. Weak signal.	Fully extend the rod antenna. Try repositioning the unit to improve signal reception.
USB/SD playback not working.	Incorrect file format (only MP3 supported). USB/SD card not inserted correctly or corrupted.	Ensure files are in MP3 format. Reinsert the USB/SD card. Try a different USB/SD card.

Problem	Possible Cause	Solution
Remote control not working.	Battery is dead or incorrectly inserted. Obstruction between remote and unit.	Replace the CR2025 battery. Ensure there is a clear line of sight to the unit's IR sensor.

SPECIFICATIONS

Model Number	CR4189
Brand	Craig
Color	Black
Connectivity Technology	USB, Aux-in
Audio Output Mode	Stereo
Speaker Type	Stereo
Power Source	Battery Powered (Built-in rechargeable battery)
Product Dimensions (L x W x H)	4.8 x 5.51 x 10.2 inches (approx.)
Item Weight	2.05 pounds (approx.)
Supported Media	USB Flash Drive, SD Card (MP3 playback)
Radio Frequency	FM Stereo

CRAIG®

5.25 in. W

9.5 in. H

4.5 in. D



Figure 6: Product Dimensions. This image illustrates the approximate height, width, and depth of the unit.

WARRANTY AND SUPPORT

Craig Electronics products are designed and manufactured to the highest quality standards. For specific warranty information and customer support, please refer to the warranty card included with your product or visit the official Craig Electronics website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or service inquiries, you may contact Craig Electronics customer support. Contact details are typically available on the manufacturer's website or on the product packaging.

© 2023 Craig Electronics. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

