

Lorus LHL027S

Lorus Clocks LCD Bedside Alarm Clock LHL027S Instruction Manual

Model: LHL027S

INTRODUCTION

Thank you for purchasing the Lorus Clocks LCD Bedside Alarm Clock LHL027S. This digital alarm clock features an LCD display, a color-changing bezel, an ascending beep alarm, snooze function, and a calendar display. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance of your device.

PRODUCT OVERVIEW AND FEATURES

The Lorus LHL027S is designed for convenience and functionality, offering several key features:

- **LCD Display:** Clear digital time and date display.
- **Color-Changing Bezel:** The light surrounding the face changes color when the alarm sounds. Seven selectable light colors are available, including red, green, and blue.
- **Ascending Beep Alarm:** Alarm sound gradually increases in volume.
- **Auto Stop Function:** Alarm automatically stops after a set duration.
- **Snooze Function:** Temporarily silences the alarm for a short period.
- **Calendar Display:** Shows the current date.
- **Battery Powered:** Operates on 3 AA batteries (not included).
- **Compact Design:** Dimensions of approximately 9 x 10.1 x 8.2 cm (3.98"W x 3.23"H).



Front view of the Lorus LHL027S alarm clock displaying time and date with a green backlight.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert three (3) AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. **Note: Batteries are not included.**
4. Close the battery compartment cover securely.



Rear view of the Lorus LHL027S alarm clock, highlighting the battery compartment and control buttons for setup.

2. Setting Time and Date

Refer to the control buttons on the back of the clock (SET, +, -).

1. Press and hold the **SET** button until the time display starts flashing.
2. Use the **+** or **-** buttons to adjust the hour.
3. Press **SET** again to move to minutes, then use **+** or **-** to adjust.
4. Continue pressing **SET** to cycle through year, month, and day settings, adjusting each with **+** or **-**.
5. Press **SET** one last time to confirm all settings and exit the setting mode.

3. Setting the Alarm

1. From normal time display, press the **SET** button once briefly to enter alarm setting mode. The alarm time will flash.
2. Use the **+** or **-** buttons to adjust the alarm hour.
3. Press **SET** again to move to alarm minutes, then use **+** or **-** to adjust.
4. Press **SET** one last time to confirm the alarm time.
5. To activate/deactivate the alarm, press the **SET** button briefly when the alarm time is displayed, or use a

dedicated alarm ON/OFF button if present. An alarm icon will appear on the display when activated.

4. Selecting Bezel Color

The clock features a color-changing bezel. To select a static color or cycle through colors:

1. Locate the **COLOUR SELECT** button on the back of the clock.
2. Press the **COLOUR SELECT** button repeatedly to cycle through the seven available colors (red, green, blue, etc.) or to set it to a color-changing mode.
3. Release the button when your desired color or mode is displayed.



The clock displaying time with a green bezel light (left) and a blue bezel light (right).



The clock displaying time with a red bezel light (left) and a darker blue bezel light (right).



The clock displaying time with a purple bezel light.

OPERATING INSTRUCTIONS

1. Time and Date Display

The current time and date are continuously displayed on the LCD screen. The format typically includes hour, minute, day of the week, and date.

2. Alarm Function

- When the alarm sounds, the bezel light will change colors.
- To silence the alarm temporarily, press the **SNOOZE/LIGHT** button located on the top of the clock. The alarm will sound again after approximately 5-10 minutes (duration may vary).
- To turn off the alarm completely, press any other button (e.g., **SET**, **+**, **-**, or the dedicated alarm ON/OFF button if present). The alarm will reset for the next day.
- The alarm features an auto-stop function, meaning it will cease sounding after a certain period if not manually turned off or snoozed.

3. Backlight / Snooze Button

Press the large button on the top of the clock (labeled SNOOZE/LIGHT) to temporarily illuminate the display or activate the snooze function when the alarm is sounding.

MAINTENANCE

1. Battery Replacement

When the display dims or the clock functions become erratic, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all three AA batteries at the same time with new ones.

2. Cleaning

To clean the clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the casing or display. Avoid getting moisture into any openings.

3. Storage

If the clock will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

- **Display is blank or dim:**

Check if batteries are installed correctly. Replace with fresh AA batteries. Ensure battery compartment cover is securely closed.

- **Alarm does not sound:**

Verify that the alarm is activated (alarm icon visible on display). Ensure the alarm time is set correctly. Check battery level.

- **Incorrect time or date:**

Follow the "Setting Time and Date" instructions to reset the time and date. If the issue persists after battery replacement, perform a reset.

- **Buttons are unresponsive:**

Try removing and reinserting the batteries. If a **RESET** button (often a small recessed button requiring a pin) is present on the back, press it once to reset the unit to factory defaults. You will need to re-enter time and alarm settings.

SPECIFICATIONS

Brand	Lorus
Model Number	LHL027S
Display Type	Digital LCD
Power Source	Battery Powered (3 x AA batteries, not included)
Special Features	Alarm, Snooze, Calendar, Color-Changing Bezel Light
Product Dimensions	3.98"W x 3.23"H (approximately 9 x 10.1 x 8.2 cm)
Material	Plastic (Acrylonitrile Butadiene Styrene frame)
Item Weight	7.7 ounces
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

This Lorus Clocks product is covered by a manufacturer's warranty. Please refer to the warranty information provided with your purchase for specific terms and conditions. For technical support or service inquiries, please contact your retailer or the official Lorus customer service channels. Specific contact details are typically found on the product packaging or the manufacturer's official website.

